
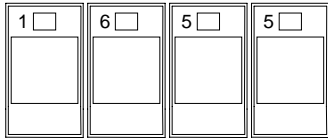




# M2000/M100B Sound Reduction

Follow the instructions below to reduce the sound output from a fryer equipped with an M2000 computer.

1. Computer displays OFF.
2. Press .
3. code shows in the left display.



4. Press (1655).
5. VOLUME appears in the left display; HIGH or LOW in the right.
6. Press  to toggle between high and low-volume warning sounds.
7. With preferred setting in right display, press  to lock in choice.
8. Continue to press the checkmark key until the computer displays OFF.

**Note:** Combining a sound-device lead placement change with the sound reduction programming change in the M2000 may reduce the volume beyond a desirable level.

## For M100B Computers

The sound volume on fryers equipped with an M100B is reduced by changing the placement of the sound-device lead on the fryer interface board. Follow the instructions below to lower the sound output.

1. Remove power from the fryer.
2. Remove the screws holding the computer bezel in place.
3. Lower the computer.
4. Locate the circuit board in the control box behind the computer. See figure 1. Locate the terminals labeled Sound in the top left corner. See figure 2.
5. Carefully remove the terminal from the position labeled 1 and place it on the 2 position.


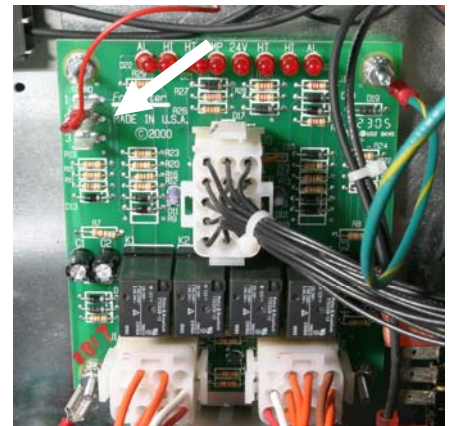


Figure 1

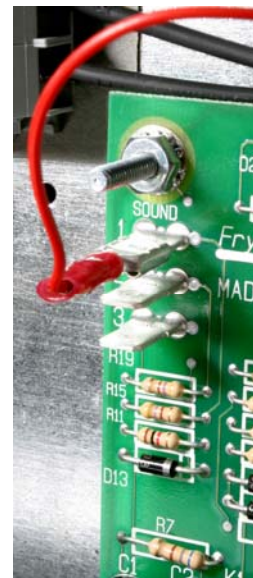

Moving the placement of the sound lead (arrow above) on the interface board will lower the volume of the sound device. Position 3 may not produce sufficient volume.

Figure 2