

Clearing Rec Lock on a M100B Computer

Rec Lock is often caused by adding cool oil while the fryer is between 270° and 320°F in its initial warm up. The computer monitors the rise in oil temperature after reaching 270°F. If a 50°F rise in oil temperature does not occur within 2 minutes, 35 seconds (2:35), the computer will shut down the system. Below is the procedure for clearing Rec Lock.

Clearing REC-LOCK



Computer in REC LOCK

STEP 1



The first step in clearing REC LOCK is to turn the computer OFF by pressing the  switch.

STEP 2



Enter the programming mode by pressing and releasing ①, ② and  switches simultaneously. The computer will display its model number and then FR FRIES YES.

STEP 3



Press the  switch. REC LOCK is cleared.