

INSTALLATION INSTRUCTIONS FOR ANCHOR STRAP KITS 8261095 AND 8261254 AND CHAIN RESTRAINT KIT 8260900

1. Position the fryer under the exhaust hood.
2. On fryers with legs, adjust the fryer to the desired height after it is under the hood.
3. On fryers with casters, lock the front casters.
4. Remove the outside front mounting bolt from each of the front legs or casters.
5. Attach one end of the anchor strap or the upper end of the chain restraint (the end with the straight link) to the leg or caster with the bolt removed in Step 4.
6. Secure the lower end of the anchor strap or chain restraint to the floor using an appropriate fastener.

