


# 16.00" WIDE SIDE FILTER MAGIC CASTER AND LEG INSTALLATION INSTRUCTIONS (SEE 819-5245 FOR LOCATING INSTRUCTIONS)

1. Remove unit from pallet.
2. Carefully raise unit with forklift. (If forklift is not available, carefully lay the unit on its back, placing blocks underneath to protect the gas line and remote computer connectors.)
3. Install casters or legs in the locations indicated on instruction sheet 819-5245.
4. Lower or return unit to upright position.

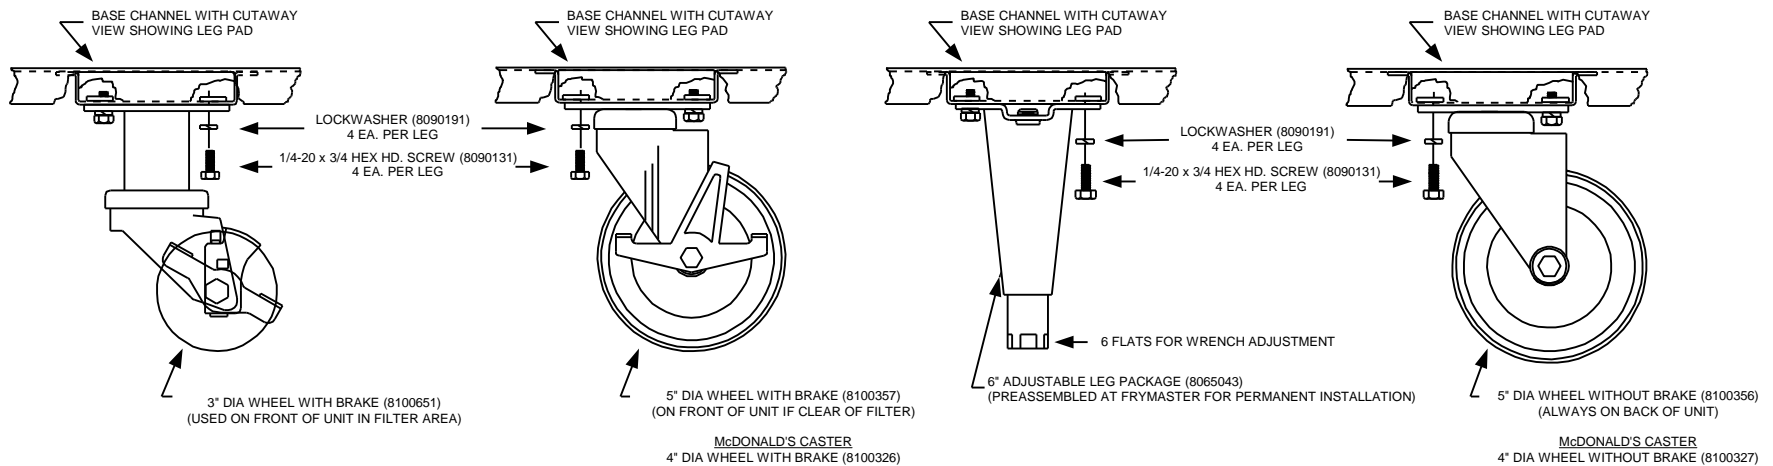

NOTE: WHETHER INSTALLING CASTERS OR LEGS, ALWAYS USE FOUR EACH 1/4-20 X 3/4 HEX HEAD SCREWS (8090131) WITH FOUR EACH LOCKWASHERS (8090191) FOR EACH CASTER OR LEG ASSEMBLY, AND TORQUE EACH SCREW TO 50 INCH-POUNDS MINIMUM. SEE DIAGRAMS ABOVE FOR PROPER LOCATION OF LOCKWASHERS.