


CF SERIES CASTER AND LEG INSTALLATION INSTRUCTIONS

(SEE 819-5400 FOR CASTER/LEG LOCATIONS)

1. Remove unit from pallet.
2. Carefully raise unit with forklift. (If forklift is not available, carefully lay the unit on its back, placing blocks underneath to protect the gas line and remote computer connectors.)
3. Install casters or legs in the locations indicated on instruction sheet 819-5400.
4. Lower or return unit to upright position.

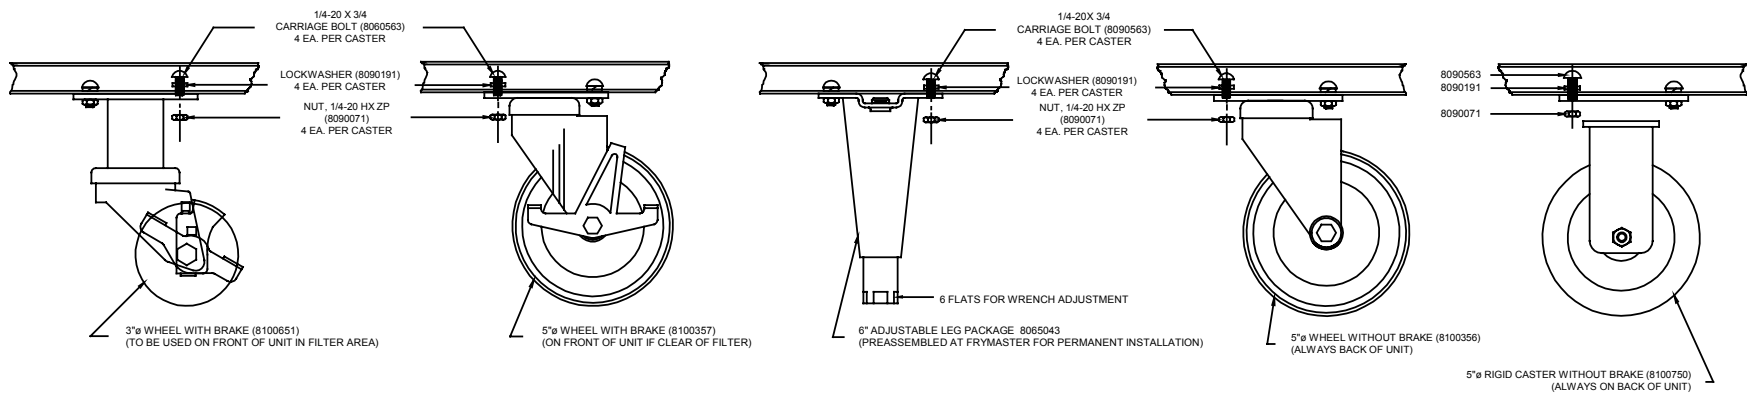

NOTE:

WHETHER INSTALLING CASTERS OR LEGS ALWAYS USE 4 EA. 1/4-20 X 3/4 CARRIAGE BOLTS (8090563) WITH 4 EA. LOCKWASHERS (8090191) FOR EACH CASTER OR LEG ASSEMBLY AND TORQUE EACH NUT TO 50 INCH LBS. MINIMUM. SEE ABOVE DIAGRAMS FOR PROPER LOCATION OF LOCKWASHER.

* 8195399 * APR 1999