


COMMON ELECTRIC FILTER MAGIC/UNDER COUNTER CASTER AND LEG INSTALLATION INSTRUCTIONS

1. Remove the unit from its pallet and carefully raise the unit with a forklift to gain access to the leg pads. (If no forklift is available, carefully lay the unit on its back, placing blocks underneath to protect projecting components.)
2. Install casters/legs in the locations indicated in the diagrams at the bottom of the page. **NOTE:** Whether using casters or legs, always use four 1/4-20 x 3/4 hex head screws (8090131) and lockwashers (8090191) for each caster or leg. Torque each screw to 50 inch lbs. minimum.
3. Carefully lower the unit (or return it to the upright position).

Lockwasher (8090191) and 1/4-20 x 3/4 hex head screw (8090131).

Four of each are required for mounting items B through E.

This portion of caster is inserted into the bottom of the front filter leg at the locations shown in the diagrams below.

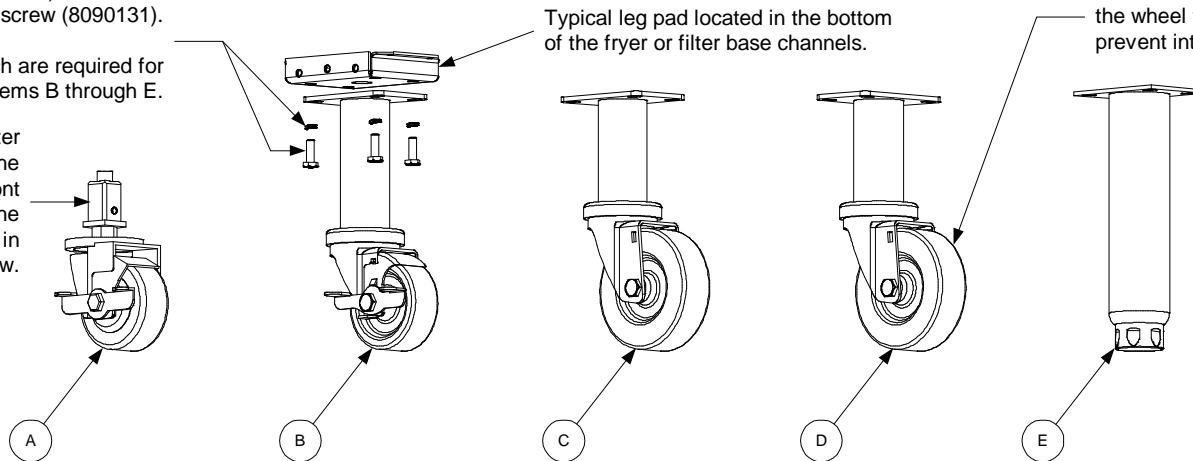

NOTE: When installing Item D, ensure the wheel faces the **REAR** of the unit to prevent interference with the filter.

NOTE: If the legs-only option is desired, install one of item E at each location shown for items B, C, and D in the diagrams below.

- A = CASTER W/BRAKE, 3" FILTER LEG (8232844)
- B = CASTER W/BRAKE, 3" WHEEL WITH MOUNTING HARDWARE (8261272)
- C = CASTER W/O BRAKE, 4" WHEEL, SWIVEL WITH MOUNTING HARDWARE (8261611)
- D = CASTER W/O BRAKE, 4" WHEEL, RIGID WITH MOUNTING HARDWARE (8261612)
- E = 8.5" LEG W/MOUNTING HARDWARE (8261234)

		D	C
		FILTER	2
		A	B
	D	C	C
	FILTER	2	4
	A	B	B
D	C		C
FILTER	2	4	6
A	B		B

		C	D
		1	FILTER
		B	A
	C	C	D
	3	1	FILTER
	B	B	A
C		C	D
5	3	1	FILTER
B		B	A

C		D	D	C
3		FILTER		2
B		B		B
C	D	D		C
1	FILTER	2		4
B	B	B		B
C	D	D	C	
1	FILTER	2		
B	B	B	B	