



INSTALLATION INSTRUCTIONS FOR SECURITY KITS 826-1014, 826-1044, AND 826-1488

Security Kit 826-1488 shown
installed on an H114 Common
Electric Fryer


This illustration is also typical of
the appearance of Kits 826-1014
and 826-1044.

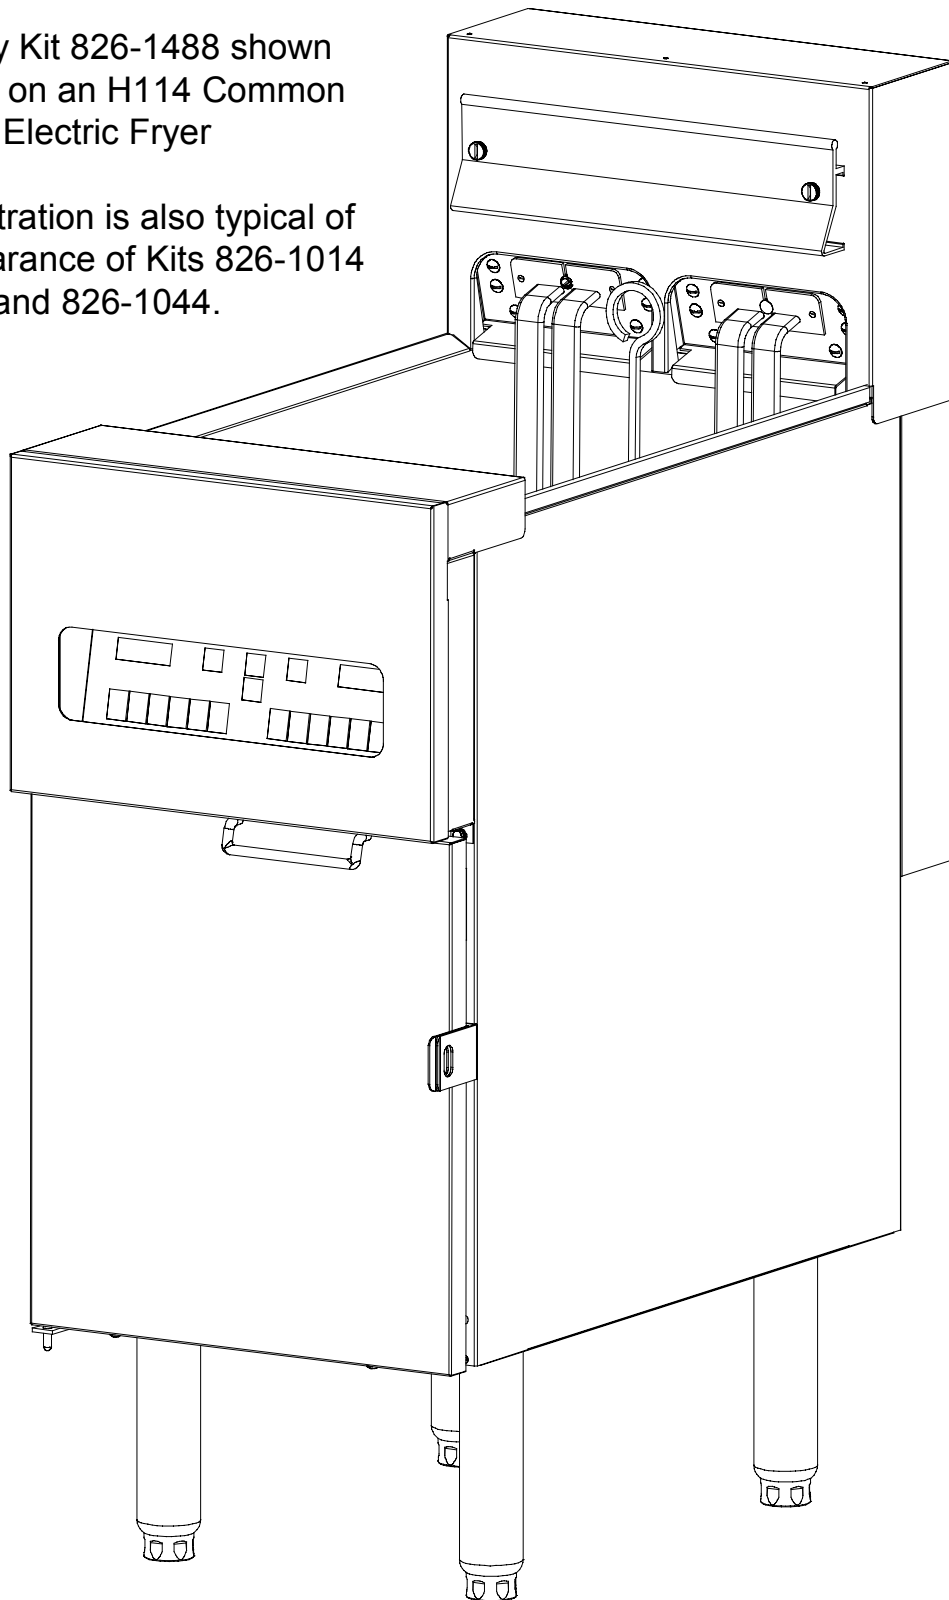


Step 1:
Center the cover over the control panel with the hinge down and the cover resting on the topcap, as shown in Fig. 1. Mark the location of the hinge-mounting holes on the topcap, remove the cover, and drill the holes using a 9/32-inch bit. Mount the cover using two of the screws provided in the kit.

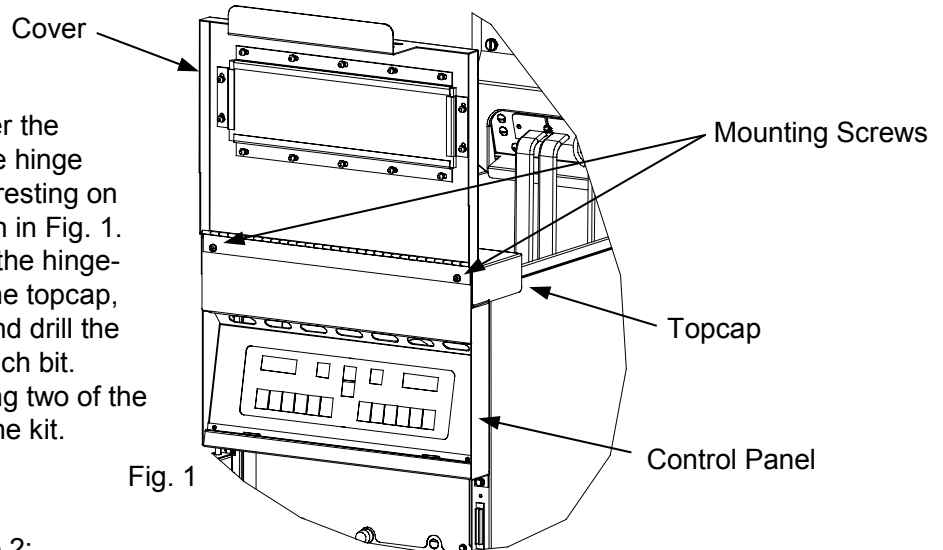


Step 2:
Position the cabinet hasp on the right side panel as shown in Fig 2 (on batteries of fryers, position the hasp on the door post). Mark the hole locations, drill 9/32-inch mounting holes, and attach the hasp using two of the screws provided in the kit.

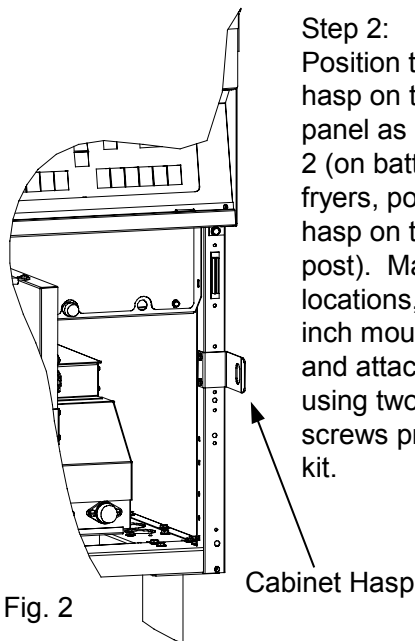

Step 3:
Position the door hasp on the door so that the hole in the door hasp aligns with the hole in the cabinet hasp. Mark the hole locations, drill 9/32-inch mounting holes, and attach the hasp using two of the screws provided in the kit.

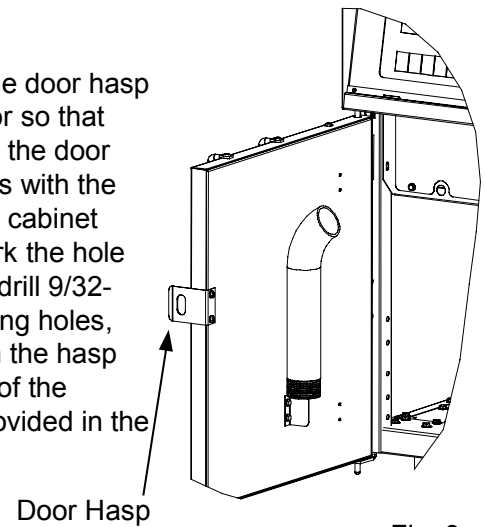

Step 4:
Remove the door and position the inner door retainer on the left side panel as shown in Fig 4 (on batteries of fryers, position the retainer on the same side as the door is hinged). Mark the hole locations, drill 9/32-inch mounting holes, and attach the retainer using two of the screws provided in the kit.

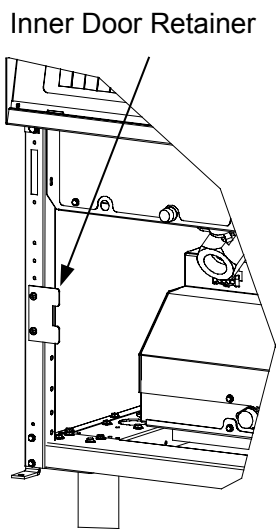

Step 5:
Replace the door and center the outer door retainer on the inner door retainer as shown in Fig 5. Mark the hole locations, drill 9/32-inch mounting holes, and attach the retainer using two of the screws provided in the kit.

