
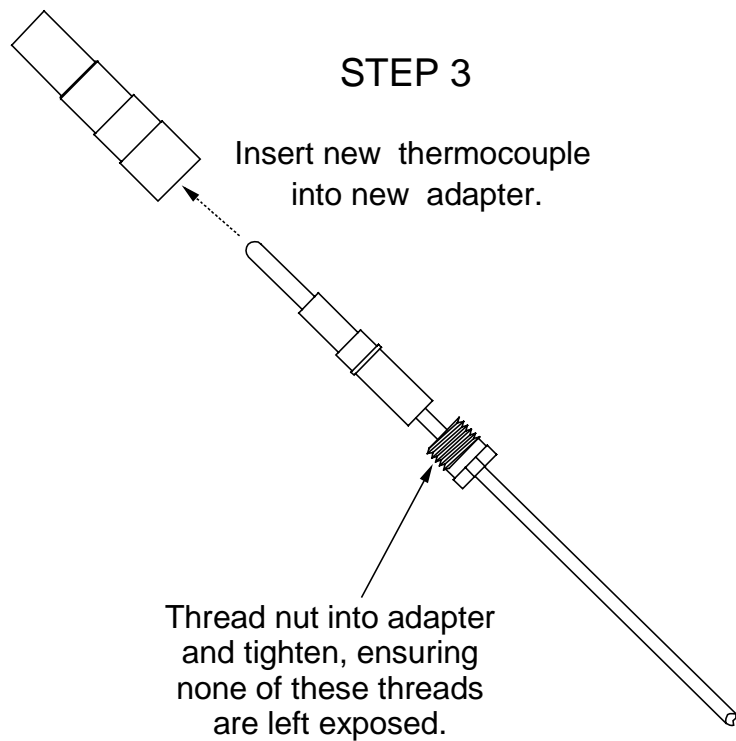


# THERMOCOUPLE ADAPTER KIT 826-1527 INSTALLATION INSTRUCTIONS

1. Disconnect the thermocouple from the gas valve.
2. Loosen the screw securing the adapter into the pilot assembly (*item 1*). Remove the thermocouple/adapter assembly (*item 2*) and discard.

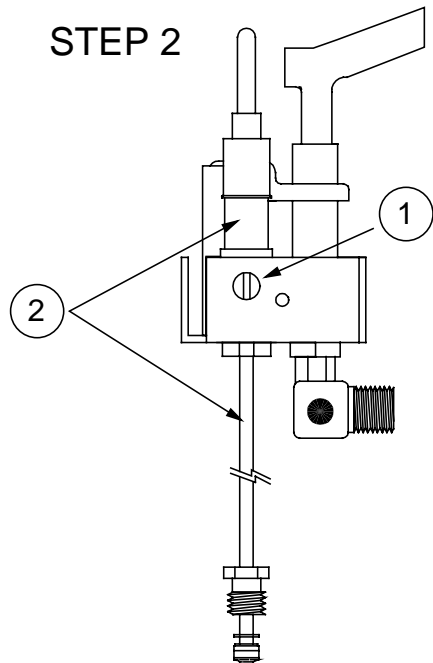

3. Fit the new thermocouple into the new adapter, ensuring that the thermocouple nut is fully screwed into the adapter *with no thread showing*.
4. Reverse steps 1 and 2 to install the new thermocouple/adapter assembly.
5. Adjust the pilot flame screw on the gas valve to optimize the thermocouple millivolt output.