


## Installing Outlet Plugs on Common Electric Fryers, Kit 826-1616

To install moisture/debris resistant plugs in the outlet ports on the back of Common Electric fryers, follow these instructions:

- Remove power from unit.
- Pull fryer away from hood structure to gain access to back.
- Remove grommet material in outlet ports.
- Insert provided plugs, allowing power cord to rest in the circular opening in the keyhole slot.
- Install bushing on powercord and push into place in keyhole slot.
- Install small plug in outlet port with no powercord.




Fryer back with grommets in place. These grommets are to be removed. Plugs are provided for all access ports.

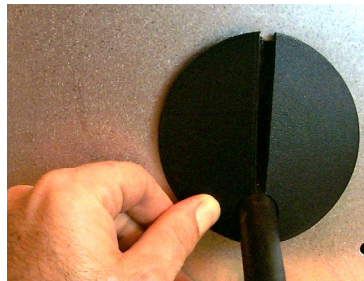

Fit the plug over the powercord and slide into place, ensuring the plug is flush against the sheetmetal.



Fit the bushing over the cord and slide into place, flush with the new plug.

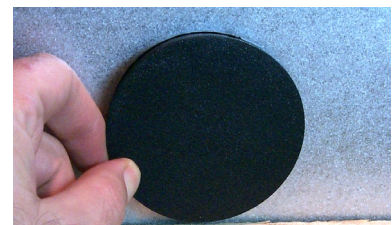

A small plug is provided to fill the access port, which has no powercord running through it. It is merely pressed into place.