


Dean Sealed Switch Retrofit Kit (826-1883) Installation Instructions

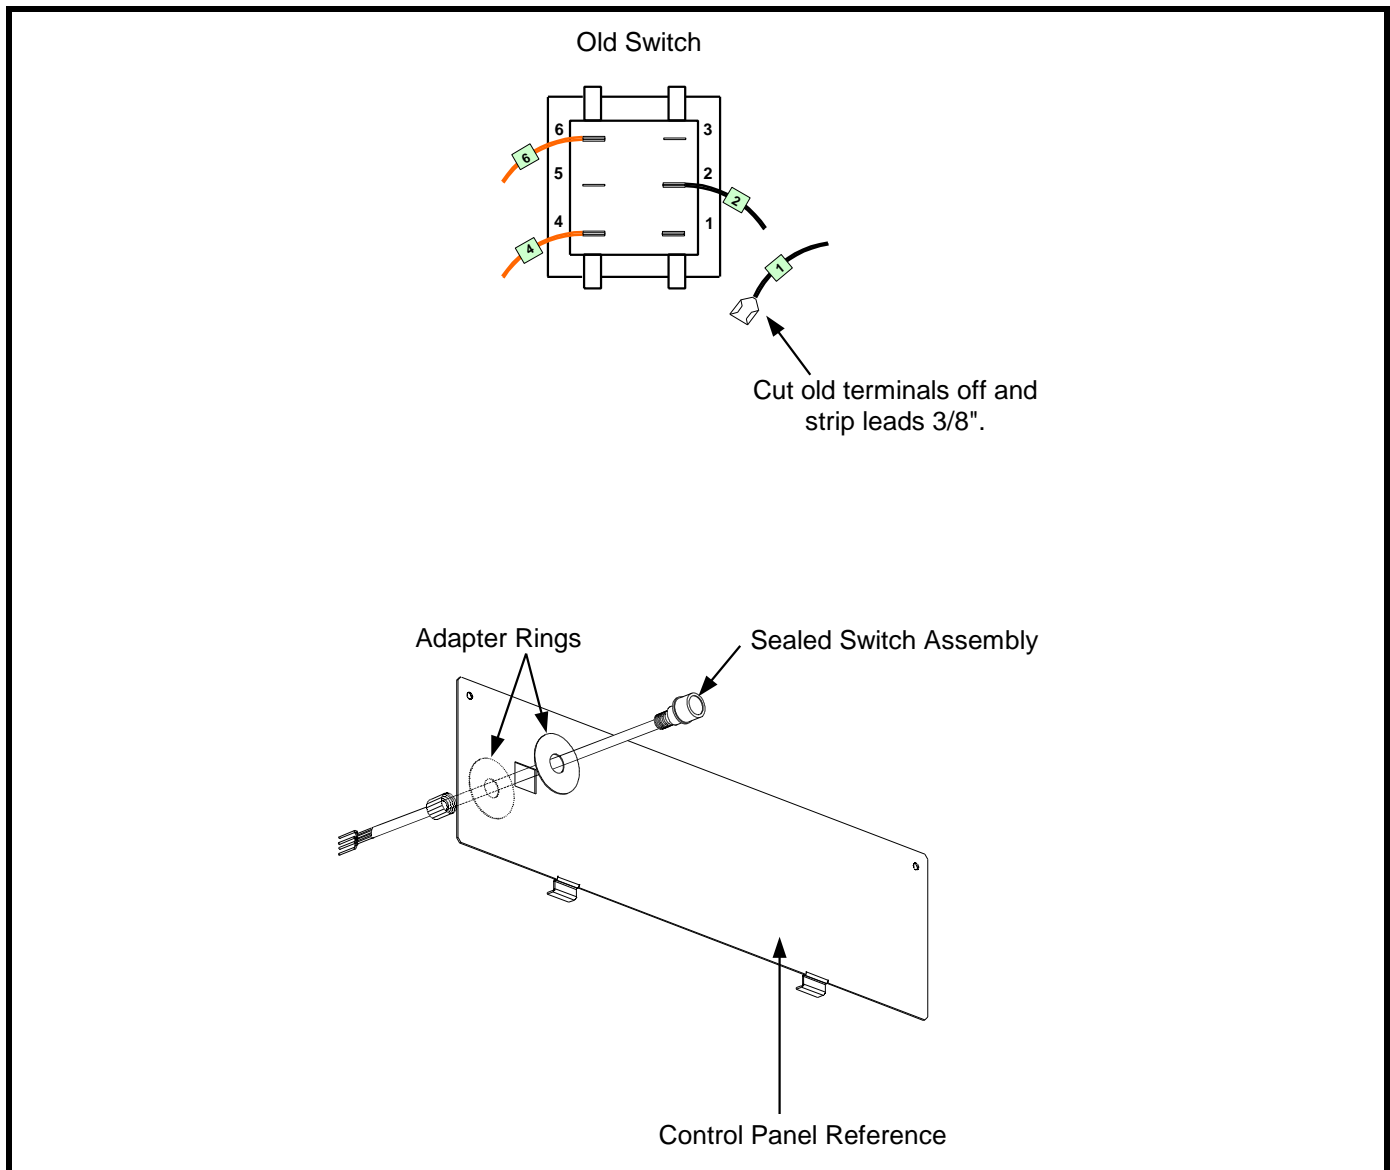

The sealed switch assembly (Part # 807-3755) is used to replace damaged or defective rocker switches on older Dean fryers. Disconnect fryer from power source. Remove the control panel to gain access to the old switch and install the sealed switch assembly as follows:

Mark wires with their respective numbers if wires are not marked (use the old switch for reference). Cut off old terminals and strip wires 3/8". Mount the sealed switch assembly into the control panel as illustrated above. Using wire nuts provided, splice wires marked #1 and #2 to the corresponding black leads on the sealed switch assembly. Splice wires marked #4 and #6 to the corresponding orange leads on the sealed switch assembly. Replace control panel and install screws. Reconnect fryer to power. Fryer is ready for operation.