



SERVICE FRYPOT CONFIGURING INSTRUCTIONS

This service frypot comes with a package containing either two or four ½-inch NPT plugs and a small tube of Loctite™ 567 sealant.


The pipe plugs and sealant are used to close unused openings in the frypot. If the frypot is to be configured for use with a Power Shower oil return, the rear opening(s) at the bottom of the frypot must be closed. If the frypot is to be configured for use with a rear flush oil return, the uppermost opening(s) on the front of the frypot must be closed. Apply a coating of Loctite™ sealant to the threads of each plug and screw it into the appropriate opening until the face of the plug is flush with the fitting on the frypot or until torque is 40 (± 10) lbf/ft or 54 (± 13.5) Nm. Refer to the illustrations below for the plug locations.

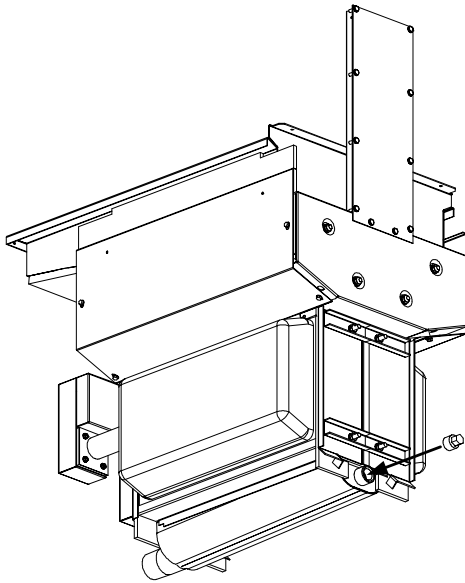


On full-vat frypots for use with POWER SHOWER, install plug in rear opening of frypot as shown above.

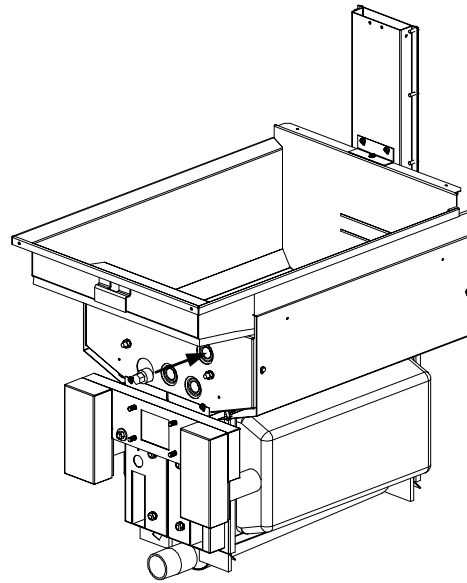

On full-vat frypots for use with REAR FLUSH, install plug in front opening of frypot as shown above.

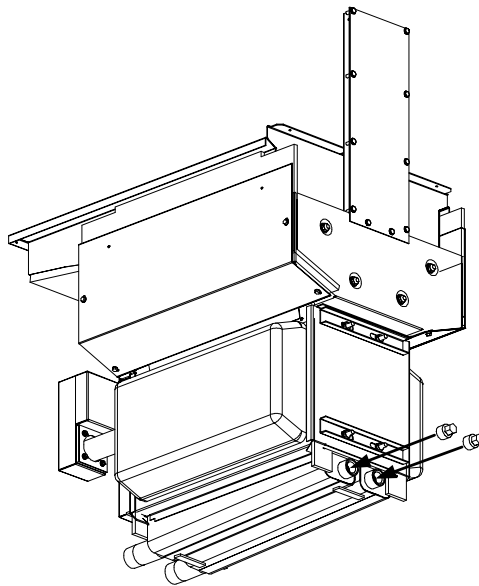

On dual-vat frypots for use with POWER SHOWER, install plugs in rear openings of frypot as shown above.

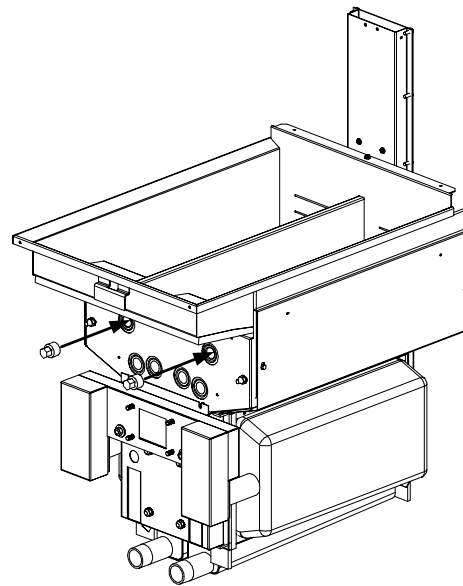

On dual-vat frypots for use with REAR FLUSH, install plugs in front openings of frypot as shown above.