


Operating Thermostat Dial-Spring Installation Instructions (Kit 826-2007)

IN KIT 826-2007		
Part No.	Quantity	Description
200-6107	1	Dial Spring
809-0093	1	Mounting Screw
819-6009	1	Instructions

Installing a thermostat dial spring increases thermostat dial stability. Before installing the dial spring, ensure the gas valve and thermostat dial is OFF. To install the dial spring:

Ensure the fryer is OFF. Remove thermostat dial from the thermostat shaft. Remove the top slotted-screw securing the thermostat to the mounting plate (arrow).

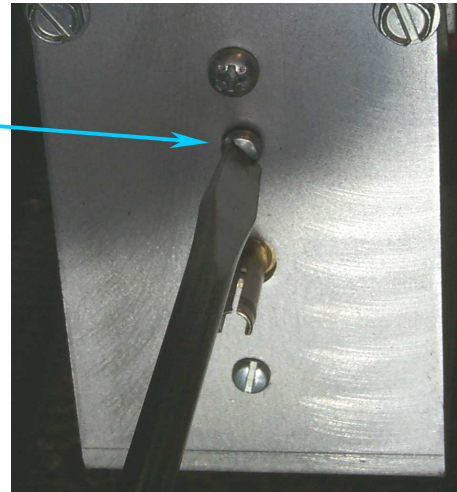

Install the spring over thermostat shaft as shown (arrow). Install the counter-sink screw included with the spring. Tighten the screw, ensuring the spring is positioned as illustrated (arrow).

Replace the thermostat dial.
Return the fryer to operation.

