



PRO SERIES GAS AND ELECTRIC FRYER CASTER/LEG LOCATING INSTRUCTIONS


FRYMASTER GAS

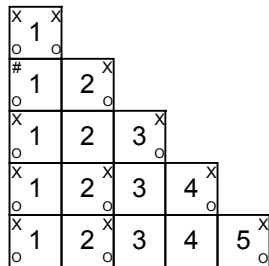


McDONALDS GAS

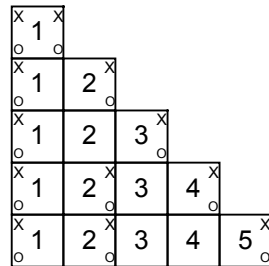


FRYMASTER ELECTRIC

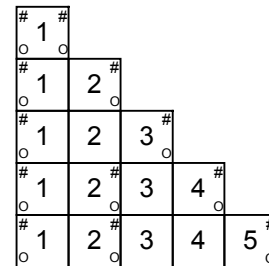

McDONALDS ELECTRIC

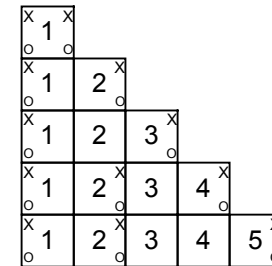

FRYMASTER GAS BATTERED

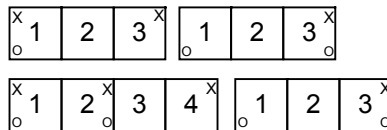

FRYMASTER ELEC BATTERED



X = 4" ADJUSTABLE CASTER W/O BRAKE (P/N 8100327)
 O = 4" ADJUSTABLE CASTER W/BRAKE (P/N 8100326)
 # = 4" FIXED CASTER W/O BRAKE (P/N 8101494)

OPTIONAL LEGS (P/N 8101234) ARE MOUNTED IN THE SAME LOCATIONS AS CASTERS.

NOTES:

- THIS SCHEMATIC APPLIES TO THE FOLLOWING PRODUCT LINES:
 FMPH50, FPPH50, PH50
 BIPH52, MPH52
 FMPH14/17/22, FPPH14/17/22, PH14/17/22
 BIPH14, MPH14
- STATIONS ARE NUMBERED LEFT TO RIGHT AS VIEWED FROM THE FRONT OF THE UNIT.
- IN FPPH/PH AND BIPH/MPH UNITS, ALL STATIONS ARE FRYERS; IN FMPH UNITS, A HOLDING STATION IS LOCATED IN ONE OF THE POSITIONS (E.G., AN FPPH350 HAS THREE FRYERS [3 STATIONS]; AN FMPH350 HAS THREE FRYERS AND A HOLDING STATION [4 STATIONS]).
- IN ALL UNITS WITH FILTERS, THE FILTER IS LOCATED UNDER STATIONS 1 AND 2.

* 8196050 * JUN 2004