

826-2131, Basketlift Roller Bracket Replacement



- Remove the basketlift arms by lifting up.
- Remove the existing basketlift roller assembly by removing the bolts just under the rollers.
- Position the new basketlift roller assembly (806-9257), with the rollers down (as shown in the illustration above) and fasten to the flue with the existing screws.
- Reinstall the basketlift arms, carefully placing them on top of the roller and behind the tab just above the roller.
- Operate the basketlift to ensure the basketlift rods don't bind.