

826-2432, Heat Lamp Switch Kit

Follow these instructions to replace a heat lamp rocker switch with a toggle switch.

1. Remove power from the heat lamp assembly.
2. Remove the face plate from the existing switch box, remove wiring from the switch and remove the outlet box and the supporting bracket.
3. Attach the new switch to the new face plate with the threads extended (as shown below). The terminals of the switch must clear the outlet box with room to attach the provided flag terminals.
4. Remove the terminals from the existing wiring and crimp on the provided flag terminals.
5. Attach the wiring to the switch and attach the face plate to the outlet box. Apply the ON/OFF decal.
6. Position the new support bracket for the outlet box deep enough in the cabinet to allow the door to close without striking the toggle switch.

In 826-2432		
Part No.	Description	Qty
220-1705	Cover	1
802-1444	Decal	1
807-1041	Switch	1
220-1703	Mount bracket	1
819-6216	Instructions	1
807-0706	Flag terminal	3

Ensure the threads of the toggle switch are fully extended above the switch plate.



Adequate space must be left to attach the flag terminals.

Setting the switch too deep in the box, grounds the switch terminals against the box interior.

