

HLZ Platen Seam Cover Kit, 826-2439, 826-2440

Follow these instructions to install platen seam covers on an HLZ.

1. Remove power from the HLZ and allow it to cool.
2. Remove the air tower by loosening the screws inside the tower recess. See figure 1.
3. Remove the control tower by removing the five screws securing it on the bottom of the HLZ.
4. Position the seam cover strips. The notch goes toward the control tower. See figures 2 and 3.
5. Reassemble the HLZ and return to service.

| In Kit 826-2439, 22" | | |
|----------------------|--------------|-----|
| Part # | Description | Qty |
| 819-6277 | Instructions | 1 |
| 231-2691 | Cover, left | 1 |
| 232-2691 | Cover, right | 1 |

| In Kit 826-2440, 18" | | |
|----------------------|--------------|-----|
| Part # | Description | Qty |
| 819-6277 | Instructions | 1 |
| 211-7131 | Cover, left | 1 |
| 212-7131 | Cover, right | 1 |



Figure 1: Remove the air tower by loosening screws securing it to brackets, which are accessible through inlets.



Figure 2: Position the covers (there is a left and right) with the notch toward the control tower.



Figure 3: Notch positioned on control tower side of HLZ.