

3/8" Quick-Disconnect Seal Kit, 826-2647

Follow these instructions to replace the seals in a 3/8" Quick disconnect, 810-2762 from 2002 and later.

In Kit 826-2598

Part No.	Qty	Description
810-3673	1	Seals
819-6475	1	Instructions

1. Remove quick disconnect from fryer.
2. Use a dental tool, machinist's scribe or fashion a tool from stiff wire or similar material to remove the existing seal and wiper.
3. Capture and remove the existing wiper and O-ring with the hooked tool. Be careful not to damage the interior of the quick disconnect. **See figure 1.**
4. Work the new O-ring over the spring-loaded bearings in the quick disconnect. It may be necessary to guide it from below with a dowel, barrel of a pen or some other device.
5. Work the O-ring into position.
6. Slide the wiper into position above the O-ring in a similar fashion. Use the shaft of your removal tool to work the wiper into position above the O-ring. **See figure 2.**
7. Reattach the quick-disconnect to the fryer.



Figure 1: Use a machinist's scribe, a dental pick or a hand-fashioned tool to remove the existing O-ring and seal.



Figure 2: Use the smooth shaft of a small tool to work the O-ring and seal into place. The seal rests above the O-ring, nearer the spring-loaded ball bearings.