

# UHC-HD Bezel Replacement

826-2781, 826-2782

Follow these directions to replace a bezel assembly in a UHC-HD cabinet:

1. Remove power from unit.
2. Remove screws at the base of each side and remove side panels. (See figure 1.)
3. Unplug the bezel from the distribution board.
4. Plug the replacement bezel into the distribution board, return power to the unit and test the bezel/cabinet for accurate operation.
5. Remove replacement bezel and remove power from the unit.
6. Loosen the hex nut which secures the row and remove the allen screw, which holds the bezel. Also remove, if present, the small bezel - securing screw. (See figure 2.)
7. Push, if necessary, on the mounted bezel through the access port in the inner panel to loosen the bezel. (See figure 2.)
8. Remove bezel; clean and degrease the groove in the heater plate.
9. Route ribbon cable for the new bezel through the inner panel of the cabinet and press the new bezel into place. Ensure it is firmly seated and tighten hex nuts, replace allen screws and the bezel-securing screw if present.
10. Return sides and reposition cabinet for operation.


## In Kit 826-2771/826-2772

826-2781	*Bezel, short cable
826-2782	*Bezel, long cable
819-6654	Instructions

\*Instructions are the same for each kit. Bezel provided is dependent on part number ordered.



**Fig 1:** Two screws (see arrows) at the base of each side of the cabinet secure the sides.

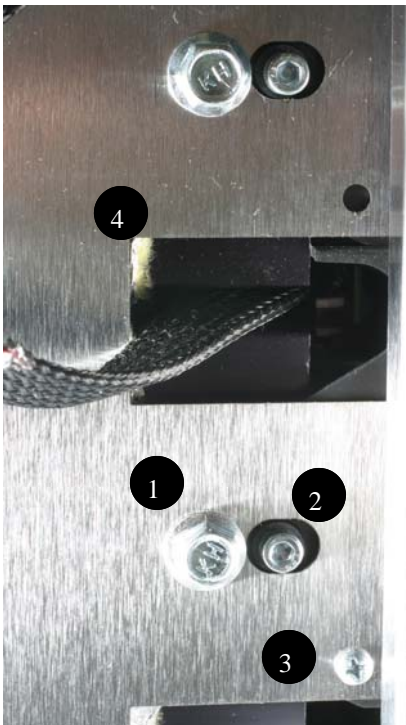

**Fig 2:** Loosen the hex bolts, 1, and remove the allen screws, 2, on each side. Remove, if present, the bezel-securing screw, 3. Push on the bezel, if necessary, through the access port, 4, to remove the bezel.