


826-2898 Honeywell to Fenwal Module Conversion Instructions


Follow these instructions to install the enclosed Fenwal spark module, 807-5244. It is a replacement for a Honeywell module, 807-4383. The function is the same.

- Remove power from the unit.
- Label wires before removing existing spark module.
- Discard the extra ground from position 24V (GND). It is not needed on the new module.
- Remove existing spark module.
- Replace the existing terminals on wires GND, V2 (MV/PV), S1 (Sense) and V1/PV1 (PV) with enclosed 3/16" push on terminals.
- Mount the provided spark module, noting these nomenclature differences (see below and Figure 1) and on the housing when reattaching the wires.
- Restore power and test.

In This Kit		
Part No.	Description	Qty
807-5244	Fenwal Spark Module	1
807-1468	3/16" push-on terminal	6
819-6767	Instructions	1
807-0705	1/4" push-on terminal	4

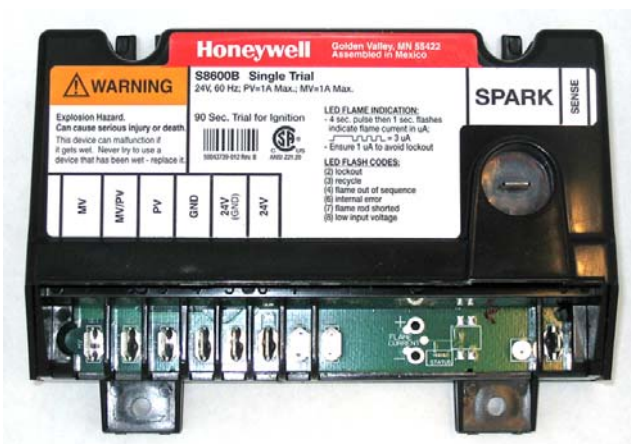

Honeywell Spark Module PN 807-4383

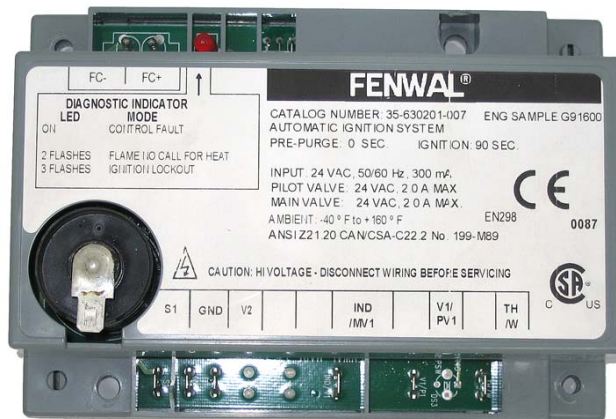

Fenwal Spark Module PN 807-5244

Connection Differences

Honeywell	Fenwal
MV	IND/MV1
MV/PV	V2
PV	V1/PV1
GND	GND
24V (GND)	Discard – Wire not needed
24V	TH/W
SPARK	HV (SPARK)
SENSE	S1

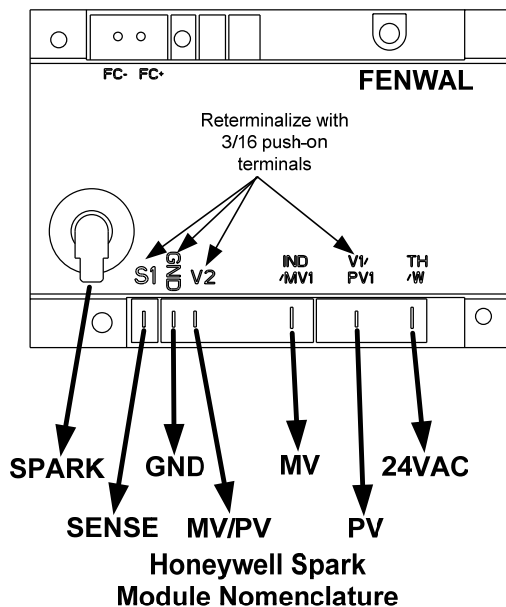


Figure 1