



# Wingstreet Electric Fryer K3000 Controller and Electric Drain Switch Wiring Kit 826-2859

1. Remove power from the unit.
2. Remove both wires from the drain switch and cut off the terminals.
3. Strip the wires cut in the previous step ½-inch and insert both into the supplied Wago connector. Lift the orange lever up to insert wire. Once inserted, close the lever ensuring the wire is secured.

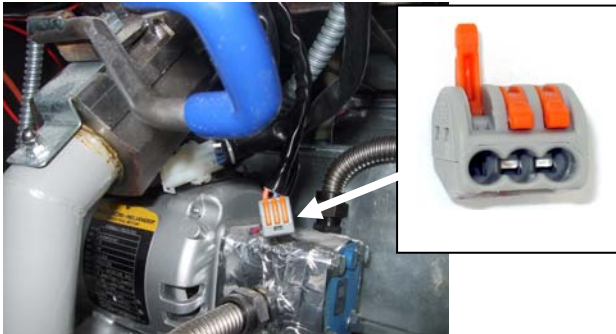


In This Kit		
Part No.	Description	Qty
1082727	WingStreet K3000 1817	1
2307410	Bezel	1
8074977	Menu Strip	1
8196943	Wingstreet K3000 Manual	1
8196944	Wingstreet K3000 QR	1
8196662	K3000 Setup Instructions	1
8196942	Drain Switch Wiring Instructions	1
8190359	Screw	2
8074056	Wago	1
8075361	Harness Drain to Controller	1
1082046	Harness Drain Safety Switch	1

4. The computer bezel is held in place by tabs at the top and bottom. Slide the metal bezel up to disengage the lower tabs. Then slide the bezel down to disengage the upper tabs. Discard the old bezel.
5. Remove the two screws from the upper corners of the controller. The controller is hinged at the bottom and will swing open from the top.

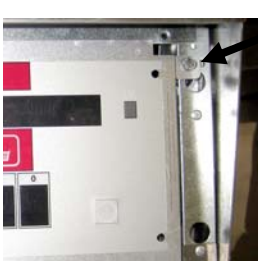

6. Unplug the controller cable and ground wire.

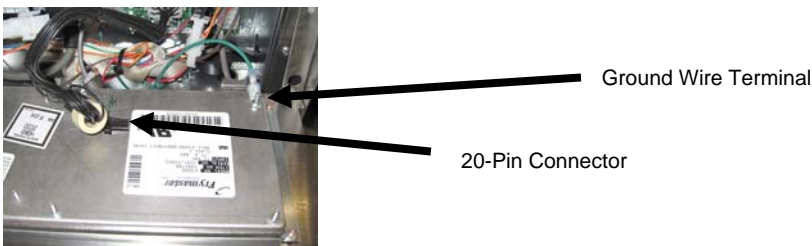

7. Remove the controller

819-6942 JAN 12



# Wingstreet Electric Fryer K3000 Controller and Electric Drain Switch Wiring Kit 826-2859

## Wiring Diagram

