

WingStreet K3000 Setup Instructions

The WingStreetK3000 **must be configured** for the specific fryer. Failure to configure it properly, prior to use, may result in fryer malfunction.

Install the WingStreet K3000 by removing the existing controller and replacing with the new controller. Ensure that the controller control cable is securely fastened to the controller and that the ground is secured.

1. With the controller displaying OFF, press and hold the ✓ (check) key until Product Setup is displayed.
2. Press the ► (right) arrow key two times until **TECH MODE** is displayed. Press the ✓ (check) key.
3. Enter code 7628.
4. Follow the sequence below to configure the controller.

Left Display	Right Display	Action
<i>LOCALE</i>	<i>NON-CE</i>	Press ▼▲ to scroll to choice CE or Non-CE and press ►.
<i>SYSTEM TYPE</i>	<i>OCF 30</i>	Press ▼▲ to scroll to WINGSTREET and press ►.
<i>ENERGY</i>	<i>GAS</i>	Press ▼▲ to scroll to choice Gas or Electric and press ►.
<i>TYPE</i>	<i>114 FULL</i> Gas-114 FULL, Electric-11817 <i>FULL.</i>	Press ►.
<i>FRESH OIL</i>	<i>NONE</i>	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-FL (Frontline) or None and press ►. NOTE: This should be set to NONE.
<i>WASTE</i>	<i>NONE</i>	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-FL (Frontline) or None and press ►. NOTE: This should be set to NONE.
<i>RESET PRODUCTS</i>	<i>NO</i>	Press ▲ YES and press ► to continue.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once to return the controller to OFF.

WingStreet K3000 Setup Instructions

Additional configuration parameters

To set up additional parameters such as time, date, language, etc. enter setup using the directions below.

1. With the controller displaying OFF, press and hold the ✓ (check) key until Product Setup is displayed.
2. Press the ► (right) arrow key until **VAT SETUP** is displayed. Press the ✓ (check) key.
3. Enter code 3228.
4. Follow the sequence below to configure the controller.

Vat Set Up

Left Display	Right Display	Action
OFF	OFF	Press ✓ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press ► to scroll to Vat setup and press ✓. See the owner's manual shipped with the controller for Product setup.
VAT SETUP	ENTER CODE	Enter 3228.
SYSTEM	Blank	Press ✓.
LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►.
2ND LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►. (This option allows another language to be selected from the front panel.)
LOCALE	NON-CE	Press ▼▲ to scroll to choice Non-CE or CE and press ►.
ENERGY	GAS	Press ▼▲ to scroll to choice Gas or Electric and press ►.
TYPE	114 FULL Gas-114 FULL, Electric-11817 FULL.	Press ►.
SYSTEM VOLUME	9	Sets sound level for controller. Enter level, 0-9 (0=Off/ 9=Loudest). Press ►.
TEMPR FORMAT	F	Press ▼▲ to scroll choices: F for Fahrenheit; C for Celsius. Press ►.
EXIT MELT TEMPR	100F	Use numbered keys to change default setting. Press ►. (This is the temperature for the fryer to exit the melt cycle.)
FRESH OIL	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. NOTE: This should be set to NONE.
WASTE OIL	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. NOTE: This should be set to NONE..
DRAIN SWITCH	YES	Ensure drain switch is set to YES. Ensure drain switch wiring in kit is installed. Press ►.
RECOVERY ALARM	DISABLED	Press ▼▲ to scroll choice DISABLED or ENABLED if recovery alarm is to be enabled. Default is DISABLED. Press ►.
EXIT	EXIT	Press ✓ button once to return the controller to OFF.
TIME/DATE		
OFF	OFF	Press ✓ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press ► to scroll to Vat setup and press ✓. See the owner's manual shipped with the controller for Product setup.
VAT SETUP	ENTER CODE	Enter 3228.

Continued on the following page

WingStreet K3000 Setup Instructions

Left Display	Right Display	Action
<i>SYSTEM</i>	Blank	Press ► to scroll to TIME/DATE.
<i>TIME/DATE</i>	Blank	Press ✓.
<i>TIME ENTRY</i>	<i>TIME</i>	Use numbered keys to change time. Enter time in 24 hour format. Press ►.
<i>DATE FORMAT</i>	<i>MM/DD/YY</i>	Press ▼▲ to scroll choices. With the date format displayed, press ►.
<i>ENTER DATE</i>	<i>DATE</i>	Use numbered keys to change date. Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<i>DST SETUP</i>	This is daylight savings time setup. In the United States, daylight savings time begins each year at 2:00 A.M. on the second Sunday in March, with clocks moving ahead one hour. Daylight savings time ends each year at 2:00 A.M. on the first Sunday in November, with clocks moving back one hour. For the two states and international locations, which do not use DST, set to disabled.	
<i>OFF</i>	<i>OFF</i>	Press ✓ until the controller displays Main Menu for three seconds changing to PRODUCT SETUP.
<i>PRODUCT SETUP</i>	Blank	Press ► to scroll to Vat setup and press ✓.
<i>VAT SETUP</i>	<i>ENTER CODE</i>	Enter 3228.
<i>DST</i>	<i>ENABLED</i>	Press ▼▲ to scroll choices DISABLED and ENABLED. Press ►. (This enables or disabled daylight savings time. Default is enabled.) If disabled is chosen, pressing the ► button, displays exit. Press the exit scan button three times to exit.
<i>DST START MONTH</i>	3	Enter the daylight savings time starting month using the 1-10 keys. (Default is US government starting month “3”.) Press ►.
<i>DST START SUNDAY</i>	2	Enter the daylight savings time starting Sunday using the 1-10 keys. (Default is US government starting Sunday “2”.) Press ►.
<i>DST END MONTH</i>	11	Enter the daylight savings time ending month using the 1-10 keys. (Default is US government ending month “11”.) Press ►.
<i>DST END SUNDAY</i>	1	Enter the daylight savings time ending Sunday using the 1-10 keys. (Default is US government ending Sunday “1”.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log or Change Password. With desired choice displayed, press ✓ or press the Exit/Scan button three times to return the controller to OFF.
<i>FILTER</i>	Follow the first four steps above to adjust time and date. Scroll to FILTER and continue.	
<i>FILTER</i>	Blank	Press ✓.
<i>GLOBAL FILTER COUNT</i>	0	Press ►. (This changes the total number of cooks to occur before a filter prompt. The default is 0.)
<i>EOD FILTER TIME</i>	23:59	Use numbered keys to change end of day filter time. Press ►. The default is 23:59, which disables end of day filter.
<i>1 POLISH TIMER</i>	<i>ENABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the polish timer.)
Continued on the following page		

WingStreet K3000 Setup Instructions

Left Display	Right Display	Action
<i>1 POLISH TIME</i>	<i>08:00</i>	Press blue ►. (The default is 8:00 AM. Any changes to this time will not affect polish time. Polish prompt occurs when the controller is off for six or more hours.)
<i>1 POLISH DURATION</i>	<i>30</i>	Use numbered keys to change. (This is the duration, in minutes for a polish. The default is 30 minutes) Press ►.
<i>1 POLISH DELAY TIME</i>	<i>02:00</i>	Use numbered keys to change time. (This is the amount of time which an operator can delay the start of a polish.) Press ►.
<i>1 POLISH START TEMPR</i>	<i>300F</i>	Use numbered keys to change temperature. (This is the temperature required for a polish to begin. The default is 300F.) Press ►.
<i>2 POLISH TIMER</i>	<i>DISABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the second polish timer.)
<i>2 POLISH TIME</i>	<i>00:00</i>	Press blue ►. (The default time is 00:00. Any changes to this time will not affect polish time. Polish prompt occurs when the controller is off for six or more hours.) Only displayed if 2 Polish Timer enabled.
<i>2 POLISH DURATION</i>	<i>30</i>	Use numbered keys to change. (This is the duration, in minutes for the second polish. The default is 30 minutes.) Press ►.
<i>2 POLISH DELAY TIME</i>	<i>00:00</i>	Use numbered keys to change time. (This is the amount of time which an operator can delay the start of the second polish. The default is 00:00.) Press ►.
<i>2 POLISH START TEMPR</i>	<i>300F</i>	Use numbered keys to change temperature. (This is the required temperature for the second polish to begin. The default is 300F.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once to return the controller to FILTER.
<i>FILTER</i>	<i>None</i>	Press SCAN button twice to return the controller to OFF.

When the setup is complete, remove power from the system for at least 10 seconds to reinitialize the controller. Power the system back up. Wait at least 20 seconds before starting a function.

If there are any questions contact the Frymaster service department at 1-877-392-7770.