## Gas Filter Quick Pre-Filter Installation Kit

826-3314 (2-Battery), 826-3315 (3-5 Battery)

This kit puts a pre-filter in series with the flow of oil in the filter system. Follow the instructions below to install the filter.

**Provided Tools:** 

1 1/16 (27mm) Stubby Wrench


1 1/16 (27mm) Crows Foot

The install sequence is different for two-battery units and three-five battery units. Instructions for each are provided.

Part #	Kits 826-3314/826-3315	QTY
108-6947	Pre-Filter (826-3314)	1
108-6948	Pre-filter (826-3315)	1
240-1125	Bracket, wrench holder (826-3314)	1
240-1417	Bracket, wrench holder (826-3315)	1
240-1086	Wrench, cap	1
810-4167	Laynard, wrench	1
809-0412	Screws, 1/2"	4
823-8990	Wrench, 1 1/16"	1
823-8991	Crow's Foot Wrench, 1 1/16"	1
819-xxxx	Instructions	1


## **Two-Battery Install**

- 1. Remove power from unit.
- 2. Loosen disposal valve handle and bracket (if present) and push to the side of the cabinet.
- 3. Remove filter pan and lid. Block oil pickup to prevent spillage.
- 4. Position the pre-filter assembly above the oil pickup and mark channel for additional hole that will be drilled (if necessary). **See Figure 1**.
- 5. Drill 1/4" hole and mount the pre-filter.
- 6. Remove the flex line between the filter pan pick up and pump. Block ports to prevent spillage.
- 7. Shape the provided flex line at the bottom of the pre-filter and route to the rear of the filter pan pickup. **See Figure 2.**

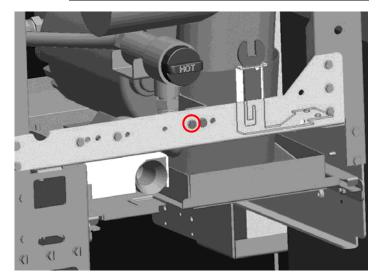

**Figure 1 :** The pre-filter is mounted to the channel; an additional hole is required. See circle. The filter wrench and holder are mounted (as shown) using existing holes.


- 8. Shape the provided flex line for the oil flow from the top of the pre-filter to the pump and attach. **See Figure 2.**
- 9. Mount the filter wrench holder and wrench. See Figure 1.
- 10. Replace filter pan and drain valve control.

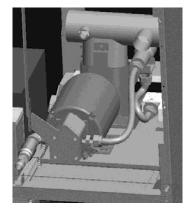


**Figure 2**: Flex lines are routed from the pan pickup to the bottom of the pre-filter and from the top of the pre-filter to the pump.

## **Three-five Battery Install**

- 1. Remove power from unit.
- 2. Loosen disposal valve handle and bracket and push to the side of the cabinet (if present).
- 3. Remove filter pan and lid.
- 4. Position and install the pre-filter assembly using existing holes. **See Figure 3**.
- 5. Remove flex lines (block to prevent spillage) between the filter pan pick up and pump.
- **6.** Route the provided flex line from filter pan pickup to bottom port of pre-filter. **See Figure 4**.
- **7.** Route the provided flex line from the pre-filter top port to pump. **See Figure 4**.
- **8.** Mount the filter wrench holder and wrench. **See Figure 3**.
- 9. Replace filter pan and drain valve control.

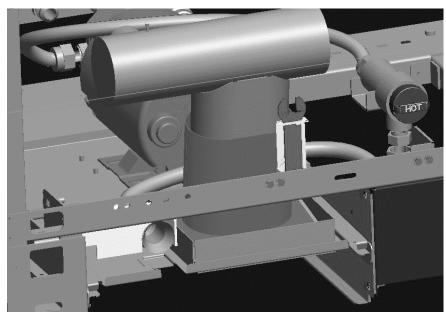

**Figure 3:** Mount the pre-filter and the wrench holder as shown using existing holes

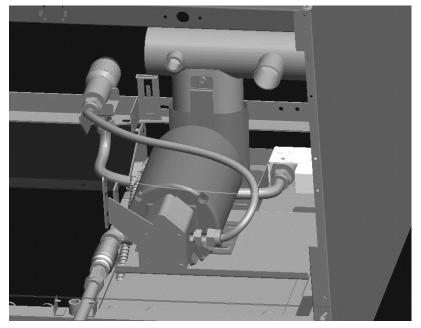

**Figure 4:** Route a flex line from the rear of the pan pickup to the bottom of the pre-filter. Route the second flex line from the rear of the pre-filter to the pump.