

# UHC-HD Control Panel Overview



## Loading UHC-HD Software Upgrade

1. With the cabinet running, place flash drive in USB port.
2. Press master program button.
3. Enter code 98765.
4. Press OK.
5. Press right arrow key to scroll to **BOOTLOAD MAIN BOARD**.
6. Press OK to Accept. The update continues unaided. The activity displayed on the controller is shown in the steps below.



See Graphic Guide to Update on back.

**NOTE: Software update takes 5 to 7 minutes. DO NOT TURN THE CABINET OFF DURING THE UPGRADE.**

7. Master Display: **COPYING FILE PLEASE WAIT.**
8. Master Display: **COMPLETE.**
9. Master Display: **MAIN BOOTLOADING**, changing to percent complete. (Other displays occur.) **DO NOT remove flash drive or switch cabinet off.**
10. Master Display: **R 1...** changing to rising numbers, which changes to **MAIN BOOTLOADING**, changing to previously displayed menu when complete.
11. The cabinet, after the update is complete, returns to the Breakfast menu. Navigate to the required menu if needed by pressing the Program button and then the Modes button on the cabinet front. Then choose a menu by pressing its button.
12. Displays with nonfunctioning buttons or other communication issues may not update.


### Check Software Versions

1. Press the master program button and the Program display on the row display\*. Enter 090809. Use the arrow keys to scroll, checking new version numbers: Distribution, 1.16; Master Control: 1.53; Master Boot, 1.4; Master Display, 6.0; Row Display, 1.17.3.
2. Press OK.

\*The function of the Program button is changed with the update. See explanation on back.

# Update Changes Cabinet Displays

## Graphic Guide to Software Updating

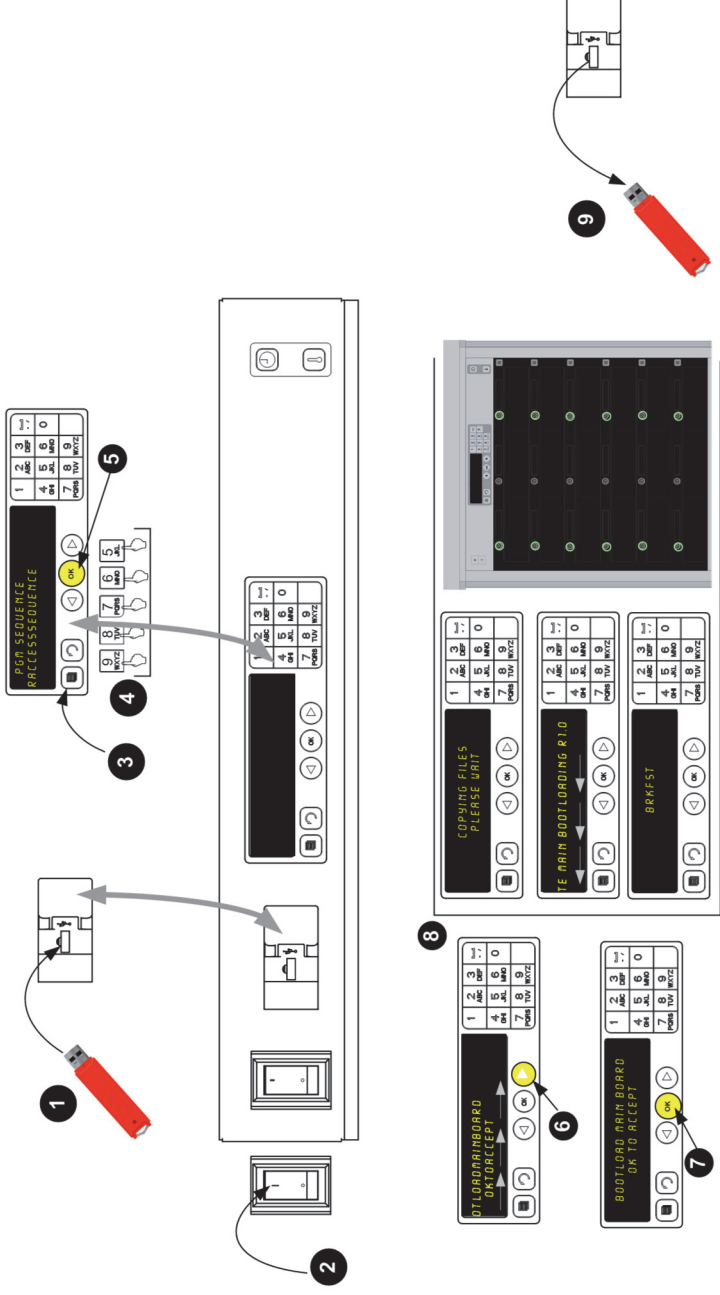

With the update, the cabinet now populates the top two row displays when the Program button is pressed:

- **Modes**, which allows menu configuration changes with one button, is displayed on the top row.
- **Program** is displayed on the second row (see above).

### Press Program button:

1. Program and Modes are displayed on the top two row displays.
2. Press the Modes button to change the cabinet's menu configuration from Breakfast to Regular or special menus.
3. Press the Program button and enter the appropriate code to navigate to other areas of the cabinet.