

318-865-1711 800-551-8633 WWW.FRYMASTER.COM EMAIL: FRYSERVICE@WELBILT.COM

Instruction Sheet


Subject: 8263417 Schneider Heat Contactor Kit

Instructions

Models affected: Electric Fryers

Follow these instructions to replace an 8072284 standard heat mechanical contactor with a Schneider heat contactor PN 8076169.

- 1. Disconnect power from the fryer.
- 2. Gain access to the contactor box.
- 3. Remove the contactor cover.
- 4. Locate the heat contactor(s) to replace (see Figure 1).
- 5. Remove the nuts securing the old contactor (see Figure 2).
- With the wires still attached, carefully set the old contactor on top of the contactor directly next to it (see Figure 3).
- 7. Using vice grips or a nut driver bend the **bottom stud** back and forth to break stud loose and remove the stud (see Figures 4 and 5).

 

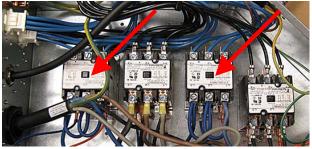


Figure 1



Figure 3



Figure 2









1 of 2

- With the contactor <u>upside down</u> and the bracket holes on top, attach the contactor to the plate assembly by attaching it to the studs with the included nuts (see Figure 6).
- Attach the plate assembly, with the contactor mounted to the contactor box stud, using a nut removed in step 5 (see Figure 7). Leave the nut loose to ease attaching the wires.
- 10. Loosen all the screw terminals on the new contactor.
- 11. Transfer the wires, one at a time, from the old contactor to the new contactor (see Figure 8) and tighten (L1=1, L2=3, L3=5, T1=2, T2=4, and T3=6).
- 12. Remove any existing terminals from the coil wires and strip the wires (see Figure 9).
- 13. Insert the coil wires into terminals marked A1 and A2 (see Figure 10 and 11) and tighten.
- 14. Pull gently on all the wires to ensure that the screws and wires are tight and secure.
- 15. Replace the contactor cover.
- 16. Restore power and test to ensure proper function of fryer.

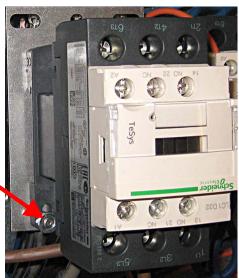




Figure 7



Figure 8



Figure 9

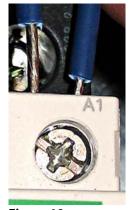


Figure 10



Figure 11