

318-865-1711 800-551-8633 WWW.FRYMASTER.COM

EMAIL: FRYSERVICE@WELBILT.COM

Instruction Sheet

Follow these instructions to install the Bulk Oil Kits (Fresh and Waste).

1. Disconnect power and gas from the

fryer.

2. Remove the fryer from the hood to gain access to the rear of the fryer.



Figure 1

3. Remove the filter pan (see Figure 1).

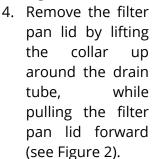




Figure 2

5. Remove the lower back by removing the eight (8) screws (see Figure 3). If a four (4) battery or larger, remove both lower backs.



Figure 3

In This Kit		
Part #	Description	Qty
KIT17215	PLUMBING (1082796-1082196)	1
	ATO ASSY (1085702-1085701) 2 Vat	1
KIT17216	only	
	ATO ASSY (1085703-1085704) 3-5 Vat	1
KIT17221	only	
KIT17217	HARNESS (8074843-8074671)	1
	FLT PUMP (1085816-1087385) 2 Vat	
KIT17219	only	
	FLT PUMP (1085817-1087386) 3-5 Vat	
KIT17220	only	
1087394	PLUMBING ASSY, GL230 2 Vat only	1
1085907	PLUMBING FQ GAS BULK 3-5 Vat only	1
1082202	FILL ASSY, GL30 RTI	1
1084202	CONNECTION, GL30 RTI DISPOSE	1
1085784	BULK OIL DISPOSE, FLTQCK GAS	1
8238117	HANDLE, GAS BULK OIL 2 Vat only	1
1083387	LOCK, OCF GAS BULK 2 Vat only	
1080686	HANDLE/LOCK ASSY GAS 3-5 Vat only	1
8022660	LABEL, LOV RTI WASTE HANDLE	1
	BRIDGE WELD, PUMP MOTOR 2 Vat	1
8242325	only	
8022608	TAG, FILL RTI	1
8022609	TAG, DISPOSE RTI	1
8158000	LOCTITE 567, TUBE 6ML	6
1087410	SOLENOID ASSY, BULK OIL SVC KIT	1
8122519	HARNESS, MIB TO RTI SVC KIT	1
8090256	NUT, KEPS 10-32 HX ZP	4
8091070	BOLT,1/4-20 X 5/8 SQ CONE LOCK	6
8090417	NUT, FLNG 1/4-20 SERR	8
8090412	SCRW, #10-1/2 HX WSHR HD N	6
8090194	WSHR, FLT 5/16 SAE ZP	5
8238991	WRENCH W/A, 1-1/16" CRWS F	1
8140015	TY WRAP	8
8160870	CLAMP,.870/.732 SNAP GRIP HOSE	1
8197535	INSTRUCTIONS	1

 
Subject: 8263506 Gas Fresh/Waste Bulk Oil Kit **Installation Instructions (3-5 Vat Systems)**

Models affected: FilterQuick FQG30 Gas Fryers





6. Disconnect all connectors, on the front of the transformer box (or the left box on 3 battery or larger fryers, as viewed from the rear) (see Figure 4).



8. Lower and set aside (see Figure 6).


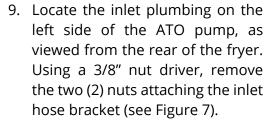


Figure 4

 Figure 6



- 11. On the inlet side of the ATO pump, push down on the guick disconnect lock clip to unlock the fitting (see Figures 9 and 10).
- 12. Remove the ATO inlet assembly from the ATO pump. Remove the elbow with the quick disconnect fitting and the bracket from the hose. Save the hose with the cap and suction foot for use later (see Figure 11).
- 13. Disconnect the flex line, that runs between the ATO pump and oil manifold, at the check valve (see Figure 12).
- 14. Remove the check valve with fitting (see Figure 13). Set aside, as they will be used later.
- 15. Remove the elbow and check valve nipple. It may require removing the adjacent flexline, to remove elbow (see Figure 14).

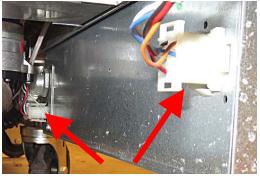


Figure 5






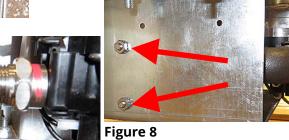Figure 9

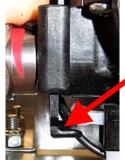


Figure 11





 


Figure 13



Figure 14

16. lt may be necessary disconnect the filter pan switch and move any additional wires out of the way, to allow additional room to work.



- 18. Apply Loctite to the threads of the JIB hose and attach the JIB hose from step 12 to the 1085789 assembly (see Figure 17).
- 19. Insert the assembly from the previous step through the bottom of the ATO pump tray, ensuring the flexlines and JIB hose are inserted first (see Figure 18).
- 20. Route the JIB hose over the (ATO) box towards the front of the fryer (see Figure 19).
- 21. Once in place, insert the four (4) studs through the four (4) holes in the plate and attach with supplied nuts (see Figures 20 and 21).
- 22. Attach inlet assembly flexline Figure 20 (1083391) to the reducing tee, behind the top off pump (see Figure 22) and tighten. Refer to fill assembly plumbing on page 13 for the next several steps.
- 23. Route the flexline behind the top off pump and around the side. Insert the quick disconnect into the inlet side of the top off

pump. Ensure the lock clip is pushed up and fitting is secure (see Figure 23 and 24).

24. Attach the 8101668 adaptor and check valve nipple removed in step 15, as well as the 8130003 "T", to the adaptor left attached to the oil manifold (see Figures 25 and 26).



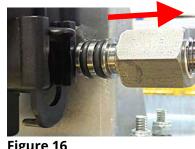


Figure 16

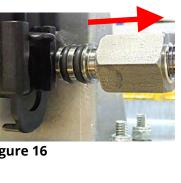


Figure 17



Figure 18



Figure 19

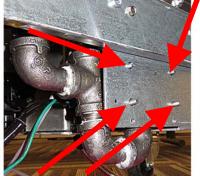


Figure 21



Figure 22



Figure 23



Figure 24



Figure 25


 


Figure 26

 - 25. Attach flexline 8101057 to flexline adaptor in Figure 26 and the other end to the assembly below it (see Figure 27).
- 26. Attach the check valve and fitting removed in step 14 to the top of the assembly in Figure 26 (see Figure 28).



flexline, removed in step 17, into the ATO pump (see Figure 29).






Figure 31

- 29. Attach other end of flexline to the top of the fitting in Figure 28 (see Figure 31).
- 30. Position the fresh oil fill assembly 1085785 on the left side of the fryer, as viewed from the rear between the oil manifold and the gas manifold. Route the flexline around the ATO pump and attach to the assembly shown in Figure 33 to plumbing assembly, to the right of the ATO pump (see Figure 32).
- 31. Align the fresh oil fill assembly to the predrilled holes and attach using 1/4"-20 bolts (see Figure 34).
- 32. Use zip ties to attach the (FILL) tag to the fresh oil port on the left side of the fryer, as viewed from the rear (see Figure 35).
- 33. Use a long extension to loosen and remove the three (3) screws securing the wire connection shield on the rear of the ATO box (see Figure 36).
- 34. Carefully position the cover to rest on the top of the ATO box to expose the ATO connections (see Figure 37).




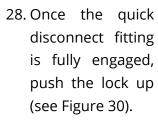

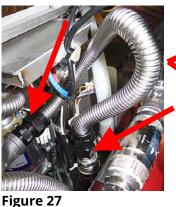Figure 28


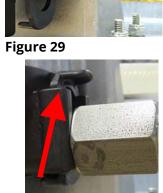


Figure 30

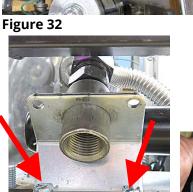



FILL

Figure 34

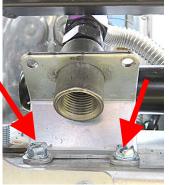


Figure 36

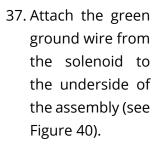


 



Figure 37


Figure 35

  - 35. Locate the 16-pin connector on the rear of the ATO box and the two (2) wire harness (8122520). Insert the red wire into pin-1 and the black wire into pin-9 with the tabs up as shown (see Figure 38).
- 36. Attach the other end of the harness in step 35 with the white 2-pin Molex connector to the bulk fresh solenoid connector (see Figure 39).









- 41. Use a 7/16" wrench to Figure 42 remove the nut and bolt from the filter pump shipping bracket (see Figure 43).
- 42. Use a 7/16" nut driver to loosen the two clamps securing the drain to the drain dump tube (see Figure 44).
- 43. Slide both clamps, to the right of the sleeve, out of the way (see Figure 45).
- 44. Remove the acorn nut attaching the drain clamp to the drain dump tube (see Figure 46).
- 45. Use a screwdriver to loosen the drain sleeve (see Figure 47).

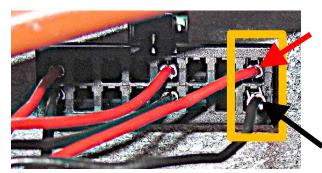


Figure 38



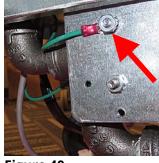


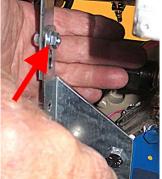


Figure 40

Figure 41







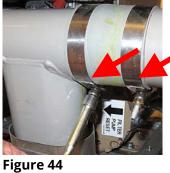


Figure 43







Figure 46



Figure 47

- 46. Carefully remove the drain dump from the drain manifold and set aside (see Figure 48).
- 47. Use a 7/16" wrench to remove the two (2) nuts securing the female pick-up tube bracket (see Figure 49).
- 48. Lower the pick-up tube assembly down out of the way (see Figure 50).
- 49. Remove the two (2) screws attaching the electrical cover plate to the filter pump motor (see Figure 51).
- 50. Disconnect the ground (green), neutral (white) and hot (black) wires from the motor (see Figure 52).
- 51. Use a screwdriver or pliers to remove the conduit nut and disconnect the conduit from the motor (see Figure 53).
- 52. Use a 5/16" socket to remove the four (4) screws attaching the pump motor bridge to the frame (see Figure 54).
- 53. Carefully lift the filter pump assembly and slide towards the left, to lower it off the frame and remove from the fryer.
- 54. Use a 1/2" wrench to remove the two (2) bolts securing the filter pump bracket to the filter pump (see Figure 55). Discard the bracket.

55. Reinsert the two (2) bolts into

the filter pump and adding two Figure 54 (2) 8090104 washers to each bolt before tightening. Torque to 15 foot lbs. Do **NOT** overtighten (see Figure 56).



Figure 48



Figure 50



Figure 49



Figure 51

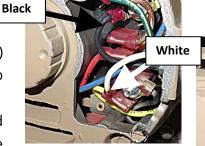


Figure 52





Figure 55

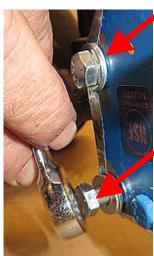


Figure 56

- 56. Remove the flexline disconnected from the manifold in step 40 (see Figure 57) and set aside.
- 57. Remove the flexline adaptor and check valve from the filter pump (see Figure 58).
- 58. Remove the check valve fittings and the 90° elbow from the filter pump (see Figures 59 and 60). It may be

necessary to loosen all four (4) filter pump bolts, to ease removal of the elbow and check valve fittings. When finished. retighten the bolts. Torque to 15 foot lbs., but do **NOT** overtighten.

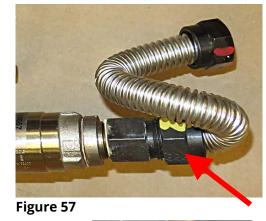




Figure 59





Figure 60






Figure 58

Figure 63

- 59. Apply Locktite and insert 1½" nipple (8130087) into the 90° elbow with outlet (8130331). Orient and tighten as shown (see Figure 61).
- 60. Apply Locktite to both ends of the 2" nipple (8130298). Insert the nipple into the top of the 90° elbow with outlet, attached to the pump, in the previous step (see Figure 62).
- 61. Attach the 90° elbow (8130062) to the top of the nipple in the previous step. Orient and tighten as shown (see Figure 63).
- 62. Attach flexline adaptor (8101668) to elbow in previous step and orient as shown (see Figure 63).
- 63. Attach the 2 check valve fittings, check valve, and flexline adaptor, removed in steps 57 and 58, to the bottom opening of the elbow as shown (see Figure 64).
- 64. Reattach the flexline disconnected in step 56 (see Figure 65).

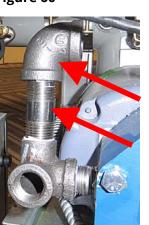

Figure 64


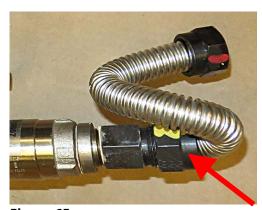


Figure 65

- 65. Locate the 1085907 Bulk Oil plumbing assembly. Facing the switch connectors, attach the harness (8122519) to the Bulk Oil Plumbing assembly. Beginning with the switch on the left, attach the red wire the the farthest left connector; next attach the green wire, to the connector directly to the right of the the red. On the right switch, attach the black wire to the farthest right connector; attach the white wire to the connector left of the black wire (see Figure 66).
- 66. With the dispose valve handle oriented away from the filter pump, attach the bulk oil plumbing assembly onto the filter pump bridge. Ensure the flexline, from the female pick up tube assembly to the filter pump, is beneath the bracket

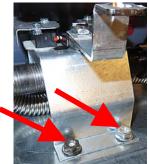

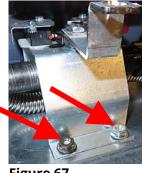




Figure 69

GREEN

BLACK

Figure 67

Figure 68

RED

- of the the dispose switch plumbing assembly. 67. Use a 7/16" wrench to attach the switch assembly, to the four studs
- on the filter pump mounting plate using 4 1/4"-20 nuts (see Figure 67).
- 68. Attach the dispose handle assembly (1080686) to the dispose switch valve assembly using a clevis clip (see Figures 68 and 69).
- 69. Using Figure 70 below as a guide, route the flexline #1 around the switch assembly and up over flexline #2 and attach to the outlet of the filter pump (see Figure 71).

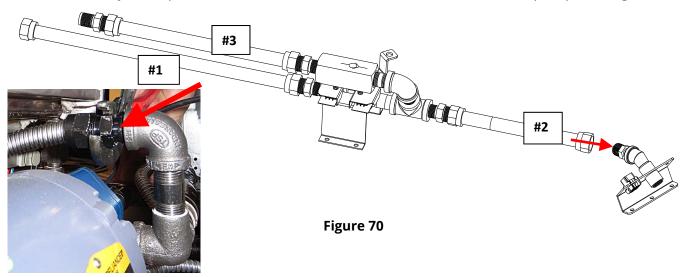



Figure 71

- 70. Reinsert the entire dispose/filter pump assembly back into the fryer (see Figure 72).
- 71. Reverse steps 49-52 to reattach the filter pump motor bridge to the frame and reattach the motor electrical connections.
- 72. Reverse steps 47-48 to reattach the female pickup assembly.
- 73. Remove far right nut and bolt, as viewed from the rear of the fryer, attaching the return oil manifold to the frame (see Figure 73).

74. Using a prybar, gently lift the oil manifold up slightly to allow the oil dispose assembly

1085784 to slide in between the gas and oil manifolds (see Figure 74).

- 75. Attach the flexline #2 from the dispose switch assembly in Figure 32, to the dispose outlet assembly (see Figure 75).
- 76. Position over the pre-drilled holes (see Figure 76).
- 77. Attach the dispose outlet assembly using 1/4"-20 self tapping bolts (see Figure 77).
- 78. Attach the 1085398 9-pin male connector pigtail to the 9-pin female connector (see Figure 78).
- 79. Using zip ties, attach the (DISPOSE) tag to the waste oil connection assembly (see Figure 79).
- 80. Disconnect the 9-pin connector C4 from the right front of the transformer box, as viewed from the front of the fryer, beneath the waste oil connection assembly attached in step 77.

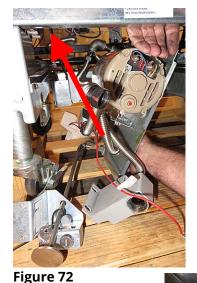



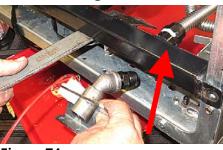


Figure 74


Figure 75



Figure 76



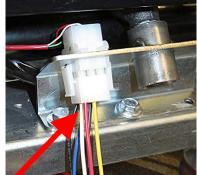Figure 77







- 81. Locate the individual red and black wires from the harness attached to the dispose outlet assembly in step 77 (see Figure 80).
- 82. Insert the red wire into pin 4 and the black wire into pin 7 of the C4 connector, unplugged in step 80 (see Figure 81).
- 83. Reattach the connector the transformer box, disconnected in step 80.
- 84. Route the 8-pin male connector harness, from the dispose outlet assembly, attached in step 77, under the gas manifold and along the fryer side, to the MIB board on the front of the fryer (see Figure 82).
- 85. Loosen the two (2) Phillips screws above the MIB board (see Figure 83).
- 86. Pivot the MIB board down and attach the 8pin male connector from step 84, to the 8-pin female connector on the rear of the MIB board (see Figure 84).
- 87. Route the 4-wire harness from the dispose switch assembly, attached in step 65, to the rear of the MIB board.
- 88. Locate the 16-pin connector on the rear of the MIB board. Insert the red wire into the far right rear position (pin 8) (see Figure 85). Ensure the two tabs fit properly into notches in connector.
- 89. Insert the green wire into the far right front position (pin 16) in front of the red wire inserted in step 88. (see Figure 86).
- 90. Insert the black wire into the position (pin 7) directly to the left of the red wire inserted in step 88) (see Figure 87).



Figure 80

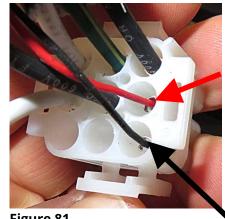


Figure 81



Figure 82

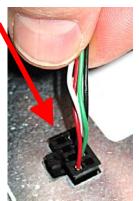


Figure 84

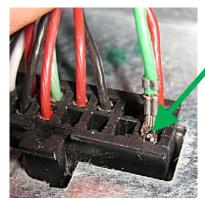


Figure 86



Figure 83



Figure 85



Figure 87

- 91. Insert the white wire into the position (pin 15) directly in front of the black wire inserted in step 90 (see Figure 88).
- 92. Gently tug on all wires to ensure they are locked into the connector (see Figure 89).
- 93. Reverse steps 85-86 to pivot the MIB board back into place and secure.
- 94. Use zip ties to secure harnesses out of the way ensuring none are attached to return manifold.
- 95. Remove the plug from the rear of the drain dump tube (see Figure 90).
- 96. Insert the flexline adaptor 8101068 into the rear port of drain tube and tighten (see Figure 91).
- 97. Remove the oil drain sleeve from drain dump, removed in step 46. Apply cooking oil to


 


Figure 90

 

- 99. Attach the #3 flexline from the check valve on the dispose assembly (see Figure 70), to the flexline connector, attached to the drain tube in step 96 (see Figure 94).
- 100.Reverse steps 42-46 to reattach the drain dump.
- 101. Reattach the female pickup tube bracket removed in step 47.
- 102. Reattach the flexline from the filter pump to the rear manifold removed in step 40.
- 103. Attach the dispose valve handle bracket to the frame (see Figure 95).
- 104. Use the wiring diagram on the back page for reference when attaching any wiring from an external bulk system. Connect the wiring to the pig-tail harness next to the DISPOSE connector, on the rear of the fryer (see Figure 78).

105. Reverse steps 1-8 to return the fryer to operation.

106.Once fryer has fully powered up, wait one (1) additional minute with the controller OFF before proceeding to next step.



Figure 88



Figure 89



Figure 92





Figure 93



Figure 94



Figure 95

- 107. Press and hold the ✓ CHECK button until the controller scrolls INFO MODE, changing to MAIN MENU and then PRODUCT SETUP.
- 108. With PRODUCT SETUP displayed, press the ▶ (right arrow) button to scroll to VAT SETUP and press the ✓ CHECK button.
- 109.ENTER CODE is displayed. Enter 1656.
- 110.SYSTEM is displayed. Press the ✓ CHECK button.
- 111.LANGUAGE is displayed. Press the ▶ (right arrow) button ten (10) times to scroll to FRESH OIL.
- 112. With JIB displays, press the ▼ (down arrow) button to scroll to BULK.
- 113. Press the ▶ (right arrow) button to scroll to WASTE.
- 114. With SDU displayed press the ▼ (down arrow) button to scroll to BULK.
- 115. Press the ▶ (right arrow) button to RECOVERY ALARM.
- 116. Press the EXIT/SCAN button to exit.

117. It is imperative that the fryer system be completely power cycled after changing the setup from SDU to BULK to operate correctly.

118. Completely power cycle the fryer using the hidden reset momentary rocker switch (see Figure 97) under the left control box in gas (see Figure 96) or behind the right control box over the JIB in electric (see

Figure 96

Figure 97

Figure 99

Figure 98). HOLD THE SWITCH FOR <u>60</u> SECONDS, ENSURING THE

MIB BOARD HAS POWERED FULLY DOWN.

- 119. Once the fryer is rebooted allow about 30 seconds for the fryer to fully cycle the MIB board.
- 120.Press and **HOLD** the **ORANGE** JIB reset button to fill the container with fresh oil until the container is full. Once full release the button (see Figures 99 and 100). **NOTE:** It may take approximately twelve (12) seconds from the time the
 - top off reset button is pressed, until the bulk fresh oil pump starts. It may take up to twenty (20) seconds before the level of the oil in the top off reservoir begins to rise. Typically, it may take approximately three minutes to fill the reservoir. It may take approximately one (1) minute to fill a split vat and two (2) minutes to fill a full vat.
- 121. With the controller OFF, test the dispose function by pressing and holding the FILTER button until







- FILTER MENU is displayed for three (3) seconds changing to FILL VAT FROM PAN.
- 122. Press the ► (right arrow) button to DISPOSE.
- 123. Press the ✓ CHECK button.
- 124.DISPOSE NOW? YES NO is displayed. Press the ▲ (up arrow) YES button.
- 125.START DISPOSE is displayed. Press the button with blinking **BLUE** LED.

- 126.DRAINING is displayed followed by VAT EMPTY AND CLEAN? CONFIRM. Press the ▲ (up arrow) button to confirm.
- 127. OPEN DISPOSE VALVE is displayed.
- 128. Open the dispose valve by pulling the handle towards the front of the fryer (see Figure 100).
- 129. Ensure that the filter pump starts and begins pumping oil out of the filter pan. If so, immediately push dispose handle towards the rear of the fryer to stop the pump.
- 130. REMOVE FILTER PAN is displayed. Pull the filter pan out.
- 131.IS FILTER PAN EMPTY? YES NO. Press the ▲ (up arrow) button.
- 132. INSERT FILTER PAN is displayed.
- 133.FILL VAT? CONFIRM is displayed. Press the ▲ (up arrow) button.
- 134. The controller goes to OFF.
- 135. With the controller OFF, test the dispose function by pressing and holding the FILTER button until FILTER MENU is displayed for three (3) seconds changing to FILL VAT FROM PAN.
- 136. Press the ✓ CHECK button.
- 137. FILL VAT FROM PAN? YES NO is displayed. Press the ▲ (up arrow) YES button.
- 138. FILLING is displayed.
- 139.IS THE VAT FULL? YES NO is displayed. If the vat is full, press the ▲ (up arrow) YES button.
- 140. The controller displays OFF.

Fresh Oil Assembly Plumbing

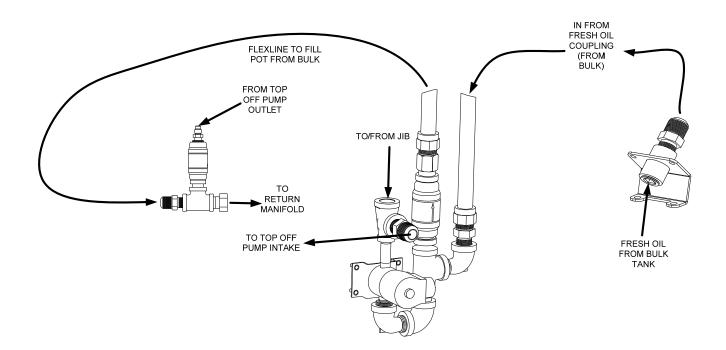


Figure 100

WARNING

The FilterQuick™ fryer will ONLY operate with bulk oil systems that have a three-pole float switch. If the float switch is the older two-pole switch, call the bulk oil provider. These float switches are polarity specific which may short to ground and damage an MIB board.

BULK OIL LOV WIRING

9-PIN FEMALE PLUG SHOULD READ:

TESTING BETWEEN PINS 1 & 4

