



# FQ4000 easyTouch® Taco Bell Operation

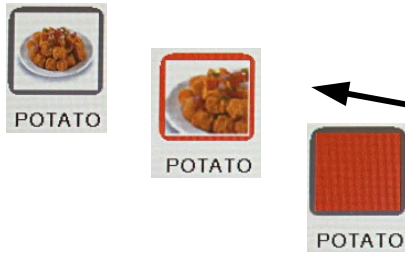


## Turn Fryer ON or OFF

Press and hold button to switch on. Press button to switch off. Select button on desired side of a split vat. If the frypot is **FULL** press the check ✓ YES button.

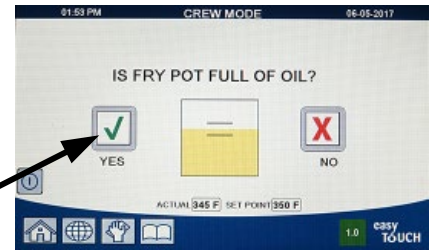


## Changing a Product

Press and hold the product button to change. The outline of the button changes from green to red and then to solid red. Select and press the new product button.

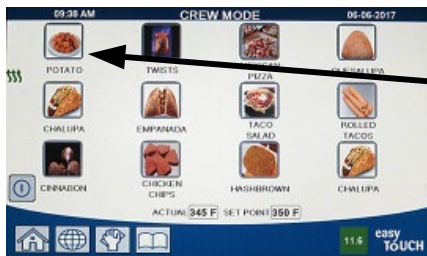

## Start a Cook Cycle

Press the product button to start a cook. The timer will start counting down. If using the optional basket lift, choose the basket type and position.

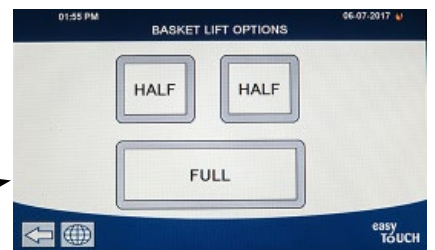


## Cancel a Cook Cycle

Press and hold the active countdown product button until an "X" is visible; then release.



## Cancel an end of Cook (REMOVE) Alarm

Press product button that's alternating REMOVE / CHECK.

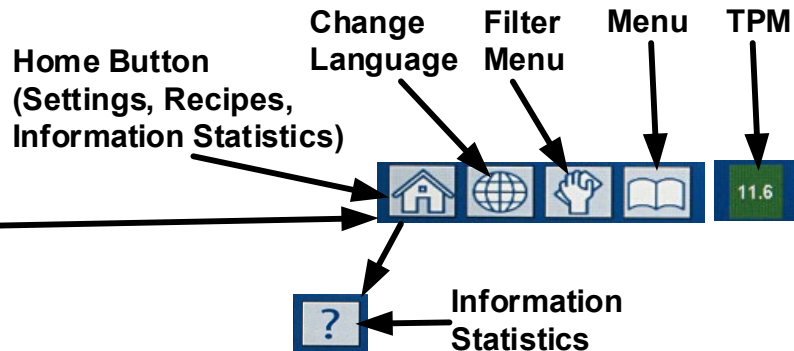

**Frymaster®**



FRY\_QR\_8197440 09/2023

# Cooking with the Taco Bell FQ4000 easyTouch® Controller

**1** A product is shown in display. To choose a different product press and hold the product button to change. The outline of the button changes from green to red and then to solid red. Select and press the new product button.




**2** Press the product button to begin the cook cycle.



**3** Display changes to COOKING. The timer will start counting down.



**4** REMOVE alternating with the CHECKMARK is displayed when the cook cycle is complete. Press the REMOVE/CHECKMARK button to cancel alarm. If an optional basket lift is used this step is not necessary.

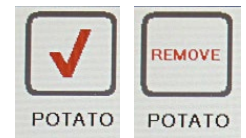

**5** DRAIN TIMER is displayed as the drain timer counts down and ends with DRAIN EXPIRED. Press the DRAIN EXPIRED/CHECKMARK button to cancel alarm.



**6** DRAIN EXPIRED alternating with the CHECKMARK is displayed when the hold time has elapsed and expired. Press the DRAIN EXPIRED/CHECKMARK button to cancel alarm.



**7** HOLD TIMER is displayed as the hold timer counts down.



**8** HOLD EXPIRED alternating with the CHECKMARK is displayed when the hold time has elapsed and expired. Press the HOLD EXPIRED/CHECKMARK button to cancel alarm.



**9** The display returns to the crew mode screen and the unit is ready for cooking.

