

FilterQuick Touch Menu File Update Instructions

To update the menu files, follow the attached instructions. If you have any problems or questions call Frymaster at 1-800-551-8633.

NOTE: This will overwrite any current product menu items and their settings. This may require reentering any limited time offering products cook times, temperatures, etc. and reassigning products to their locations on the touch screen controller.

Update the Menu

1. Switch **ALL** controllers to **OFF**.

2. On the left screen, press  →  →  → 1656 →  → **USB - MENU OPERATION** → 
 SERVICE  MANAGER
 **COPY MENU FROM USB TO FRYER** 

3. Open the far-left cabinet door and slide the USB cover up (see Figure 1). **NOTE: USB ports may differ in appearance.**

4. Insert the USB into the USB port (see Figure 2).

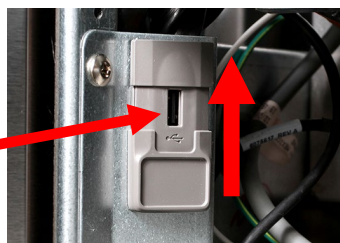


Figure 1


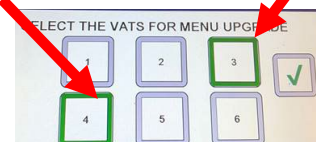


Figure 2

5. Ask manager which products are cooked in each vat. Select the file name of the menu to update. **NOTE: If "INI FILE MISSING" is displayed, USB SETTINGS OPERATION was selected instead of USB MENU OPERATION>COPY MENU FROM USB TO FRYER selection. Press the  button, press the  button and start over in step 1 above.**

- ☐ GMMENU.CBR
- ☐ SPICY.CBR
- ☐ CHICKEN.CBR

6. Select the vats the selected file in previous step should update. Select **EACH** vat if **ALL** vats are to be updated with the selected file (**Example: If a 4-battery fryer should have all the vats updated to the same menu, select 1, 2, 3, & 4**). If updating individual vats with different menus, **ONLY** select the vats to be updated (**Example: If the selected menu should only update vats 1 and 2 only select and highlight 1 and 2**). If a different menu file is desired for vats 3 and 4, then only select and highlight 3 and 4).

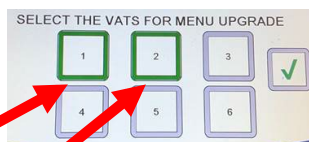

7. Press the check  button to begin menu update.
8. When the update has completed on all screens, press the **YES** button to confirm.
9. **Ensure the USB is removed from the fryer.**

10. To power cycle the system, press and hold the black toggle power reset switch for **60 SECONDS**. In some models, this is located under the USB slot (see Figure 3). In some gas models, the momentary rocker switch (see Figure 4) is located under the far-left control box (see Figure 5). In some electric models the momentary rocker switch is located directly behind the JIB reset switch (see Figure 6).
11. Repeat steps 5 through 8 above to load additional menus.
12. Once complete, slide the USB cover down to cover the port.
13. Products may need to be reassigned to their locations, and any limited time offerings products may need to be reentered into each controller.



Figure 3

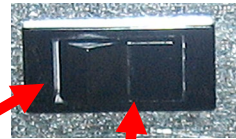


Figure 4

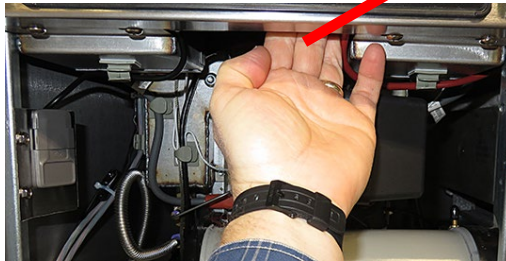


Figure 5



Figure 6