


O-ring Inspection, Replacement

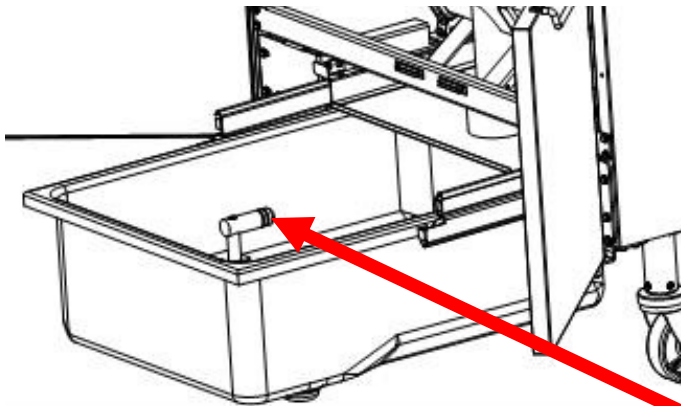

Replace O-rings every 90 days.

The filter pan O-rings should be inspected and replaced every 90 days or when cracked, broken or missing.

1. Using a small screwdriver, lift up on the O-ring to pry off of the pick up tube.
2. When replacing O-rings, ensure the groove is cleaned out and free of debris.
3. Slide the new O-ring over the tube until it slips into the groove.

