

Instruction Sheet

Follow these instructions to reload the default factory menu file.

Subject: Reloading UHCTHD Factory Menu

**Models affected: UHCTHD Holding Cabinets
10/18/2021**

1. Disconnect power from the unit.
2. Remove the top cover of the cabinet by removing the four (4) screws that attach the cover (see Figure 1).
3. Disconnect the 6-pin 3-wire CAN bus cable between the controllers (see Figure 2).
4. Power on the cabinet.
5. Once the cabinet is completely booted up, slide the USB cover open and insert the USB drive into the front of the cabinet (see Figure 3).
6. Once the menu file has loaded, the controller reboots (see Figure 4). While it is rebooting, remove the USB drive.
7. Insert the USB drive directly into one of the rear controller USB ports (see Figure 5).
8. Once the menu file has loaded and the rear controller reboots (see Figure 4), remove the USB drive.
9. Power off the cabinet.
10. Reconnect the 6-pin 3-wire CAN bus cable disconnected in step 3 (see Figure 6).
11. Reattach the cabinet top removed in step 2.
12. Power on the cabinet.



Figure 1

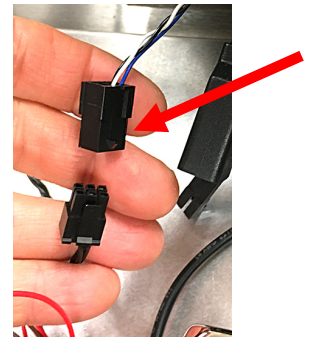


Figure 2



Figure 3

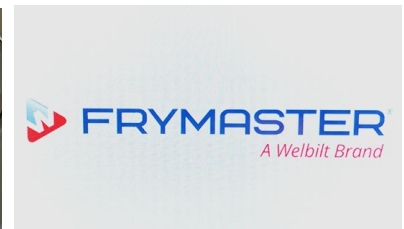


Figure 4



Figure 5

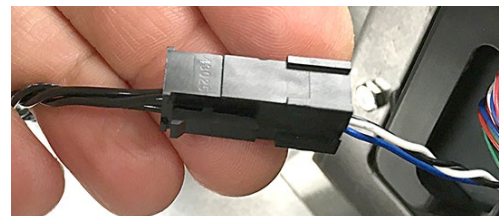


Figure 6