




## Disabling the OQS Sensor 4000 Series Touch Screen Fryers

1. The fryers need to be idle with no products cooking and no filtration functions.

2. On the left screen, press:



3. Press  →  →    
CREW MODE

4. Power cycle the entire fryer. To power cycle the system, **PUSH and HOLD** the black toggle reset switch for **60 SECONDS**. The reset switch is located either under the USB port, near the USB port, under the left control box or directly behind the JIB reset switch (see photos to the right). If the switch is not accessible, unplug the fryer or turn off the breaker to the fryer.

