

Instruction Sheet

Follow these instructions to install an intermediate TVS contactor box harness.

Subject: 8263720 Contactor Box Intermediate TVS Harness Kit Installation Instructions

Models affected: Frymaster Electric Touch Screen Fryers

06/01/2022

1. Switch off the black rocker switch for the fryer (see Figure 1).
2. Disconnect the harness from the front of the contactor box (see Figure 2).
3. Attach the intermediate TVS harness to the front of the contactor box (see Figure 3).
4. Attach the harness disconnected in step 2 to the intermediate TVS harness (see Figure 4).
5. Repeat steps 2-3 for each contactor box in the fryer battery.
6. Switch on the black rocker switch (Figure 5).
7. Completely power cycle the complete fryer battery.

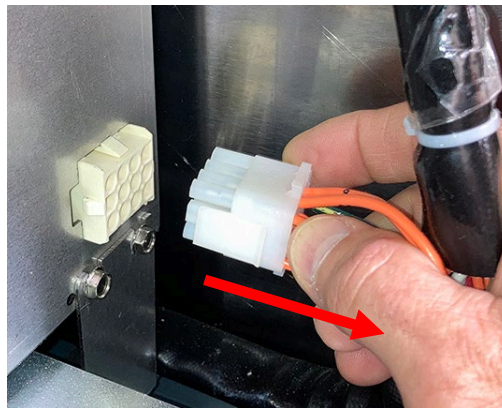


Figure 2

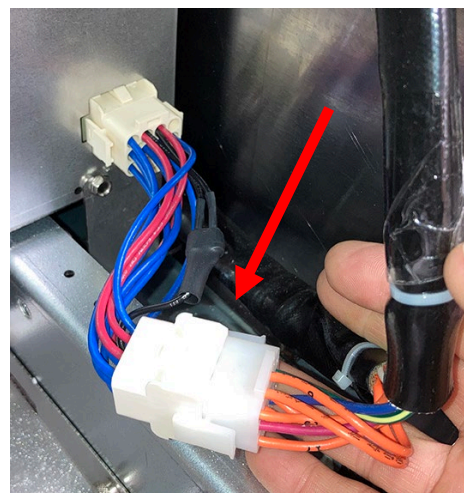


Figure 4

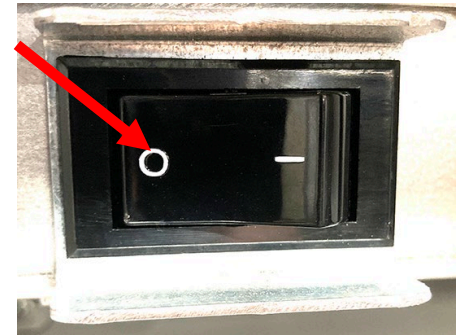


Figure 1

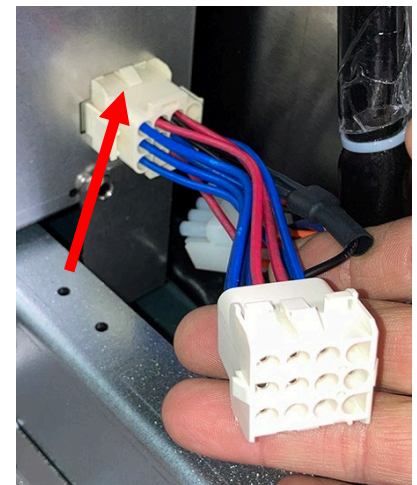


Figure 3

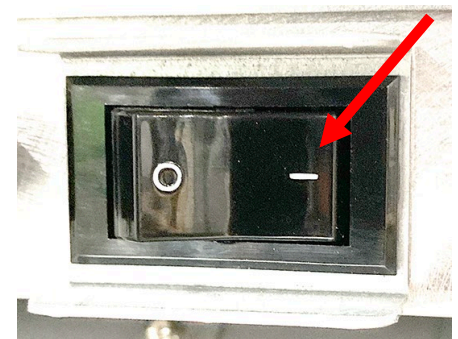


Figure 5