Frymaster[®]

318-865-1711 800-551-8633 WWW.FRYMASTER.COM

EMAIL: FRYSERVICE@WELBILT.COM

Instruction Sheet

Follow these instructions to replace a USB adaptor on a UHCTHD.

- 1. Disconnect power from the cabinet.
- 2. Remove the top cover of the cabinet by removing the four (4) Phillips head screws that attach the cover.
- 3. Push down on the clip attaching the cable and disconnect the USB cable from the rear of the USB adaptor (see Figure 1).
- 4. Push the tabs on both sides of the USB adaptor and push out of the cabinet (see Figure 2).
- 5. Remove the retaining nut from the new USB adaptor.
- 6. Slide an adaptor plate over the USB cable and insert the new USB drive into the opening of the cabinet (see Figure 3).
- 7. Using a small amount of force push on the USB port so it is fully seated into the cabinet (see Figure 4).
- 8. Slide the rear adaptor plate and the retaining nut onto the rear of the
 - USB adaptor and secure (see Figure 5).
- 9. Connect the USB extension cable to the disconnected cable in step # 3 (see Figure 6).

Figure 4

10. Reverse steps 1-2 to return the cabinet to service.

Subject: 8263804 UHCTHD USB Adaptor Kit Models affected: McDonald's UHCTHD Holding Cabinets

In This Kit		
Part #	Description	Qty
8155041	USB, SELF CLOSING FLANGE	1
130233833	USB, ADAPTER PLATE	2
8198031	INSTRUCTIONS	1





Figure 1

Figure 2



Figure 3



Figure 5



Figure 6



