









Instruction Sheet

Please make the following change to the preferences settings to correct the UHCTHD countdown timer DISCARD function.

Subject: Correct UHCTHD Default Countdown Timer Discard Function

Models affected: McDonald's UHCTHD Holding Cabinets

1. Cancel all timers and power cycle the cabinet.
2. Press the home  button.
3. Press the settings  icon (gear).
4. Swipe to Utilities screen (see Figure 1).
5. Press the  button in lower left corner.
6. Enter 159357 (see Figure 2).
7. Press the check mark .
8. Select Discard flash enable option (see Figure 3).
9. With the Discard flash enable **checked**, press the check mark .
10. Once the border changes to yellow with the Discard flash enable option checked, press the unlock button . The button changes to locked.
11. Press the back button .
12. Press "Press and Go" .
13. Power cycle the cabinet.

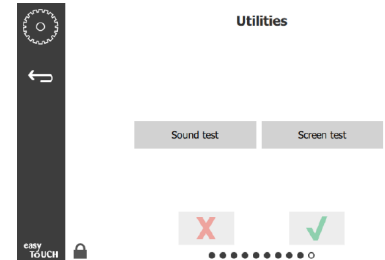 


Figure 1

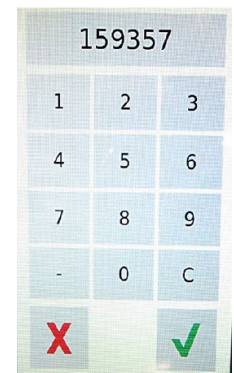 


Figure 2

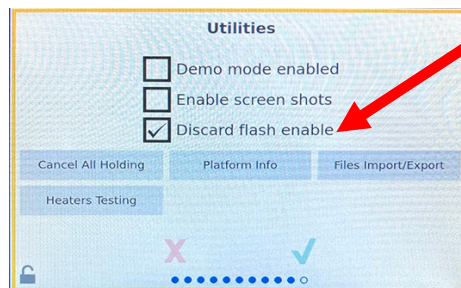 


Figure 3