

Instruction Sheet

Follow these instructions to inspect the **GREEN** start buttons on Rasing Cane's fryers.

Subject: Raising Cane's Green Button Inspection Instructions

Models affected: Raising Cane's FQG80-T, FQE80-T Touch Screen Fryers

1. Remove the two Phillips head screws from the upper left and right corners of the controller (see Figure 1).
2. Slide the controller up to disengage it from the bezel (see Figure 2).
3. Lift the controller out from the bezel (see Figure 3).



Figure 1



Figure 2

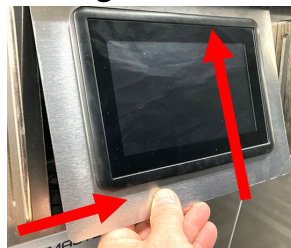


Figure 3

4. Lower the controller and rest it on the bottom of the control box (see Figure 4). The black tether on the right will support the controller.

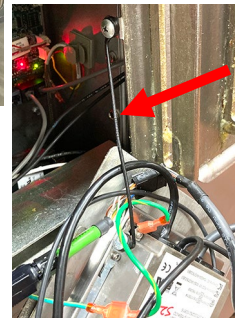


Figure 4

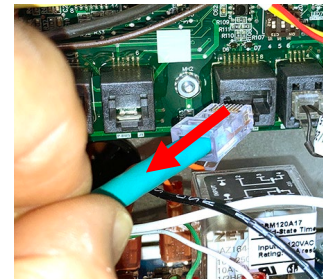


Figure 5

5. Disconnect the RJ45 cable from the SIB board **FIRST** (see Figure 5).
6. Disconnect the ground cable and the speaker cable and the USB cable (if applicable) (see Figure 6).
7. Disconnect the lanyard tether from the frame (see Figure 7) to remove the controller.
8. Remove the bezel by removing the two screws on the bottom of the bezel (see Figure 8).

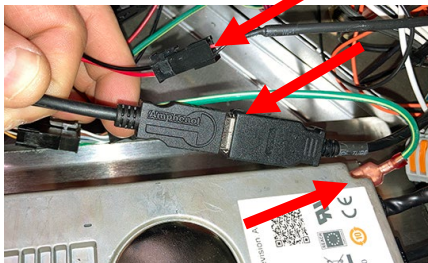


Figure 6

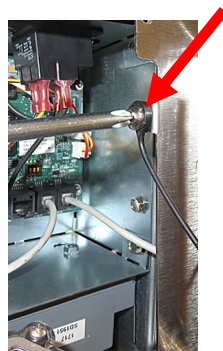


Figure 7



Figure 8

9. Tilt the bezel up from the bottom and lower towards the front of the fryer (see Figure 9).
10. Rest the bezel upside down on the control box (see Figure 10).
11. Using a standard screwdriver, ensure that both set screws on each switch are securely tightened to the bezel (see Figures 11, 12, 13 & 14).
12. Using a Phillips screwdriver ensure the screw on the rear of the green button is securely tightened (see Figure 15).
13. Reattach the bezel.
14. Reattach the controller to the fryer ensuring the lanyard is connected **FIRST** (see Figure 16).
15. Attach the speaker wire, the ground wire and the USB with the sleeve to the USB extension if in the far-left position on the fryer (see Figure 17).
16. Attach the RJ45 cable to the SIB board (see Figure 18).
17. Attach the controller to the bezel reversing steps 1, 2 and 3. Attach using the two (2) screws removed in step 4.
18. Repeat steps 1-17 for other fryers.



Figure 9

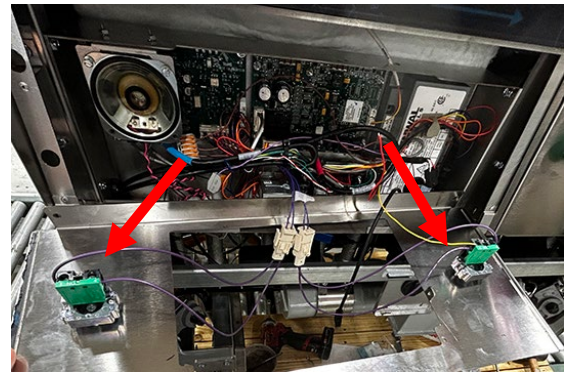


Figure 10

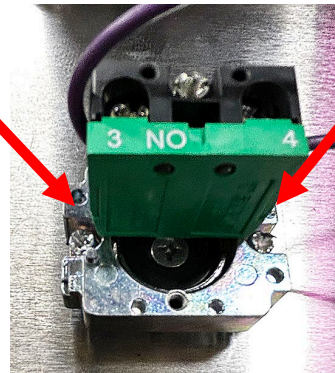


Figure 11

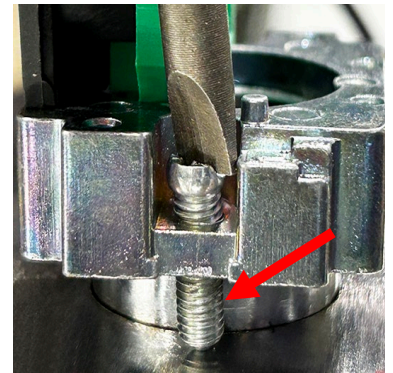


Figure 12

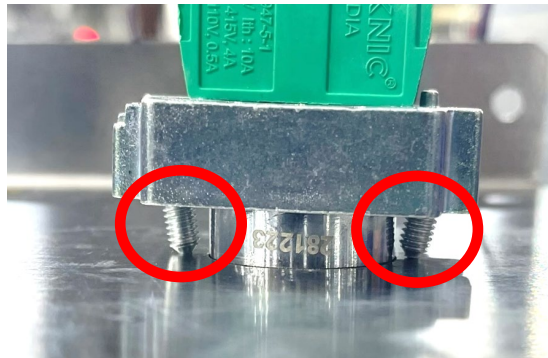


Figure 13

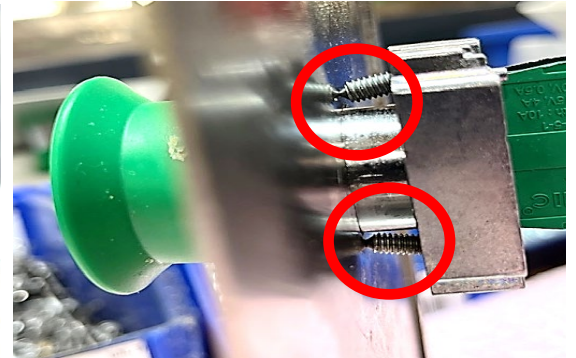


Figure 14

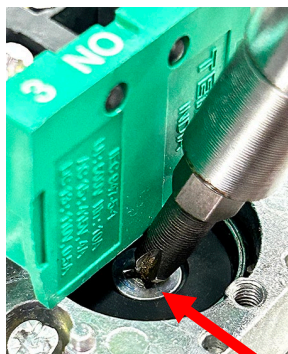


Figure 15

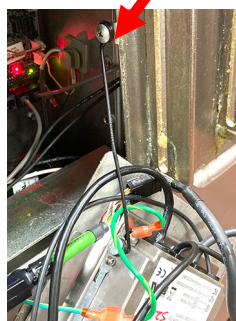


Figure 16

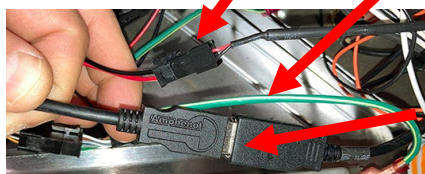


Figure 17

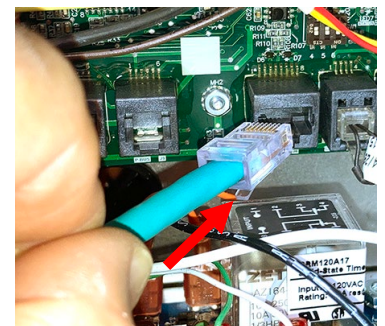


Figure 18