

Updating the Menus Pushed to Your Touchscreen Fryer

Let's get started

Step 1 - Turn OFF Fryers

Press the power button  on each display above the home button to ensure **ALL** controllers are **OFF**.




Step 2 - Press the Software/Menu Update Available Button

Press the **YELLOW** down arrow under **SOFTWARE/MENU UPDATE AVAILABLE**.


Step 3 - Menu Upgrade

MENU UPGRADE? YES NO is displayed. Press **YES**.

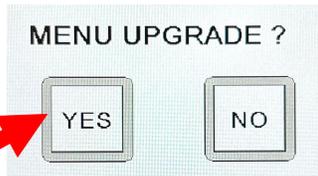


Step 4 - Select Vats

SELECT THE VATS FOR MENU UPGRADE is displayed. Select 1 for single fryers; Select 1 and 2 for double fryers. Press the .

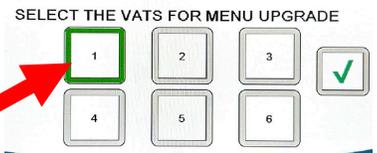


Single Fryer

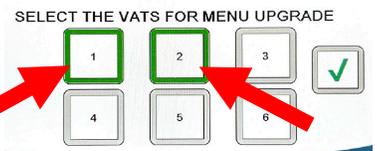

Double Fryer

Step 5 - Menu Upgrade In Process

Wait while **MENU UPGRADE IN PROCESS** is displayed followed by **UPGRADE COMPLETION IN PROGRESS WAIT FOR 30 SECONDS ENSURE THAT ALL VATS DISPLAY UPGRADE COMPLETE**

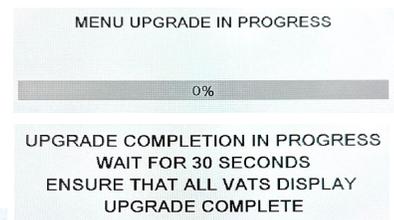

Step 6 - Upgrade Complete

UPGRADE COMPLETE? YES is displayed. Press **YES**.



Step 7 - Menu Upgrade Completed

MENU UPGRADE COMPLETED, WAIT FOR 60 SECONDS, REMOVE USB AND RESTART THE ENTIRE BATTERY is displayed. Wait 60 seconds. Open the door and turn off the **BLACK** switch(es) for 60 seconds, to power down the entire fryer. Then turn the switch(es) back ON. The menus have loaded.

MENU UPGRADE COMPLETED, WAIT FOR 60 SECONDS, REMOVE THE USB AND RESTART THE ENTIRE BATTERY

