

Instruction Sheet

Follow these instructions to dispose
the Touch Screen Controller.

Subject: Touch Screen Controller Disposal Instructions

04/1/2025

1. Disconnect power from the unit.
2. Disconnect and remove the affected controller.
3. Lay the affected controller face down on a flat surface.
4. Using a standard screwdriver, remove the round cover from the rear of the controller (see Figure 2).
5. Gently slide the lock towards the **OPEN** arrow (see Figure 3).
6. Gently lift the lock (see Figure 4).
7. Gently lift and remove the Micro SD card from the slot (see Figure 5).
8. Reformat the SD card or destroy the SD card.
9. Follow local ordinances for proper disposal of the controller and or SD card.
10. Connect the new the controller.
11. Reconnect power and return to service.
12. Ensure the new controller boots up. If not check connections.



Figure 1



Figure 2

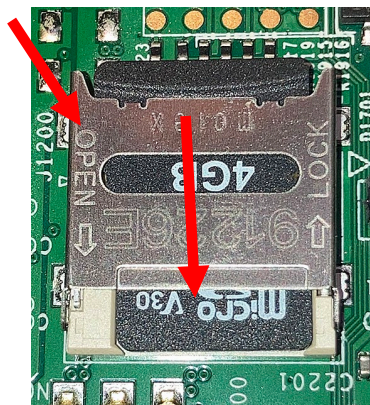


Figure 3

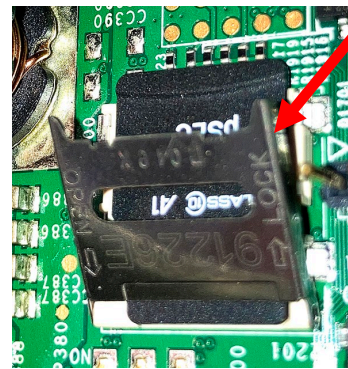


Figure 4

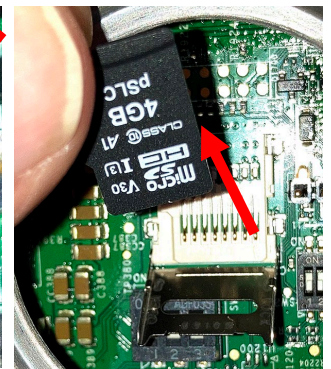


Figure 5