


## Updating the Software Pushed to Your 4000 Touchscreen Fryer

*Let's get started*

### Step 1 – Turn OFF Fryers

Press the power button  on each display above the home button to ensure **ALL** controllers are **OFF**.



### Step 2 – Press the Software/Menu Update Available Button

Press the **YELLOW** down arrow under **SOFTWARE/MENU UPDATE AVAILABLE**.

### Step 3 – PROCEED WITH SOFTWARE UPDATE? YES NO is displayed.


Press **YES**.

PROCEED WITH SOFTWARE UPDATE?



### Step 4 – Data Transfer In Progress

Wait while **UIB/UIC – DATA TRANSFER IN PROGRESS, WILL COMPLETE IN 15 MINUTES** is displayed followed by **UPGRADE COMPLETION IN PROGRESS WAIT FOR 30 SECONDS ENSURE THAT ALL VATS DISPLAY UPGRADE COMPLETE**

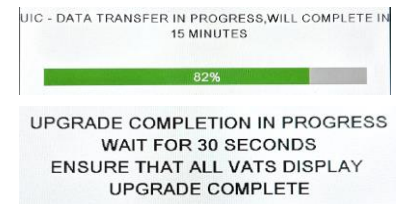

### Step 5 – Upgrade Complete

**UPGRADE COMPLETE? YES** is displayed. Press **YES**.



### Step 6 – Power Cycle the System

**UPGRADE COMPLETED, POWER CYCLE THE SYSTEM** is displayed. Open the door and turn off the **BLACK** switch(es) for 60 seconds, to power down the entire fryer. Then turn the switch(es) back ON. The software has loaded.

UPGRADE COMPLETED, POWER CYCLE SYSTEM



8 1 9 8 0 7 6  
06/2025