

Enabling Automatic Software Upgrade 4000 Touchscreen Fryer

Step 1 – Turn OFF Fryers

1. Press the power button  on each display above the home button to ensure **ALL** controllers are **OFF**.
2. On the far-left controller press .
3. Press  (Settings).
4. Press  (Service).
5. Enter **3000** for Non-McDonald's or **1650** for McDonald's.
6. Press .
7. Press  five times (5X).
8. Select **AUTO SW UPGRADE SETTINGS**.
9. Select **AUTO SW UPGRADE ENABLE/DISABLE**.
10. Select **ENABLE**.
11. Press .
12. Select **AUTO SW UPGRADE TIME**.
13. Enter the time in 24-hour format when the software upgrade should take place. (Example if the upgrade is desired at 11:00pm, enter 23 hours and 00 minutes).
14. Press  after entering each time.
15. Press .
16. Press .
17. Press  to exit.
18. **PUSH and HOLD** the black momentary reset switch for **60 SECONDS**. The reset switch is located inside the left door on the lower left control box near the fuses (see photo to the right).

