


Masterfil® Quick Reference

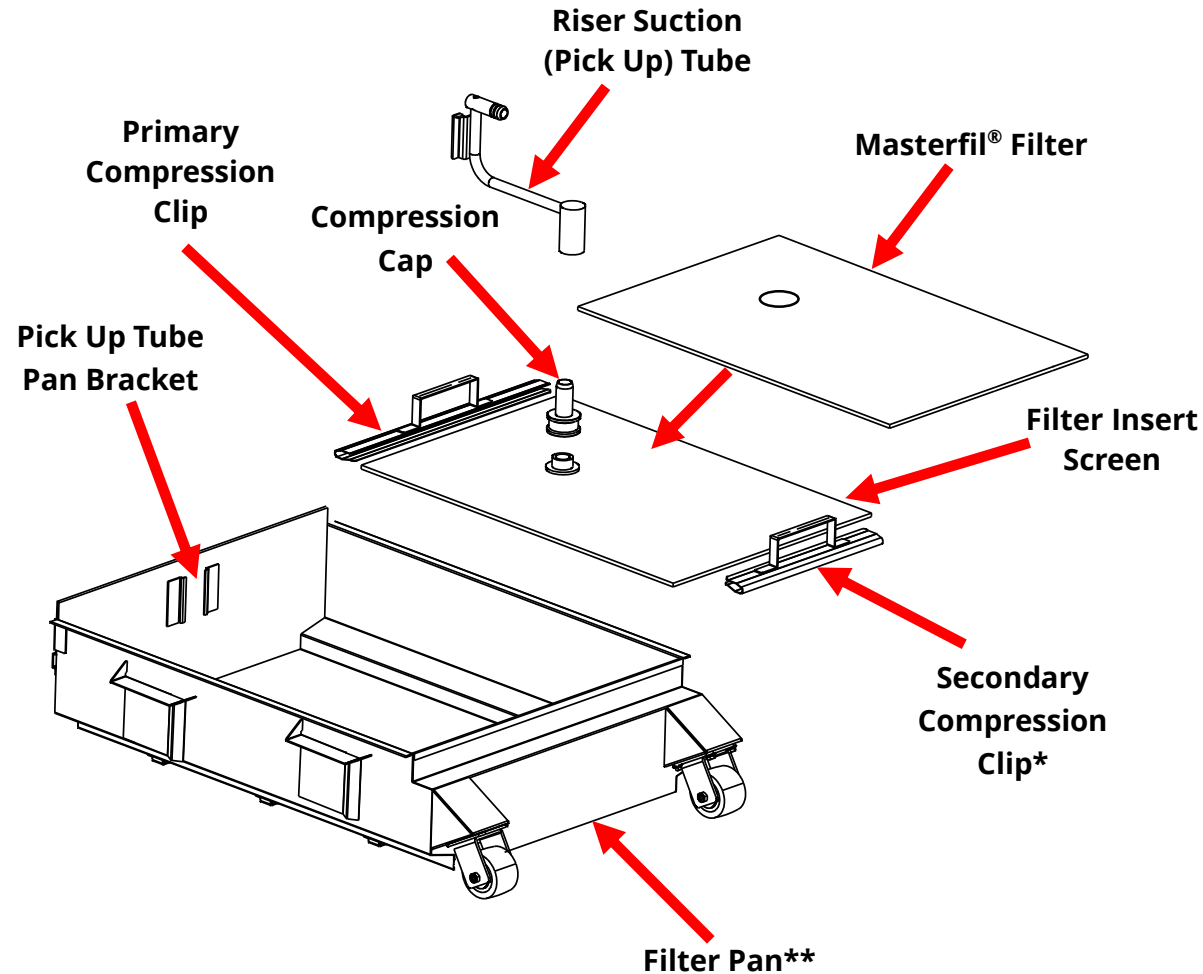

Changing the Masterfil®
Filter Video [Link](#) and QR
code above.

* **NOTE:** Not all assemblies use secondary clips.
** Pan appearance may differ between pans.

Frymaster®



FRY_QR_8198106 10/2026

Replacing the Masterfil® Filter Envelope

The Masterfil filter envelope must be scraped whenever it slows down filtering.



The filter **MUST** be scraped whenever it slows down filtering. The filter should last at least 7-10 days before replacing. Follow these instructions to replace the filter envelope:

Remove and disassemble the assembly. Discard old filter envelope. Clean and dry **ALL** parts thoroughly. **DO NOT leave any water in the pan.**

Reassemble the pan in this order:

1. Insert the inner screen into the envelope.
2. Securely screw the compression cap fitting to the screen.
3. The compression cap fitting screwed to the screen.
4. Fold the end of the envelope over the screen.
5. Slide the large compression clip over the folded end of the filter envelope.

6. Slide the small compression clip over the other end if applicable. (***Not present in all assemblies***)
7. Slide pick-up suction tube over cap fitting.
8. Insert the filter into the pan. Ensure the pick-up tube is secured in the pan bracket.
9. Insert the filter pan fully into fryer. Ensure the "P" is **NOT** visible on the display in upper right corner.