


# Frymaster LOV Fryer with M3000 Controllers

## Adding the Chicken Big Mac

These instructions are for Frymaster Gas and Electric 30-pound LOV (Low Oil Volume) fryers, with model numbers that begin with BIELA or BIGLA using the M3000 controller, which can be identified by the photo below.

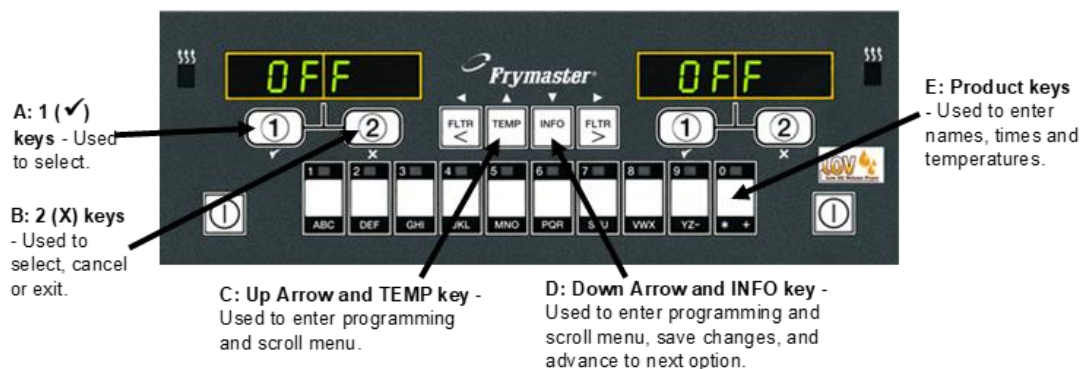

1. With the computer **OFF** press and hold the **TEMP and INFO** buttons simultaneously until **LEVEL 1** is displayed (C and D above) and release the buttons.
2. The computer displays **ENTER CODE**.
3. Enter **1234** using the number keys (E above). The computer displays **LEVEL 1 PROGRAM** for three (3) seconds changing to **PRODUCT SELECTION**.
4. With **PRODUCT SELECTION** displayed, press the ✓ (**1 YES**) button (A above).
5. With **SELECT PRODUCT** displayed on the left and **FR FRIES** displayed on the right, press the ▼ button (D above) to advance through menu items until the desired product is displayed. (For new menu items scroll until you reach the numbered product placeholders, i.e. "TEST 1").
6. Press the ✓ (**1 YES**) button (A above) twice (**2X**) to select the desired product to modify.
7. With **NAME** displayed on the left, and the product displayed on the right.
8. To edit the name, use the 1-0 buttons to enter the letters and the left and right arrows to move to the next letter in the product name. **CHK MAC**.
9. Press the ▼ button (D above) to advance to **COOK TIME**.
10. With **COOK TIME** displayed on the left, use the number keys (E above) to check or enter the product cook time in minutes and seconds. **[3:20]**
11. With the cook time entered, press the ▼ (INFO) button (D above) once to save the cook time.
12. **TEMP** will appear in the left display. Use the 1-0 to enter the set the set point (cooking temperature) **[360]** and press the ▼ (INFO) button (D above) once to save the set point (cooking temperature).
13. **COOK ID** will appear in the left display. Use the 1-0 buttons to edit the short (4 letter abbreviation) **CKMC**.
14. Press the ▼ (INFO) button to advance to "DUTY TIME" and use the 1-0 set the time in minutes and seconds. **[00:30]**
15. Press the ▼ (INFO) button four times to advance to "ASSIGN BUTTON". Select a button 1-0 for the product.
16. Press the ▼ (INFO) button. Name appears in the left display and the product is displayed in the right.
17. Press the \* (2) button (B above) three times to exit the editing menu.



**8198037MC CBMM3K**

Chicken Big Mac M3K 12/2025

## ENTERING THE LOAD COMPENSATION SETTING

1. With the computer **OFF** press and hold the **TEMP and INFO** buttons simultaneously (Level 1 will appear first). Keep holding longer until **LEVEL 2** is displayed (C and D above) and release the buttons.
2. The computer displays **ENTER CODE**.
3. Enter **1234** using the number keys (E above). The computer displays until **LEVEL 2 PROGRAM** for three (3) seconds changing to **PROD COMP**.
4. With **PROD COMP** displayed, press the ✓ (**1 YES**) button (A above). The computer displays **PRODUCT SELECTION** for three seconds then displays **SELECT PRODUCT**.
5. With **SELECT PRODUCT** displayed on the left and **FR FRIES** displayed on the right, press the ▼ button (D above) to advance through menu items until **CKN BIGMAC** is displayed.
6. Press the ✓ (**1 YES**) button (A above) twice (2X) to select the product to modify.
7. With **LOAD COMP** displayed on the left, use the number keys (E above) to enter the product compensation value of **4**.
8. With the **LOAD COMP** entered, press the ✓ (**1 YES**) button (A above) once to save the **LOAD COMP** value.
9. Repeat steps 5 through 8 above to make changes to each of the specific products.
10. Press the \* (**2**) button (B above) twice (**2X**) to exit.