

1814 Computer Operation Manual



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.

www.frymaster.com

24-Hour Service Hotline
1-800-551-8633

06/2015



NOTICE TO OWNERS OF UNITS EQUIPPED WITH COMPUTERS

U.S.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

CANADA

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites de classe A et B prescrites dans la norme NMB-003 édictée par le Ministre des Communications du Canada.

1814 Computer

Overview – Multi-Product Mode (5050)

Lane Keys
Press to initiate cook cycle. PROD appears in left display; press a menu key immediately after pressing the cook key to launch a cook cycle for the chosen product. Lane keys are also used to move through programming steps. Press second key to advance, first (yellow) key to go back.
NOTE: The "B" (blue) key is disabled when setup for two-lane.

Temperature Key
Press once for current temperature, twice for setpoint: 360°F(182°C).


Checkmark Key
With computer off, used to enter and confirm programming modes.

Status Indicator
Displays OFF when fryer is off, dashed lines when fryer is at setpoint. Displays HI, LO and HOT when the fryer is out of temperature range.

Heat LED
LED is illuminated when the fryer is heating.

Button LED's
LED's above buttons are illuminated when the product is cooking; flash to indicate holding time.

ON/OFF

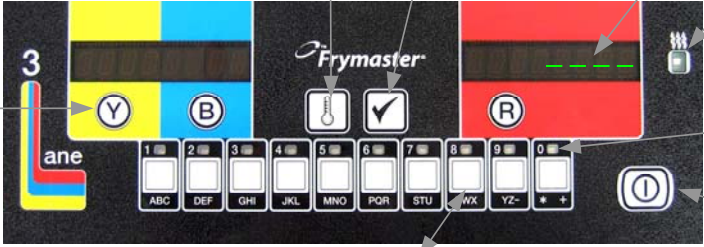

Menu Keys


Press a menu key immediately after pressing a lane key to launch a cook cycle for the desired product. The keys are also used to enter names of products. Each button, when repeatedly pressed, accesses multiple letters or symbols. See example below.

| | | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|----|-------------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| ABC | DEF | GHI | JKL | MNO | PQR | STU | VWX | YZ | * blank space + 0 |

Basic Operation


Turn Fryer ON

- 1: OFF appears in status display when controller is off.
- 2: Press ON/OFF button.
- 3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).
- 4: Dashed lines appear in the status display when the fryer is at setpoint.

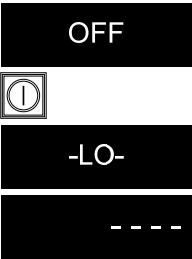

Launch Cook Cycle


1. Press a lane key.
2. PROD appears in the window above the pressed button. (An alarm sounds if a menu key is not pressed in five seconds.)
3. Press the menu key for the desired product.
4. The display changes to the cooktime for the product and then alternates between remaining cooktime and the product name.
5. SHAK is displayed if a shake time was programmed.
6. Shake the basket and press the lane key to silence the alarm.
7. DONE appears at the end of the cook cycle.
8. Press Lane key to eliminate DONE display and silence the alarm.
9. Quality time is indicated by a flashing LED over the menu key. Press the key to display remaining time.
10. LED flashes faster and an alarm sounds at the end of the quality countdown. Press the menu key under the flashing LED to halt the alarm.

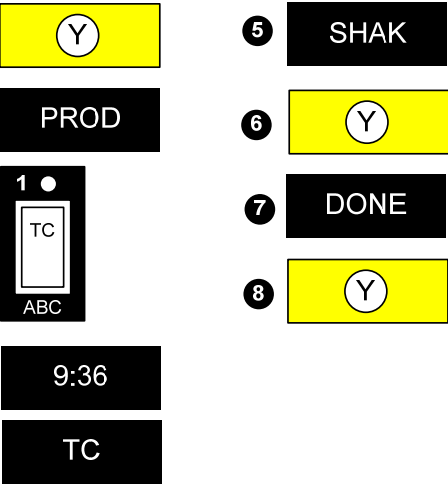

NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

1814 Computer


Overview – French Fry Mode (5060)

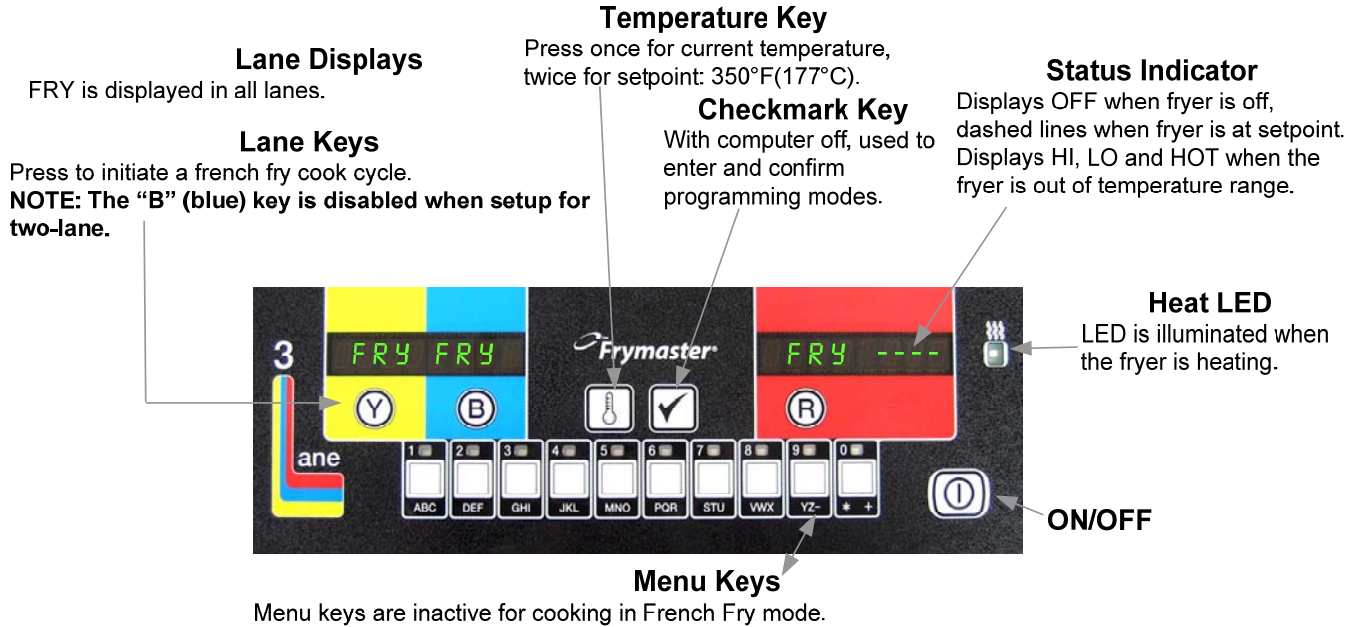

Basic Operation


Turn Fryer ON

- 1: OFF appears in status display when controller is off.
- 2: Press ON/OFF button.
- 3: -LO- appears in status display. If melt cycle is enabled, MLT-CYCL will appear until temperature is over 180°F (82°C).
- 4: Dashed lines appear in the status display when the fryer is at setpoint.

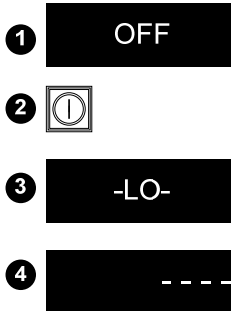

Launch Cook Cycle

- 1: FRY appears in all lanes.
- 2: Press a lane key.
- 3: The display changes to the cooktime for the fries, alternating with FRY.
4. SHAK is displayed if a shake time was programmed.
5. Shake the basket and press the lane key to silence the alarm.
6. DONE appears at the end of the cook cycle.
7. Press Lane key to eliminate DONE display.
- 8: Display alternates between FRY and quality countdown.

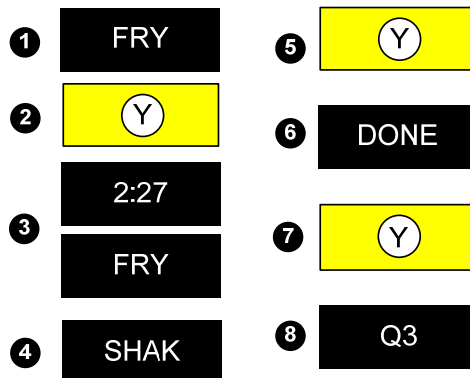

NOTE: To halt a cook cycle, press and hold the lane key under the displayed item for about five seconds.

Programming New Menu Items in Multi Product Computer

Follow these steps to enter a new product in the computer. The actions to be taken are in the right column; the computer displays are shown in the left and middle columns.

| Left Display | Right Display | Action |
|--|----------------|---|
| | OFF | Press ✓ |
| CODE | | Enter 5050 with numbered keys. |
| | OFF | Press ✓ |
| CODE | | Enter 1650 with numbered keys. Press lane key B (Blue) to advance cursor, Y (yellow) key to go back. (NOTE: Press ✓ if the controller is in any language except English, or the left display will be blank.) |
| TEND CC | 1 YES | Press key to advance to desired position. |
| Product to be changed or open position | Number and Yes | Press ↓ . |
| Product name with cursor flashing under first character. | Edit | Enter first letter of new product with numbered key. Press until desired letter appears. Advance cursor left key. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key. |
| New product name | Edit | Press ↓ . |
| Position number or version of previous name. | Edit | Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles. |
| Abbreviated name | Edit | Press ↓ . |
| Full name | | Press ✓. |
| SHAKE 1 | M:00 | Press ↓ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys. |
| SHAKE 1 | Your settings | Press ✓. |
| SHAKE 2 | M:00 | Press ↓ to toggle between M and A. Enter the time in the cook cycle to shake the basket a second time. |
| SHAKE 2 | Your settings | Press ✓. |
| REMOVE | M:00 | Enter cook time in minutes and seconds with numbered keys. Press ↓ to toggle between auto and manually cancelling alarm. |
| REMOVE | Your settings | Press ✓. |
| QUAL | M: 00 | Enter time product can be held after cooking. Press ↓ to toggle between auto and manually cancelling alarm. |
| QUAL | Your Settings | Press ✓. |
| SENS | 0 | Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered key. |
| SENS | Your setting | Press ✓. |
| New Product | | If a key assignment is needed: press a menu key. Note: This eliminates any previous link associated with the chosen key. Key not needed: skip to next step |
| New Product | YES Key Number | Press ⓐ (power key). |

Programming New Menu Items in Multi Product Computer

Assigning Products to Menu Keys

| Left Display | Right Display | Action |
|-------------------|---------------|---|
| | OFF | Press ✓. |
| CODE | | Enter 1650 with numbered keys. |
| Menu items | YES | Press B (Blue) key to advance through menu items. |
| Desired menu item | YES | Press key to be used to cook product. Note: This eliminates any previous link associated with the chosen key. |
| Product name | Number YES | Press ① (power key). |

Changing Menu Items in Dedicated Computer

Follow these steps to change a product in the computer. The actions to be taken are in the right column; the computer displays are shown in the left and middle columns.

| Left Display | Right Display | Action |
|--|---------------|---|
| | OFF | Press ✓ |
| CODE | | Enter 5060 with numbered keys. |
| | OFF | Press ✓ |
| CODE | | Enter 1650 with numbered keys. Press lane key B (Blue) to advance cursor, Y (yellow) key to go back. |
| FRIES | YES | Press ↓. |
| Product name with cursor flashing under first character. | Edit | Enter first letter of product name with numbered key. Press until desired letter appears. Advance cursor left key. Repeat until eight-letter or less name of product is entered. Eliminate characters with 0 key. |
| Product name | Edit | Press ↓. |
| Previous abbreviated name. | Edit | Enter four-letter abbreviated name, which will alternate with the cook time display during cook cycles. |
| Abbreviated name | Edit | Press ↓. |
| Full name | YES | Press ✓. |
| SHAK 1 | A :30 | Press ↓ to toggle between M (manually cancelling alarm) and A (automatically cancelling alarm). Enter time in the cook cycle to shake the basket with the numbered keys. |
| SHAK 1 | Your settings | Press ✓. |
| SHAK 2 | A :00 | Press ↓ to toggle between M and A. Enter the time in the cook cycle to shake the basket a |
| SHAK 2 | Your settings | Press ✓. |

| Left Display | Right Display | Action |
|--------------|---------------|--|
| REMOVE | M 2:35 | Enter cook time in minutes and seconds with numbered keys. Press ↓ to toggle between auto and manually cancelling alarm. |
| REMOVE | Your settings | Press ✓ . |
| QUAL | M 7:00 | Enter time product can be held after cooking. Press ↓ to toggle between auto and manually cancelling alarm. |
| QUAL | Your Settings | Press ✓ . |
| SENS | 0 | Sens allows the fryer controller to adjust cooking times slightly, ensuring small and large loads cook identically. Setting the number to 0 allows no time adjustment; a setting of 9 produces the most time adjustment. Enter setting with numbered keys. |
| SENS | Your setting | Press ✓ . |
| FRIES | YES | Press Ⓜ (power key). |
| | OFF | |

Computer Setup, Codes

Follow these steps to prepare the computer for placement on a fryer:

| Left Display | Right Display | Action |
|--------------|----------------------|---|
| | OFF | Press ✓. |
| CODE | | 1656 with numbered keys. |
| GAS | YES | Press ↓ to toggle between YES and NO. Leave at NO for electric fryer. |
| GAS | YES or NO | With desired answer in place press ✓. |
| 2 BASKET | NO | Press ↓ to toggle between YES and NO. Leave at NO for three baskets. |
| 2 BASKET | YES or NO | With desired answer in place, press ✓. |
| SET-TEMP | NOND 360 | Enter cooking temperature for non-dedicated items with the numbered keys; 360°F is the default setting. |
| SET-TEMP | Entered temperature. | Press ✓. |
| SET-TEMP | DED 350 | Enter cooking temperature for dedicated items with the numbered keys; 350°F is the default setting. |
| SET-TEMP | Entered temperature. | Press ✓. |
| | OFF | None. Setup is complete. |

| Left Display | Right Display | Action |
|--------------|---------------|---|
| | OFF | Press ✓ |
| CODE | | Enter <ul style="list-style-type: none"> • 1650: Add or edit menus • 1656: Setup, change energy source • 3322: Reload factory default settings • 5000: Displays total cook cycles. • 5005 Clears total cook cycles. • 5050: Sets unit to multi-product. • 5060: Sets unit to French Fries. • 1652: Recovery • 1653: Boil Out • 1658: Change from F° to C° • 1656: Setup • 1655: Language Choice |



Frymaster, L.L.C., 8700 Line Avenue, Shreveport, Louisiana 71106

TEL 1-318-865-1711
PRINTED IN THE UNITED STATES
ENGLISH

FAX (Parts) 1-318-688-2200
SERVICE HOTLINE
1-800-551-8633

FAX (Tech Support) 1-318-219-7135
819-6558
06/2015