


Lane Keys, Multi-Product mode
Press desired lane key and then desired menu key. Cook cycle is launched.

Temperature Key
Press once for current temperature, twice for setpoint, 360°F in multi-product mode.

Checkmark Key
Used to change modes, enter programming.

Status Indicator
Displays OFF when the fryer is off, dashed lines at setpoint. Displays Hi, LO or HOT when the fryer is out of temperature range.

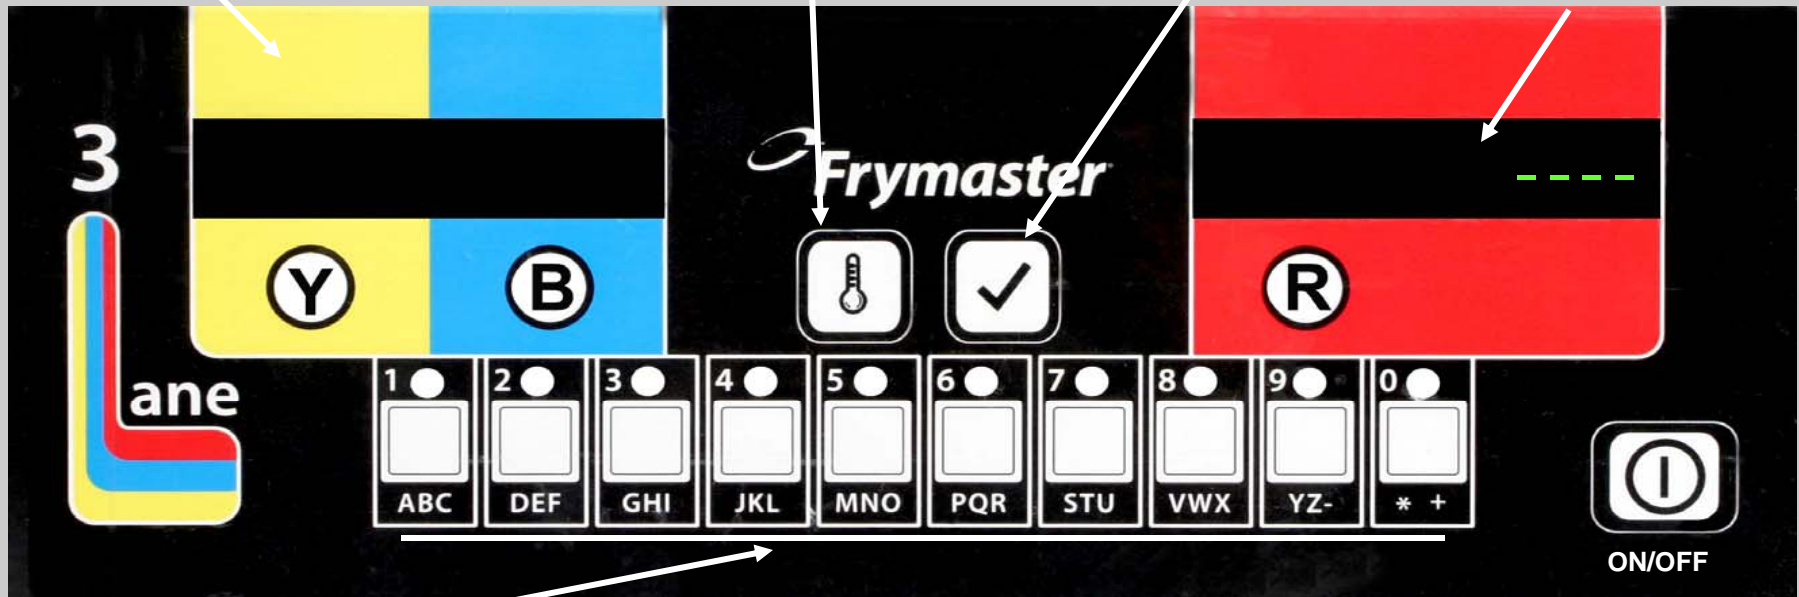

Menu Keys
Press a menu key after pressing a lane key. The chosen item is displayed and the cook cycle is launched; display alternates between menu item and remaining cook time. Keys inactive in dedicated mode.

NOTE: To clear cook cycles begun in error, press a menu key to start cook cycle and immediately press and hold lane key until display clears..

1814 Cooking Computer—Multi Product Mode

Basic Multi-Product Operation

1. Press ON/OFF key. Status display becomes LO, changing to dashed lines at setpoint.
2. Press desired lane key (Y, B or R). Display becomes Prod.
3. Press menu key for desired item. Item is displayed and cook cycle is under way.
4. Display alternates between menu item and remaining time, changing to DONE.

5. Press lane key to cancel alarm.
6. LED above menu key flashes to indicate quality time countdown. Press menu key to cancel quality countdown alarm.


Codes

With the computer displaying off, press checkmark key to enter codes.

- 5000:** Displays total cook cycles.
5005: Clears total cook cycles.

5050: Sets computer in multi-product mode. Menu keys are populated and dashed lines appear when the fryer is at setpoint.

5060: Sets computer in dedicated mode for fries. FRY displayed in all lanes; menu keys are inactive.

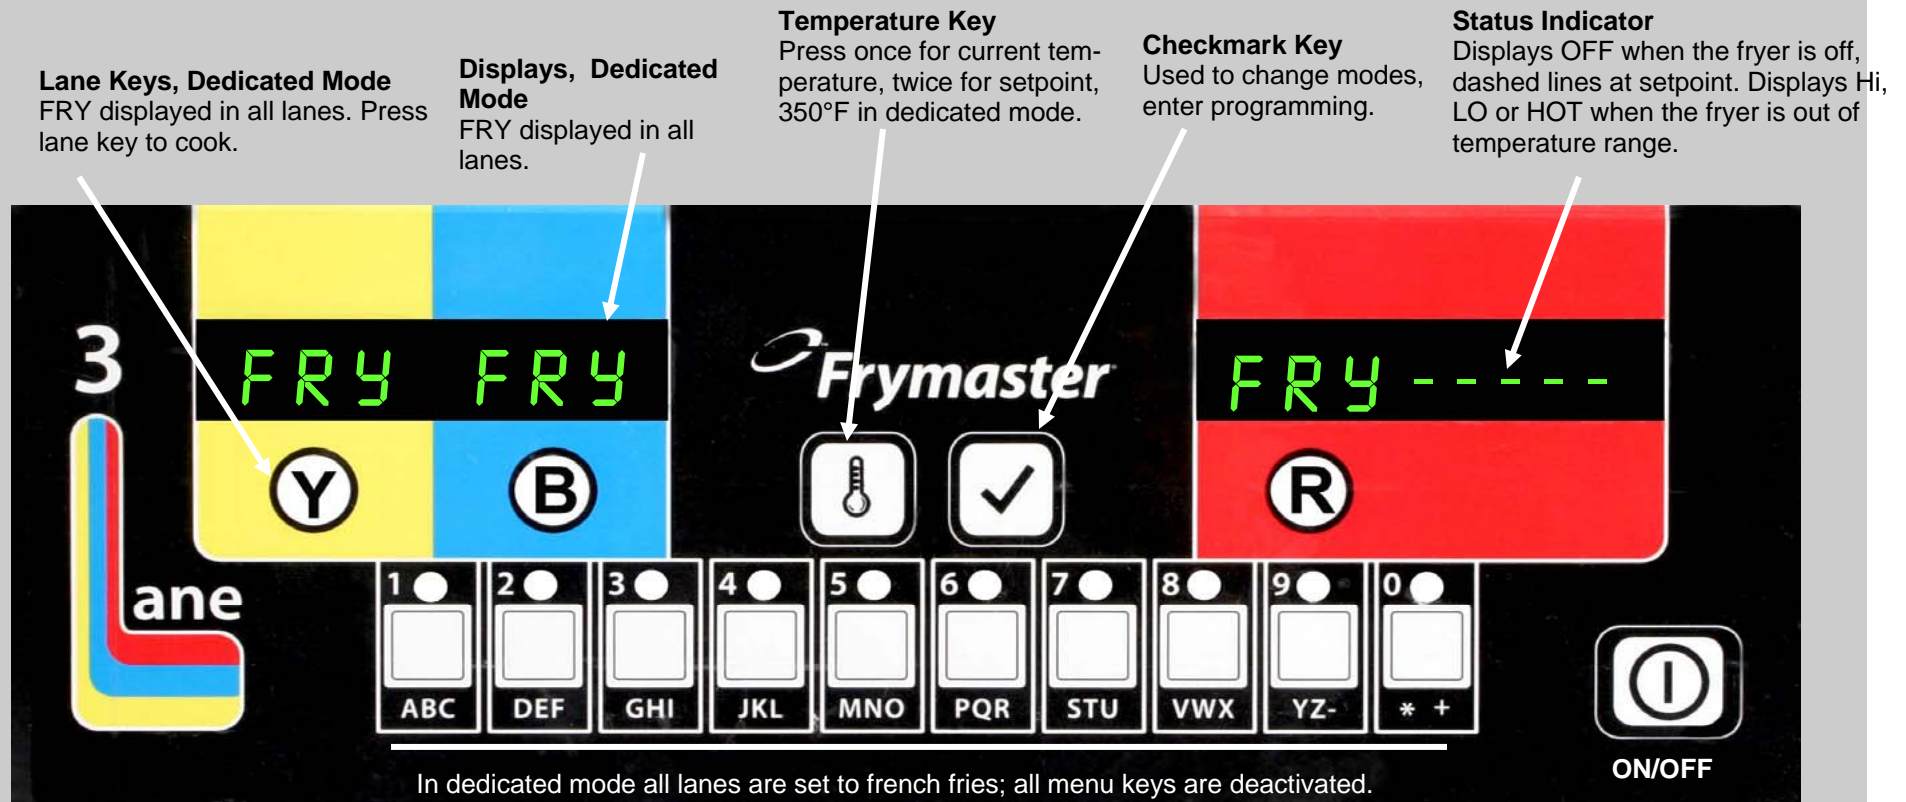

1814 Cooking Computer—Dedicated Mode

Basic Dedicated Mode

1. Press ON/OFF key. Status display becomes LO, changing to dashed lines at setpoint.
2. Lane display become FRY.
3. Press desired lane key.
4. Display becomes countdown timer, alternating with FRY..
5. Display becomes SHAK when the basket should be shaken. Press lane key to silence alarm.
6. Display becomes DONE at completion of

7. Display alternates between FRY and quality countdown timer, changing to FRY when the timer is complete. Cook cycles can be started when the countdown timer is active.

Codes

With the computer displaying off, press checkmark key to enter codes.

5000: Displays total cook cycles.

5005: Clears total cook cycles.

5050: Sets computer in multi-product mode.

Menu keys are active.

5060: Sets computer in dedicated mode for fries. FRY displayed in all lanes; menu keys are inactive.

 Frymaster