


# K3000: Quick Start

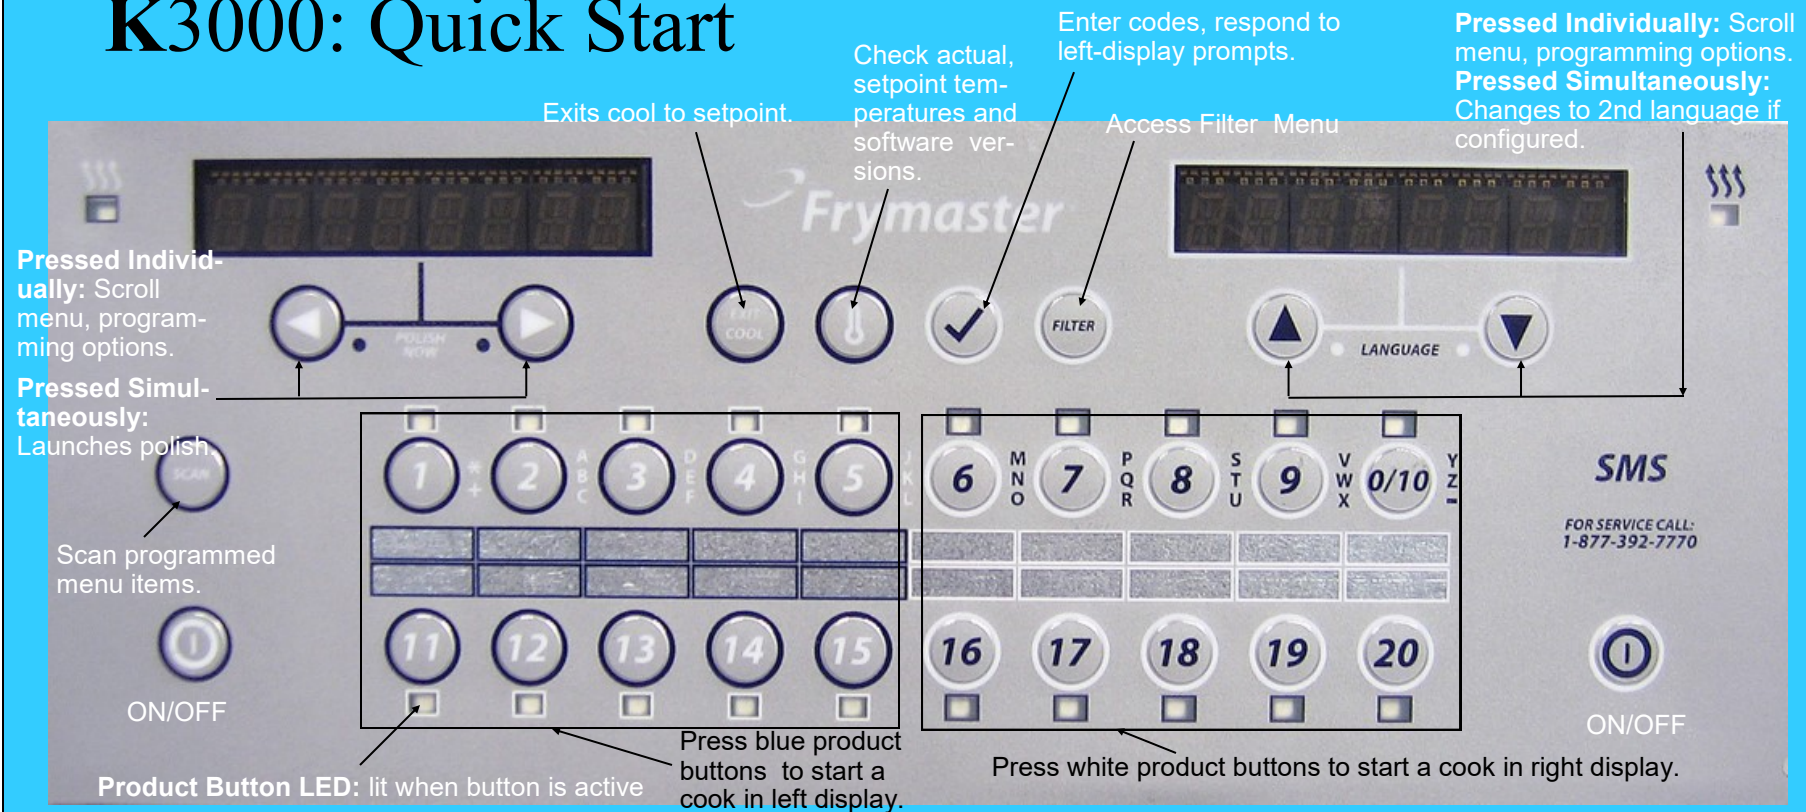

## ON/OFF

- Press ON/OFF button fryer heats to setpoint or idle temperature and displays: COOL or DROP.

## Cooking

- Fryer displays COOL or DROP
- **COOL display:** Press product button; fryer heats to setpoint and displays DROP.
- Press product button and drop product.
- **DROP display:** Press product button and drop product.
- **DONE displayed:** Press product button to cancel alarm.
- Press and hold product button to halt cook cycle.

## Responding to Polish Prompt

- Computer displays Polish Requested, alternating with Yes No.
- Press Yes (button under Yes display) and the polish cycle launches. Fryer turns off after polish cycle.

## Computer Button Navigation

- **Product:** Active when adjacent LED is lit. Press to launch cook cycle. Press and hold to stop a launched cook cycle. Press at end of cook cycle to halt alarm.
- **Scan:** Press once, all product buttons are lit; select product displayed. Press product button to view product name. Press Scan again to repeat. Press Scan twice to return to normal operation.
- **Left/Right Arrows (◀▶):** Navigate options in left display.
- **Up/Down Arrows (▼▲):** Navigate options in

right display.

- **Exit Cool:** Set fryer's cook cycle exit temperature to 250°F(121°C) or setpoint.
- **Thermometer: Fryer ON:** Press and release for setpoint/left; vat temp/right.
- **Thermometer: Fryer OFF:** Press to display temperature, time, date, system version, K3000 version, circuit board versions.
- **Checkmark(✓): Fryer OFF:** Press and hold 3 seconds: Scroll filter usage; Press and hold 10 seconds: Product setup. (Covered on back)
- **Checkmark(✓): Fryer OFF:** Respond to prompts.
- **Filter: Press and release:** Cooks remaining to filter cycle. **Press and hold:** Filter options: Auto filter, Clean, Dispose, Drain to Pan and Fill Vat from Pan.

Programming and computer navigation for the filter options are shown below. The left and middle column show the computer displays; the right column has the action necessary to continue. Exit from a programming step at any time by pressing the Scan key until the display returns to its pre-programming status. To delete a product from a button enter a time of 0:00 and press the SCAN button.

## Programming

Left Display	Right Display	Action
OFF	OFF	Press ✓ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press ✓
PRODUCT SETUP	ENTER CODE	Enter 1724
SELECT PRODUCT	Blank	Press desired product button
LONG NAME	PRODUCT NAME or BUTTON NUMBER	Enter product name with letter buttons. Use the ▼ button to advance to the next letter. Press the ► button.
SHORT NAME	PRODUCT NAME or BUTTON NUMBER	Enter abbreviated product name with letter buttons. Use the ▼ button to advance to the next letter. Press the ► button.
COOKING MODE	MULTIPLE SETPOINT	Press ►. If single setpoint cooking is desired press ▼ SINGLE SETPOINT.
1 TIME	0:00 or time	Enter time with numbered buttons. Press the ► button.
1 TEMPR	340 F or temp	Enter new temperature. Press the ► button.
1 FLEX	NUMBER	Set to desired position with ▼▲ buttons. Press the ► button.
1 PRESSURE SO-LENDID	OPEN	Set to desired position with ▼▲ buttons. Press the ► button. Default on non-pressure cookers is OPEN.
2 TIME	0:00 or time	Set time with numbered buttons. Press the ► button.
1 ALARM TIME	0:00 or time	Subtract the time from the cook time and enter time in cook cycle for audible alarm for shaking. Press the ► button.
1 ALARM NAME	SHAKE	Set to desired position with ▼▲ buttons. Press the ► button.
1 ALARM MODE	AUTO OR MANUAL	Set to desired position with ▼▲ buttons. Press the ► button.
1 ALARM TONE	SHORT,	Set to desired position with ▼▲ buttons. Press the ► button.
2 ALARM TIME	0:00 time	Set time with numbered buttons or leave at 0:00 for non-segmented. Press the ► button.
AFTER COOKING	COOL or SETPT	Enter mode the fryer should exit to after cook cycle: Cool = 250; Setpoint = cooking temp. Press the ► button.
FILTER LOCKOUT	0	Enter number of cook cycles before a filter. Press the ► button.
QUANTITY	NO	Set quantity per cook with numbered buttons. Press the ► button.
HEAD COUNT	0	Enter number of heads. Press the ► button.

Continued in next column

Left Display	Right Display	Action
INSTANT ON	0	Enter time in seconds the fryer heats before checking temperature. Press the ► button.
EXIT	EXIT	Press Scan button. More Programming? Press product button and follow instructions above Exit Programming? Press Scan Button.
OFF	OFF	

## Navigating Filter Options

Left Display	Right Display	Action
OFF, COOL, DROP	OFF, COOL, DROP	Press and release Filter button
Blank	Cooks remaining to filter cycle.	None required. Previous display returns
COOL, DROP	COOL, DROP	Press and hold Filter button for 10 seconds
AUTO FILTER	Blank	Press ▼ to scroll to choices: Filter, Clean, Dispose, Drain to Pan, Fill Vat from Pan and Exit. With the desired choice displayed press ✓ .

## Navigating Filter Status

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ 3 seconds.
INFO MODE	Blank	Press ✓
INFO MODE	Blank	Scroll options: Oil Stats, Filter Stats, Review Usage, Last Load with left right buttons. Confirm choice with check mark.
FILTER STATS*	Blank	Press ✓
DAY	DATE	Scroll days with ▼▲ buttons. Scroll to stats with ◀▶ buttons.
FILTERED	FILTER NUMBER AND DAY	Scroll days and filter cycles with ▼▲ buttons. Press ► button.
FLT BPSD	NUMBER OF FILTERS BYPASSED AND DAY	Scroll filters bypassed with ▼▲ buttons. Scroll to next stat with ◀▶ buttons
COOKS	NUMBER AND DAY	Scroll cooks completed with ▼▲ buttons. Scroll to next stat with ◀▶ buttons
HEADS	NUMBER AND DAY	Scroll heads cooked with ▼▲ buttons. Scroll to next stat with ◀▶ buttons
FLT AVG	NUMBER AND DAY	Scroll through average daily filter number with ▼▲ buttons. Scroll to Exit with ◀▶ buttons to return to operations.
EXIT	EXIT	Press Scan button twice.

\*Filter Stats shown. Navigate other choices the same way. See manual for more details.