


FE155 Controller Quick Reference

① **Displays:** Alternate between 5 *inn* (indicates simmer) and dashed lines at setpoint. °-Lo is displayed below setpoint, *boil* when the boil key is pressed.

② **Temperature keys:** Pressing either key displays actual temperature on the left, setpoint on the right, alternating with 5 *inn*. Press again to toggle to original display.

③ **Boil*/ Boost Key:** Raises water temperature to boil, from simmer, in about seven minutes. Launch cook cycles with timer keys; temperature keys are inactive. Displays show boil. Reverts to simmer temperature if a cook cycle is not started in 15 minutes.

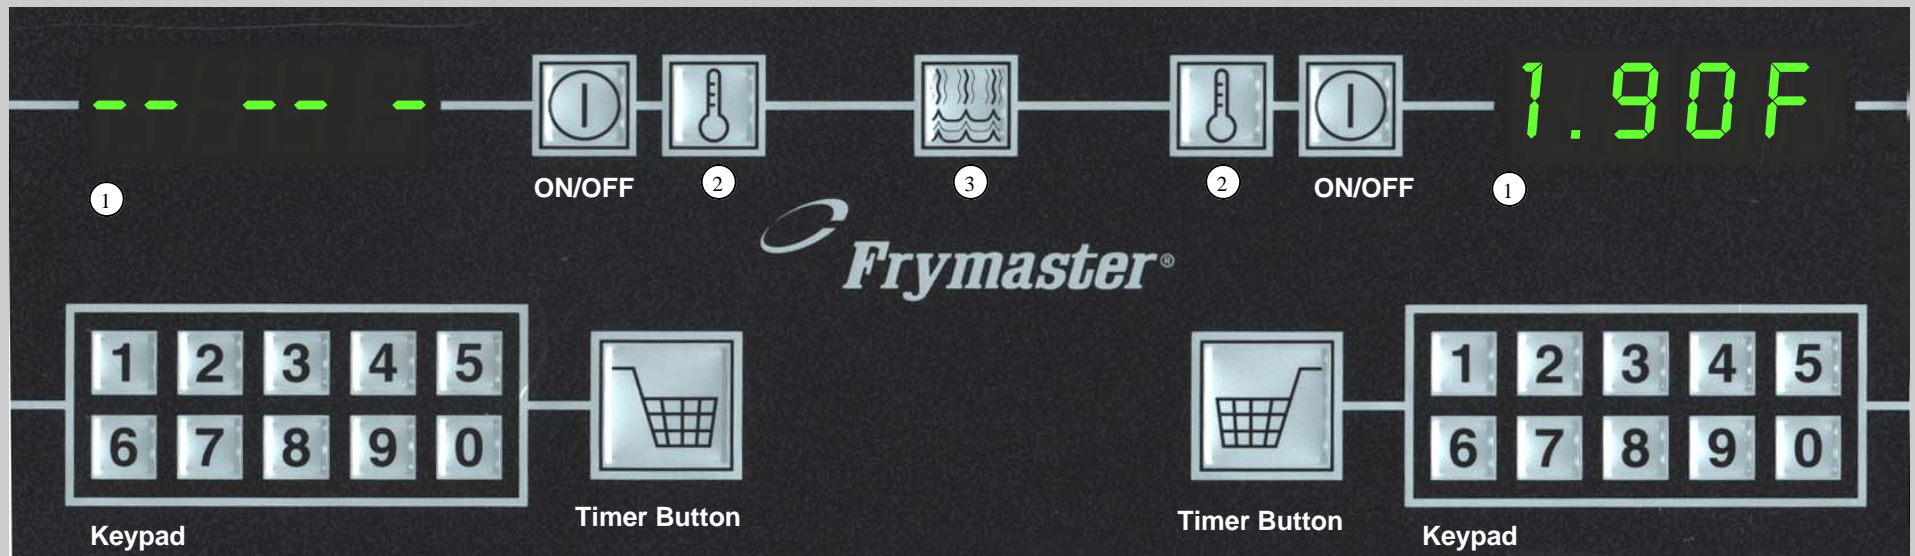

CONTROLLER

- Turn main power switch in cabinet on.
- Press either ON/OFF key to turn controller ON.
- Display alternates between °-Lo and 5 *inn* as it heats to setpoint.
- Adjust temperature or time as necessary (see adjacent programming instructions).
- Press temperature key to view water temperature. Display alternates between 5 *inn* and actual temperature on the left and the setpoint temperature on the right.
- Display alternates between dashed lines and 5 *inn* at setpoint or 5 *inn* and temperatures, actual and setpoint, if the temperature key is pressed.

PROGRAMMING

- **Temperature change:** Press temperature key until current cooking temperature is displayed on right. Enter new temperature with right key pad. Dot between last digit and F indicates change is accepted.
Note: Temperatures below 125°F and above 210°F cannot be entered.
- **Time Change:** Press temperature key until display alternates between SIM and dashed lines. Enter new time with key pad.

SIMMER OPERATION

- Controller displays 5 *inn*, alternating with dashed lines.
- Place product in vat and press desired timer key.
- Display alternates between 5 *inn* and remaining cook time.
- COOC is displayed at completion of cook cycle, alarm sounds.
- Remove product and press timer key to halt alarm. Display returns to 5 *inn*.

* Most rethermalizing is done at 190-195°F, the simmer temperature range. This key allows a quick change to boiling temperature without changing the controller.

BOIL*/ BOOST

- Controller displays 5 *inn*.
- Press Boil/Boost key; display becomes *boil*.
- Water rises to boiling from 190°F in approximately 7 minutes.
- Place product in vat, press desired timer key.
- Display alternates between *boil* and remaining cook time.
- COOC is displayed at completion of cook cycle, alarm sounds.
- Remove product; press timer key to end alarm.
- Display returns to 5 *inn* at end of cook cycle.



Finding Your Way Around the FE155


Routine Operation

Start-of-Day Refilling

- Ensure vat is clean and water is connected to the unit.
- Turn the main power switch on.
- Water fills vat.
- Turn controller on.

End-of-Day Draining

- Allow the water to cool.
- Turn the main power switch* off.
- Open the drain valve.
- Clean vat.

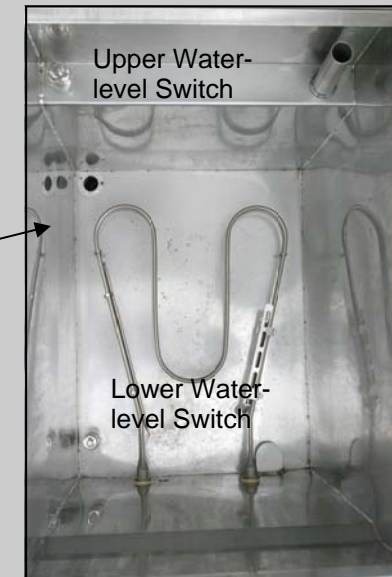

Vat



Cabinet interior

WARNING: Use extreme caution if draining hot water. Severe burns can be caused by hot water and steam. Follow all restaurant safety procedures.

 **Frymaster**