

**YUM F3000**  
**CONTROLLER**  
 Operation Manual



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.

**24-Hour Service Hotline 1-800-551-8633**

[www.frymaster.com](http://www.frymaster.com)

E-mail: [service@frymaster.com](mailto:service@frymaster.com)

FEB 2013



**NOTICE**

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THIS MANITOWOC FOOD SERVICE EQUIPMENT OTHER THAN AN **UNMODIFIED** NEW OR RECYCLED PART PURCHASED DIRECTLY FROM FRYMASTER DEAN, OR ANY OF ITS AUTHORIZED SERVICERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, FRYMASTER DEAN AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICER.

**NOTICE**

This appliance is intended for professional use only and is to be operated by qualified personnel only. A Frymaster Authorized Servicer (FAS) or other qualified professional should perform installation, maintenance, and repairs. Installation, maintenance, or repairs by unqualified personnel may void the manufacturer's warranty.

**NOTICE**

This equipment must be installed in accordance with the appropriate national and local codes of the country and/or region in which the appliance is installed.

**NOTICE TO OWNERS OF UNITS EQUIPPED WITH CONTROLLERS**

**U.S.**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

**CANADA**

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites de classe A et B prescrites dans la norme NMB-003 édictée par le Ministre des Communications du Canada.

** DANGER**


Prior to movement, testing, maintenance and any repair on your Frymaster fryer, disconnect ALL electrical power from the fryer.

**NOTICE**

The instructions in this manual for using a bulk oil system for filling and discarding oil are for a Frontline or RTI system. These instructions may not be applicable to other bulk oil systems.

# CHAPTER 1: F3000 CONTROLLER INSTRUCTIONS

## 1.1 Using the F3000

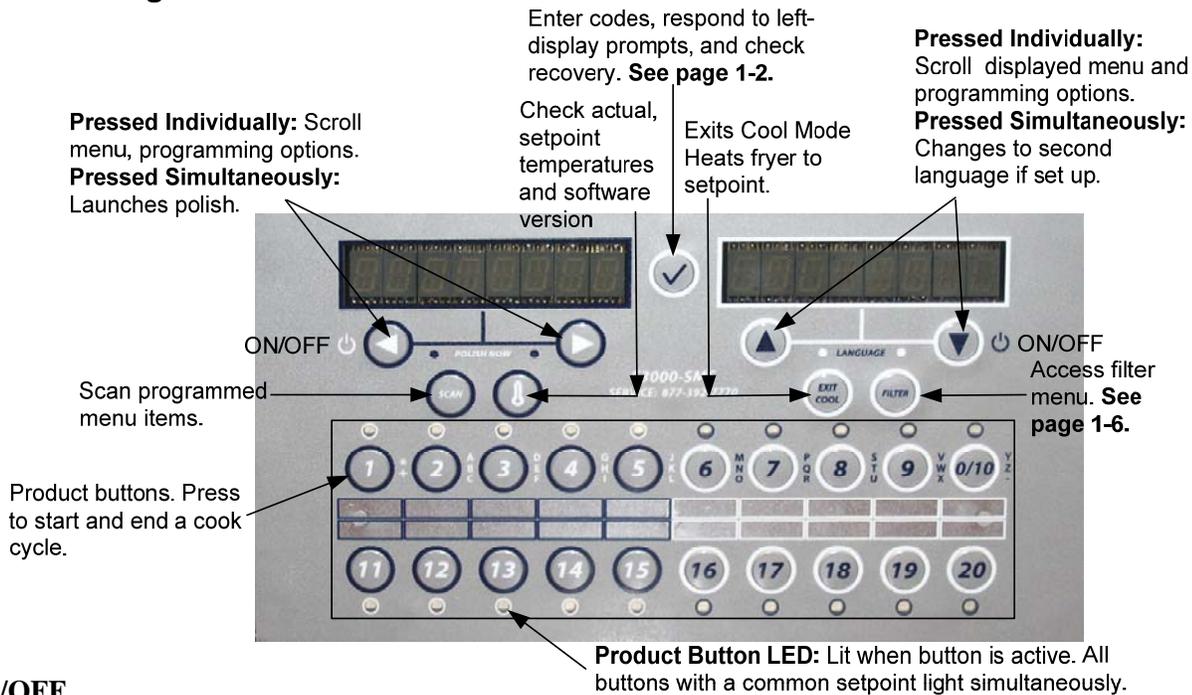

### ON/OFF

- **ON** - Press ON/OFF button fryer heats to setpoint or idle temperature and displays: COOL or DROP.
- **OFF**- Press and hold ON/OFF button. Controller displays OFF.

### Cooking

- Fryer displays COOL or DROP
- **COOL display:** Press product button; fryer heats to setpoint and displays DROP.
- **DROP display:** Press product button and drop product.
- **DONE display:** Press product button to cancel alarm.
- **CANCEL:** Press and hold product button to cancel a cook cycle.

### Responding to Polish Prompt

- Computer displays Polish Now, alternating with Yes No.
- Press Yes (button under Yes display) and the polish cycle launches.
- Computer displays Cool after polish cycle.

### Computer Button Navigation

- **Product:** Active when adjacent LED is lit. Press to launch cook cycle. Press and hold to cancel a launched cook cycle. Press at end of cook cycle to halt alarm and end cook.
- **Scan:** Press once, all product buttons are lit; Select Product displayed. Press product button to view product name. Press Scan again to repeat. Press Scan twice to return to normal operation.
- **Left/Right Arrows:** Navigate options in left display.
- **Up/Down Arrows:** Navigate options in right display. Press the up/down arrow simultaneously to change to a second language if one is selected in setup.
- **Exit Cool:** Exits cool mode and sets fryer's temperature to setpoint.
- **Thermometer: Fryer ON:** Press and release for setpoint/left; vat temp/right.
- **Thermometer: Fryer OFF:** Press to display temperature, time, date, system version, F3000 version and circuit board versions.
- **Checkmark: Fryer OFF:** Press and hold 3 seconds: Scroll filter usage; Press and hold 10 seconds: Product setup.
- **Checkmark: Fryer ON:** Check recovery and respond to prompts.
- **Filter: Press and release:** Cooks remaining to filter cycle. **Press and hold:** Filter options: Filter, Clean, Dispose, Drain to Pan and Fill Vat from Pan.

## 1.2 Navigating controller

Press and hold the checkmark button for 10 seconds produces the setup mode, which first displays Product Setup. Follow the steps below to navigate the options. Unpopulated fields indicate a blank display.

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ► to scroll: Vat Setup, Tech Mode, and Exit. With the desired selection displayed, press ✓ .
PRODUCT SETUP		Product setup (entering and editing menu items) is described on page 1-11 through 1-14.
VAT SETUP		Vat Setup is described on page 1-4.
TECH MODE		Tech mode is for technicians only.
EXIT	EXIT	Press Scan button until the controller displays OFF.

## 1.3 Viewing Operational Stats

The F3000 collects and stores information on the cook cycles and filter cycles. This data is accessed in the info mode, which is accessed by pressing the checkmark button. The steps to view the data are detailed below:

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until INFO MODE is displayed. Release and press ✓ .
<b>OIL STATS</b>		Press ► to scroll: Oil Stats, Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
TOTAL COOKS - LAST DISPOSE	Number	Press ►. (This is the number of cooks since the last dispose.)
TOTAL HEADS-LAST DISPOSE	Number	Press ►. (This is the number of heads cooked since the last dispose.)
LAST DISPOSE	DATE	Press ►. (This is the date of the last dispose.)
TEMP > 300F-TODAY	Number Hrs	Press ►. (This is the number of hours the temperature of the oil rose above 300°F during operation today.)
TEMP > 300F- SINCE DISPOSE	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since oil disposal.)
TEMP > 300F-1 BACK	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since the previous oil disposal.)
TEMP > 300F-2 BACK	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since two oil disposals ago.)
FILTERS-SINCE DISPOSE	Number	Press ►. (This is the number of filters since oil disposal.)
FILTERS-1 BACK	Number	Press ►. (This is the number of filters that have occurred since the previous oil disposal.)
FILTERS-2 BACK	Number	Press ►. (This is the number of filters that have occurred since two oil disposals ago.)
POLISHES-SINCE DISPOSE	Number	Press ►. (This is the number of polishes since oil disposal.)
POLISHES-1 BACK	Number	Press ►. (This is the number of polishes that have occurred since the previous oil disposal.)
POLISHES-2 BACK	Number	Press ►. (This is the number of polishes that have occurred since two oil disposals ago.)
RESET OIL STATS	YES NO	Press ► to scroll or ▼ to reset oil stats.
RESET OIL STATS	ENTER CODE	Enter 3228.
<b>Continued on the following page</b>		

### 1.3 Viewing Operational Stats cont.

Left Display	Right Display	Action
COMPLETE		None required.
EXIT	EXIT	Press ✓ button once to return to menu, or Scan button once to return the controller to OFF.
<b>FILTER STATS</b>		Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
MON	DATE	Press ▼▲ to scroll seven days of data. With the desired date displayed, press ►.
FILTERED	NUMBER AND DAY	Press ▼▲ to scroll number of times the vat was filtered in the seven -day period. Press ►.
FLT BPSD	NUMBER AND DAY	Press ▼▲ to scroll number of times the filter prompt was bypassed in the seven-day period. Press ►.
COOKS	NUMBER AND DAY	Press ▼▲ to scroll number of cook cycles that occurred in the seven-day period. Press ►.
HEADS	NUMBER AND DAY	Press ▼▲ to scroll number of heads that were cooked in the seven-day period. Press ►.
FLT AVG	NUMBER AND DAY	Press ▼▲ to scroll average number of daily filter cycles that occurred in the seven-day period. Press ►. Press ✓ button once to return to menu, or Scan button once to return the controller to OFF.
<b>REVIEW USAGE</b>		Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
USAGE SINCE		None required.
DATE	TIME	Press ►. (This is the date and time of the last usage reset.)
TOTAL COOKS	Number	Press ►. (This is the total number of cooks since the last usage reset.)
QUIT COOKS	Number	Press ►. (This is the total amount of cooks that were cancelled since the last reset usage.)
ON HOURS	Number	Press ►. (This is the total amount of hours the fryer was on since the last reset.)
RESET USAGE	YES NO	Press ► to scroll or ▲to reset oil stats usage.
RESET USAGE	ENTER CODE	Enter 3228.
COMPLETE		None required.
EXIT	EXIT	Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ or press Scan to return the controller to OFF.
<b>LAST LOAD</b>		Press ✓ .
PRODUCT	PRODUCT NAME	Press ►. (This is the product last cooked.)
STARTED	Time	Press ►. (This is the time the last cook started.)
ACTUAL TIME	Number Minutes	Press ►. (This is the actual cook time including flex time.)
PROGTIME	Number Minutes	Press ►. (This is the actual programmed cook time.)
MAX TEMP	Number	Press ►. (This is the maximum temperature of the oil during the last cook.)
MIN TEMP	Number	Press ►. (This is the minimum temperature of the oil during the last cook.)
AVG TEMP	Number	Press ►. (This is the average temperature of the oil during the last cook.)
HEAT ON	Number	Press ►. (This is the percentage of the cook time the heat source was on during the last cook.)
READY	YES OR NO	Press ►. (If the fryer was back to proper temperature before the cook cycle was started.)
EXIT	EXIT	Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ or press Scan button to return the controller to OFF.

## 1.4 F3000 Vat Setup

Setup mode allows the controller to be set for language displays, vat sizes, and temperature range displays. Follow the steps below to enter and navigate Vat Setup.

### Vat Set Up

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ► to scroll to Vat setup and press ✓. Product setup is described on pages 1-11 through 1-14.
VAT SETUP	ENTER CODE	Enter 3228.
SYSTEM		Press ✓ button or press ► to scroll to Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓. If SYSTEM is not chosen skip to the relevant selection.
LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►.
2ND LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►. (This option allows another language to be toggled easily from the front panel (ex. Spanish as a second language.)).
LOCALE	NON-CE	Press ▼▲ to scroll to choice Non-CE or CE and press ►.
ENERGY	GAS	Press ▼▲ to scroll to choice Gas or Electric and press ►.
TYPE	KJ3 FULL	Press ▼▲ to scroll choices. Once the fryer type is chosen, press ►.
SYSTEM VOLUME	9	Sets sound level for controller. Enter level, 1-9 (0=Lowest/ 9=Loudest). Press ►.
TEMPR FORMAT	F	Press ▼▲ to scroll choices: F for Fahrenheit; C for Celsius. Press ►.
EXIT MELT TEMPR	100F	Use numbered buttons to change default setting (use 10 for 0). Press ►. (This is the temperature for the fryer to exit the melt cycle.) Default is 100F (38C).
SETBACK TEMPR	250F	Use numbered buttons to change default setting (use 10 for 0). Press ►. (This is the temperature during setback or idle mode.) Default is 250F (121C).
FRESH OIL	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. <b>NOTE: All fryers should be set to NONE.</b>
WASTE	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. <b>NOTE: All fryers should be set to NONE.</b>
RECOVERY ALARM	DISABLED	Press ▼▲ to scroll choices DISABLED and ENABLED. (This is a recovery alarm that locks out the fryer if the fryer does not heat properly. The default is disabled). Press ►.
EXIT	EXIT	Press ✓ button.
OFF	OFF	None required.
TIME/DATE		Press ✓.
TIME ENTRY	TIME	Use numbered buttons to change time (use 10 for 0). Press ►.
DATE FORMAT	MM/DD/YY	Press ▼▲ to scroll choices. With the date format displayed, press ►.
ENTER DATE	DATE	Use numbered buttons to change date (use 10 for 0). Press ►.
EXIT	EXIT	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
DST SETUP	This is daylight savings time setup. In the United States, daylight savings time begins each year at 2:00 A.M. on the second Sunday in March, with clocks moving ahead one hour. Daylight savings time ends each year at 2:00 A.M. on the first Sunday in November, with clocks moving back one hour. For the two states and international locations, which do not use DST, set to disabled.	
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press ► to scroll to Vat setup and press ✓.
VAT SETUP	ENTER CODE	Enter 3228.
DST	ENABLED	Press ▼▲ to scroll choices DISABLED and ENABLED. Press ►. (This enables or disabled daylight savings time. Default is enabled.) If disabled is chosen, pressing the ► button, displays exit. Press the exit scan button three times to exit.

Continued on the following page

## 1.4 F3000 Vat Setup cont.

Left Display	Right Display	Action
<i>DST START MONTH</i>	3	Enter the daylight savings time starting month using the 1-10 keys. (Default is US government starting month “3”.) Press ►.
<i>DST START SUNDAY</i>	2	Enter the daylight savings time starting Sunday using the 1-10 keys. (Default is US government starting Sunday “2”.) Press ►.
<i>DST END MONTH</i>	11	Enter the daylight savings time ending month using the 1-10 keys. (Default is US government ending month “11”.) Press ►.
<i>DST END SUNDAY</i>	1	Enter the daylight savings time ending Sunday using the 1-10 keys. (Default is US government ending Sunday “1”.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log or Change Password. With desired choice displayed, press ✓ or press the Exit/Scan button three times to return the controller to OFF.
<b>FILTER</b>		Press ✓ .
<i>GLOBAL FILTER COUNT</i>	20	Press ►. (Changes the total number of cooks that occur before a filter prompt. The default is 20.)
<i>EOD FILTER TIME</i>	21:00	Use numbered buttons to change end of day filter alert time. Press ►. After this time, the controller prompts for filter when user presses the power button to go to the OFF state.
<i>1 POLISH TIMER</i>	<i>ENABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the polish timer.)
<i>1 POLISH TIME</i>	08:00	Use numbered buttons to change time (use 10 for 0). (This is the time the first polish prompt will occur each day. The default is 8:00 AM.) Press ►.
<i>1 POLISH DURATION</i>	30	Use numbered buttons to change (use 10 for 0). (This is the duration, in minutes for a polish. The default is 30 minutes.) Press ►.
<i>1 POLISH DELAY TIME</i>	00:00	Use numbered buttons to change time (use 10 for 0). (This is the amount of time that an operator can delay the start of a polish.) Press ►. After the delay the operator must polish.
<i>1 POLISH START TEMPR</i>	300F	Use numbered buttons to change temperature (use 10 for 0). (This is the temperature required for a polish to begin.) Press ►.
<i>2 POLISH TIMER</i>	<i>ENABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the second polish timer.)
<i>2 POLISH TIME</i>	14:00	Use numbered buttons to change time (use 10 for 0). (This is the time the second polish prompt will occur each day.) Press ►.
<i>2 POLISH DURATION</i>	30	Use numbered buttons to change (use 10 for 0). (This is the duration, in minutes for a polish. The default is 30 minutes.) Press ►.
<i>2 POLISH DELAY TIME</i>	01:00	Use numbered buttons to change time (use 10 for 0). (This is the amount of time that an operator can delay the start of the second polish. The default is one hour.) Press ►. After the delay the operator must polish.
<i>2 POLISH START TEMPR</i>	300F	Use numbered buttons to change temperature (use 10 for 0). (This is the required temperature for the second polish to begin.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<b>E-LOG</b>		Press ✓ . (This is a log of the ten most recent error codes.)
<i>NOW</i>	<i>TIME/DATE</i>	Press ►. (Current time and date)
<i>A</i>	<i>E#</i>	<i>TIME/DATE</i>
		Errors listed A-J. Press ► to scroll through errors. If no errors exist, pressing ► will display No Errors.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.

Continued on the following page

Left Display	Right Display	Action
<i>C-LOG</i>	Blank	Press ✓. (This is a reserved internal data collection feature that only exists in pressure fryers.)
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, C-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<i>CHANGE PASSWORD</i>		Press ✓.
<i>PRODUCT SETUP</i>	Current code (1724)	Use numbered buttons to change code (use 10 for 0). Press ►.
<i>VAT SETUP</i>	Current code (3228)	Use numbered buttons to change code (use 10 for 0). Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<i>EDIT ALARM NAMES</i>		Press ✓.
<i>ALARM 1</i>	<i>NUM1</i>	Enter or edit alarm name with letter buttons. Press ►. Continue scrolling through names up to alarm 10. (Ex. Shake, Stir, etc.)
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.

## 1.5 Navigating Filter Menu

The F3000 has five functions in the Filter Menu: Filter, Clean, Dispose, Fill Vat from Pan and Drain to Pan. They are accessed by pressing and holding the Filter button until FILTER is displayed. The first matrix below steps through the initial navigation. Navigation of the functions are covered in separate matrices. The controller must be on and at setpoint to use all the functions of the filter menu. If the fryer is not at setpoint the controller displays WAIT FOR FILTER.

### Entering Filter Mode

Left Display	Right Display	Action
<i>DROP</i>	<i>DROP</i>	Press and hold the filter button until Filter is displayed.
<i>FILTER</i>		Press ► to scroll to choices: Filter, Clean, Dispose, Drain to Pan, Fill Vat from Pan and Exit. With the desired choice displayed press ✓. Follow the instructions below to navigate the modes.

### Filter

Left Display	Right Display	Action
	<i>FILTER</i>	Press ✓.
<i>FILTER NOW?</i> alternating with <i>YES/NO</i>		Press YES.
<i>OPEN DRAIN VALVE</i>		Open drain valve.
<i>DRAINING</i>		None required.
<i>OPEN RETURN VALVE</i>		Open return valve.
<i>POLISHING</i>	<i>COUNTDOWN TIMER</i>	None required.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>COOL</i>	<i>COOL</i>	

## Clean

Left Display	Right Display	Action
	<i>CLEAN</i>	Press ✓.
<i>CLEAN NOW?</i>	<i>YES NO</i>	Press YES.
<i>OPEN DRAIN VALVE</i>		Open drain valve
<i>DRAINING</i>		None required.
<i>SCRUB VAT COMPLETE?</i>	<i>YES</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open return valve.
<i>POLISHING</i>	<i>5-MINUTE COUNTDOWN TIMER</i>	None required.
<i>FILL VAT?</i>	<i>YES</i>	Press YES.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press YES.
<i>OFF</i>	<i>OFF</i>	

## Dispose

Left Display	Right Display	Action
	<i>DISPOSE</i>	Press ✓.
<i>DISPOSE NOW?</i>	<i>YES NO</i>	Press YES.
<i>REMOVE PAN</i>	<i>CONFIRM</i>	Remove the filter pan and press CONFIRM.
<i>INSERT DISPOSAL UNIT</i>	<i>CONFIRM</i>	Insert disposal unit under the drain and press CONFIRM.
<i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DISPOSING</i>		None required.
<i>VAT EMPTY?</i>	<i>CONFIRM</i>	Press CONFIRM once the vat is empty.
<i>CLEAN VAT COMPLETE?</i>	<i>CONFIRM</i>	Press CONFIRM once the vat is clean.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>REMOVE DISPOSAL UNIT</i>	<i>CONFIRM</i>	Remove disposal unit from the fryer and press CONFIRM.
<i>INSERT PAN</i>	<i>CONFIRM</i>	Insert the filter pan and press CONFIRM.
<i>MANUALLY FILL VAT</i>	<i>CONFIRM</i>	Fill vat with oil to the bottom fill line and press CONFIRM when full.
<i>OFF</i>	<i>OFF</i>	

## Drain to Pan

Left Display	Right Display	Action
	<i>DRAIN TO PAN</i>	Press ✓
<i>DRAIN TO PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DRAINING</i>		None required.
<i>VAT EMPTY?</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close the drain valve and press CONFIRM
<i>OIL IN DRAIN PAN</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>FILL VAT FROM DRAIN PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>OFF</i>	<i>OFF</i>	

## Fill Vat from Pan

Left Display	Right Display	Action
	<i>FILL VAT FROM PAN</i>	Press ✓
<i>FILL VAT FROM PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>OFF</i>	<i>OFF</i>	

## 1.6 Polishing

The F3000 displays a series of prompts when a polish filter cycle is under way. The steps are detailed below.

Left Display	Right Display	Explanation/Action
<i>POLISH NOW?</i>	<i>YES NO</i>	Respond to prompt with button push. Press YES or NO. Yes produces a filter, detailed below. No delays filter and cooking continues.
** <i>ADD FILTER POWDER</i>	<i>CONFIRM</i>	Remove filter pan, add filter powder and press CONFIRM.
** <i>INSERT PAN</i>	<i>CONFIRM</i>	Insert filter pan and press CONFIRM.
* <i>CHANGE FILTER PAPER</i>	<i>CONFIRM</i>	Remove the filter pan and change the filter paper.
* <i>ADD FILTER POWDER</i>	<i>CONFIRM</i>	Add filter powder and press CONFIRM.
* <i>INSERT PAN</i>	<i>CONFIRM</i>	Insert filter pan into fryer.
* <i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DRAINING</i>		None required. The oil drains from the frypot to the filter pan.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>POLISHING</i>	<i>15-MINUTE COUNTDOWN TIMER</i>	None required. The oil flows from the filter pan to the frypot and back to the filter pan for 15 minutes.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close the drain valve and press CONFIRM.
<i>FILLING</i>		None required. The oil returns from the filter pan to the frypot.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Close the return valve and press CONFIRM.
<i>COOL</i>	<i>COOL</i>	

**\*NOTE:** Occurs on first polish of the day.

**\*\*NOTE:** Occurs on first polish after lunch and subsequent polishes during the day.

## 1.7 Prompts Encountered While Programming

The F3000 can be programmed for single-segmented cooking, which is used for most products, and segmented cooking, which is used for bone-in chicken. When programming for either product, the time prompts encountered are sequentially numbered. For non-segmented products, enter 0:00 for the second time prompt (2 Time) and the additional programming steps associated with segmented programming don't appear.

For segmented products, the process is longer. As many as 10 segments can be introduced during the cook cycle of one product. The complete cook cycle can be thought of as a timeline, with temperatures changes introduced at time-specific points on the timeline.

As Time 2, Time 3, Time 4 appear in the programming steps, the time entered is **NOT** the duration of the specific cycle, but the point a temperature change occurs on the timeline. For example, a Time 2 change that is to change a temperature in a 13 minute cycle after 2 minutes is entered as 11. The first temperature change will occur with 11 minutes remaining on the time line. **See graphic on page 1-12.**

Below is a explanation of the prompts presented in the sequence they occur. Programming is detailed on pages 1-11 through 1-14.

Left Display	Right Display	Explanation/Action
LONG NAME	NAME OR BUTTON NUMBER	Enter the full name of the product
SHORT NAME	NAME OR BUTTON NUMBER	Enter the four character abbreviated name of the product
COOKING MODE	SINGLE SETPOINT	<b>Segmented:</b> If multiple setpoint or segmented cooking is desired press ▼ MULTIPLE SETPOINT and go to 1.9 and follow the instructions. <b>Non-Segmented:</b> Leave at default of SINGLE SETPOINT.
1 TIME	0:00 OR PREVIOUSLY ENTERED #	In segmented and non-segmented programming, the total cook time is entered here.
1 TEMPR	TEMPERATURE	This is the setpoint for non-segmented products; the initial setpoint for segmented products.
1 FLEX	NUMBER	Flex is the feature in the controller that allows the fryer to react to large and small loads with the same cooking curve. It is generally not used with bone-in chicken. The default value is 5. The range is 0-9.
1 PRESSURE SOLENOID	OPEN	This option is only present on pressure fryers. During cooks it determines if the pressure solenoid should be open or closed. For segmented or multi-setpoint cooking it may be closed and open during different cycles during the cook.
2 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the first temperature change occurs. <b>Non-Segmented:</b> Enter 0:00
2 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the first temperature change, which occurs at the point entered at the 2 Time prompt. <b>Non-Segmented:</b> Doesn't appear
2 FLEX	ON OR OFF	See 1 Flex.
2 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.
3 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the second temperature change occurs. <b>Non-Segmented:</b> Doesn't appear.
3 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the second temperature change, which occurs at the point entered at the 3 Time prompt. <b>Non-Segmented:</b> Doesn't appear
3 FLEX	ON OR OFF	See 1 Flex.
3 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.

## 1.7 Prompts Encountered While Programming cont.

Left Display	Right Display	Explanation/Action
4 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the third temperature change occurs. <b>Non-Segmented:</b> Doesn't appear.
4 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the third temperature change, which occurs at the point entered at the 3 Time prompt. <b>Non-Segmented:</b> Doesn't appear
4 FLEX	ON OR OFF	See 1 Flex.
4 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.
5 TIME	TIME	<b>Segmented:</b> Enter 0:00 if no more segments are needed. <b>Non-Segmented:</b> Doesn't appear.
1 ALARM TIME	TIME	An audible alarm in the cook cycle, indicating a need to shake or stir the product.
1 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
1 ALARM MODE	MANUAL OR AUTO	The alarm can be self cancelling (Auto) or manually canceled (Manual), which requires a button push. Navigate choice with arrow buttons under display.
1 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	The duration of the audible alarm is optional. Navigate choice with arrow buttons under display.
2 ALARM TIME	TIME	The second point in the cook cycle an alarm sounds.
2 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
2 ALARM MODE	MANUAL OR AUTO	Navigate choice with arrow buttons under display.
2 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	Navigate choice with arrow buttons under display.
3 ALARM TIME	TIME	The third point in the cook cycle an alarm sounds.
3 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
3 ALARM MODE	MANUAL OR AUTO	Navigate choice with arrow buttons under display.
3 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	Navigate choice with arrow buttons under display.
AFTER COOKING	SET POINT OR COOL	<b>Setpoint:</b> Fryer remains at setpoint; <b>Cool:</b> Fryer holds at 250°F (121°C).
FILTER LOCKOUT	NUMBER	Number of cook cycles for the product before a filter prompt.
HEAD COUNT	0	Number of head of chicken or the equivalent number for a non-chicken product.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the controller checks the temperature.
EXIT	EXIT	Press ✓ or Scan button to exit programming.

## 1.8 Programming for Single Setpoint (Non-Segmented) Items

Programming for non-segmented food items is shown below. The right column has the action necessary to continue. Exit from a programming step at any time by pressing the Scan button until the display returns to its pre-programming status.

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ✓ .
PRODUCT SETUP	ENTER CODE	Enter 1724.
SELECT PRODUCT		Press a desired product button 1-20 that is not currently used. Buttons already programmed are indicated with an LED.
LONG NAME	PRODUCT NAME OR BUTTON NUMBER	Enter product name with letter buttons. Advance cursor with ▲▼. Press ►.
SHORT NAME	ABBREVIATED PRODUCT NAME OR BUTTON NUMBER	Enter abbreviated four character product name with letter buttons. Press ►.
COOKING MODE	SINGLE SETPOINT	Press ►. If multiple setpoint or segmented cooking is desired press ▼ MULTIPLE SETPOINT and go to 1.9 and follow the instructions. (Default is SINGLE SETPOINT)
1 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter total cook time with numbered buttons. Press ►.
1 TEMPR	TEMP	Enter cooking temperature. Press ►.
1 FLEX	Number	Enter the level of flex, 0-9, for the product. Press ►.
1 PRESSURE SOLENOID	OPEN	Press ▼▲ to scroll to OPEN or CLOSED. Enter the state of the pressure fryer solenoid lid. Default is OPEN. ( <i>Option only for pressure fryers.</i> )
2 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter 0:00. Press ►.
1 ALARM TIME	0:00 OR PREVIOUSLY ENTERED TIME	Subtract the time from the starting cook time when the alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►. (Note: If alarm time is set to 0:00 skip to After Cooking below.)
1 ALARM NAME	SHAKE	Press ▼▲ to scroll through the alarm names (ex. Shake). Press ►.
1 ALARM MODE	AUTO OR MANUAL	Press ▼▲ to scroll to Auto or Manual alarm mode. Press ►.
1 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Press ▼▲ to scroll to choice of alarm tones. Press ►.
2 ALARM TIME	0:00	Press ►. Leave at 0:00 for non-segmented cooking.
AFTER COOKING	COOL OR SETPT	Press ▼▲ to scroll to Cool or Setpoint mode the fryer should exit to after cook cycle: cool = 250; Setpoint = cooking temp. Press ►.
FILTER LOCKOUT	0	Enter number of cook cycles before a filter prompt and press ►.
QUANTITY?	NO	Press ▼▲ to scroll to YES if a quantity per load is required, otherwise leave to default NO.
HEAD COUNT	0 OR PREVIOUSLY SET NUMBER	Enter number of head or the equivalent value for the product. Press ►.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the controller checks the temperature. Enter value and press ►.
EXIT	EXIT	Press Scan button to exit or the ✓ button for additional programming.
SELECT PRODUCT		More Programming? Press product button and follow instructions above. Exit Programming? Press Scan Button.
PRODUCT SETUP		Press Scan button to exit or the ✓ button for additional programming.
OFF	OFF	

## 1.9 Multi-Setpoint (Segmented)


### 1.9.1 Cooking Programming Overview

The F3000 is capable of segmented cooking, a feature which allows a cooking cycle to be broken into a number of parts, each with its own cooking temperature and time.

An abbreviated version of the programming for a 13-minute cook cycle with four cooking temperatures is shown below. Steps are compressed for clarity. The cook times represent when on the timeline of the total cook cycle the segment occurs. In this example, the first temperature change occurs with 11 minutes remaining in the total cook time; 11 is entered at the prompt for the second cook time. Two minutes into the total cook cycle, the temperature will change; 11 minutes will remain. Cook times for the remaining segments are arrived at by subtracting the segment length from the remaining cook time. The complete programming steps are shown on pages 14 and 15.

- Step 1 sets total cook time and initial setpoint.
- Step 2 sets the duration of the first cooking segment, 2 minutes, and the setpoint of the first temperature change.
- Step 3 sets the duration of the second cooking segment, 4 minutes, and the setpoint of the second temperature change.
- Step 4 sets the duration of the third cooking segment, 3 minutes, and the setpoint of the third temperature change.


The four remaining minutes in the cook time elapse at the final temperature. No entry is required to use the final minutes

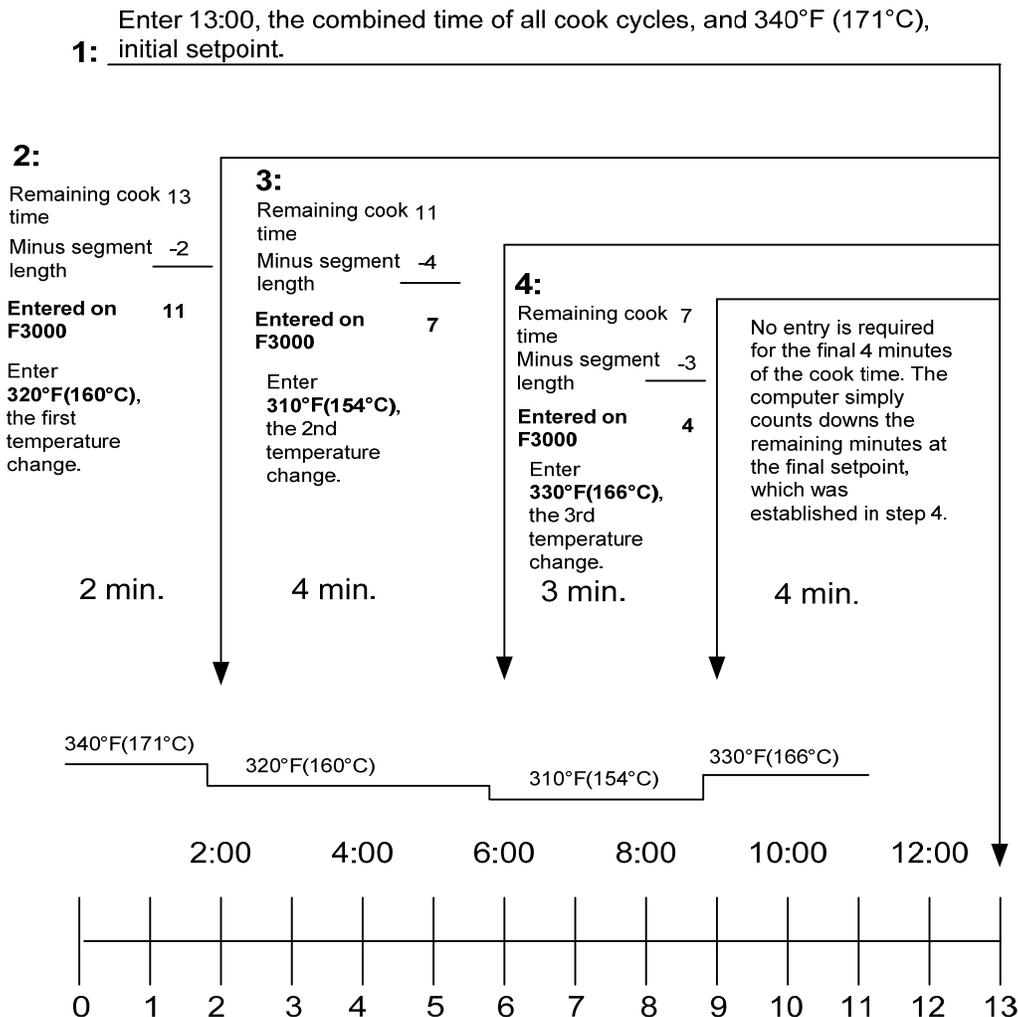

## 1.9.2 Alarm Programming Overview

Alarms are set to remind operators to shake fry baskets or tend to the product in some other way at points during the cook cycle. The instructions below detail setting three alarms in a 13-minute cook cycle. To enter a single alarm, exit the sequence after setting the first alarm.

Three alarms can be programmed for a cook cycle. The K3000 counts down cook times from the total time to zero. Alarms are entered at the point in the countdown they are desired. The example below is for alarms at 11:00, 6:00 and 2:00 on the countdown clock; the alarms will occur two, seven and 11 minutes into the 13-minute cook cycle.

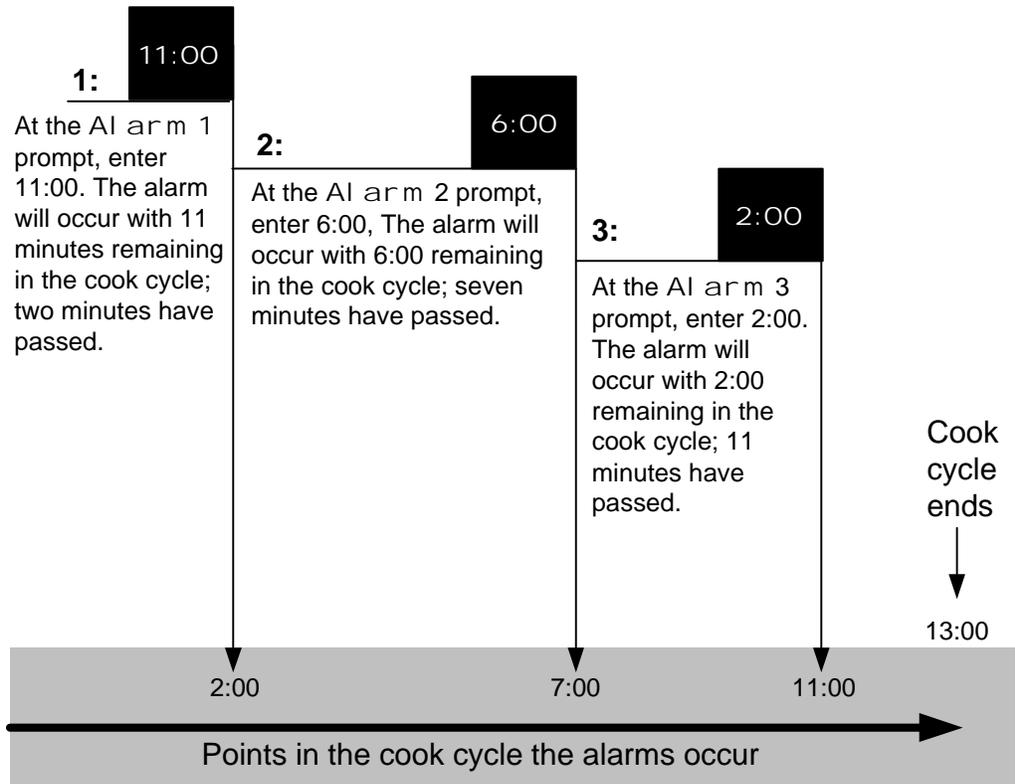

## 1.10 Programming for Multi-Setpoint (Segmented) Items

Left Display	Right Display	Action
OFF	OFF	Press and hold <b>✓</b> until Product Setup is displayed.
PRODUCT SETUP	Blank	Press <b>✓</b> .
PRODUCT SETUP	ENTER CODE	Enter 1724
SELECT PRODUCT	Blank	Press desired product button
LONG NAME	PRODUCT NAME OR BUTON NUMBER	Enter product name with letter buttons. Advance cursor with <b>▲▼</b> . With name entered, press <b>▶</b>
SHORT NAME	ABBREVIATED PRODUCT NAME OR BUTON NUMBER	Enter abbreviated four character product name with letter buttons. Press <b>▶</b> .
COOKING MODE	SINGLE SETPOINT	Press <b>▶</b> . If multiple setpoint or segmented cooking is desired press <b>▼</b> Multiple Setpoint (Segmented) and follow the instructions in the next section. (Default is SINGLE SETPOINT)
1 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter total cook time for segmented item and press <b>▶</b> .
1 TEMPR	TEMPERATURE	Enter initial cooking temperature and press <b>▶</b> .
1 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press <b>▶</b> .
1 PRESSURE SOLENOID	OPEN	Set to desired position with the <b>▼▲</b> buttons. Press the <b>▶</b> button to change to CLOSED. ( <i>Option only for pressure fryers.</i> )
2 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter time remaining after first temperature change (see page 1-11) and press <b>▶</b> .
2 TEMPR	0:00 OR PREVIOUSLY ENTERED TEMPERATURE	Enter first temperature change and press <b>▶</b> .
2 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press <b>▶</b> .
2 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
3 TIME	0:00 OR PREVIOUSLY PROGRAMMED TIME	Enter time remaining after second temperature change and press <b>▶</b> .
3 TEMPR	0:00 OR PREVIOUSLY PROGRAMMED TEMPERATURE	Enter temperature of the second segment and press <b>▶</b> .
3 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press <b>▶</b> .
3 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
4 TIME	00 OR PREVIOUSLY ENTERED TIME	Enter time remaining after third temperature change and press <b>▶</b> .
4 TEMPR	0:00 OR PREVIOUSLY PROGRAMMED TEMPERATURE	Enter temperature of the third segment and press <b>▶</b> .
4 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press <b>▶</b> .
4 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
5 TIME	:00 OR PREVIOUSLY ENTERED TIME	Leave at zero if no more segments are needed and press <b>▶</b> . <i>If more segments are needed, 5 is the limit, continue programming as shown above.</i>
1 ALARM TIME	:00 OR PREVIOUSLY ENTERED TIME	Subtract the time from the starting cook time when the alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press <b>▶</b> .
1 ALARM NAME	SHAKE	Press <b>▲</b> to scroll through choices: Shake, Stir, Num1. With NUM 1 displayed, scroll through number choices with <b>▲</b> . Display name and press <b>▶</b> .
1 ALARM MODE	MANUAL OR AUTO	Choose mode with <b>▲</b> and press <b>▶</b> .

## 1.10 Programming for Multi-Setpoint (Segmented) Items cont.


Left Display	Right Display	Action
1 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
2 ALARM TIME	TIME	Subtract the time from the starting cook time when the second alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►.
2 ALARM NAME	NAME	Press ▲ to scroll through choices and press ►.
2 ALARM MODE	MANUAL OR AUTO	Choose mode with ▲ and press ►.
2 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
3 ALARM TIME	NAME	Subtract the time from the starting cook time when the third alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►.
3 ALARM MODE	MANUAL OR AUTO	Choose mode with ▲ and press ►.
3 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
AFTER COOKING	SET POINT OR COOL	Choose fryer status after cook cycle with ▲▼ and press ►.
FILTER LOCKOUT	0	Enter number of cook cycles before a filter prompt and press ►.
QUANTITY?	NO	Press ▼▲ to scroll to YES if a quantity per load is required, otherwise leave to default NO.
HEAD COUNT	USER PROMPT 00	Enter chicken head count or equivalent number for non-chicken item and press ►.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the Controller checks the temperature. Enter value and press ►.
EXIT	EXIT	Press ✓.
SELECT PRODUCT	Blank	Press Scan twice. Display goes to OFF.
OFF	OFF	

# 1.11 F3000 Menu Summary Tree

- Filter Menu ..... 1.5
  - [With computer ON, press and hold FILTER button]
  - Filter
  - Clean
  - Dispose
  - Drain to Pan
  - Fill Vat From Pan
  
- Info Mode ..... 1.3
  - [With computer OFF, press and hold ✓(check) button]
  - Oil Stats
  - Filter Stats
  - Review Usage
  - Last Load
  
- Setup and Tech Modes
  - [With computer OFF, press and hold ✓(check) button 10 seconds, displays Product Setup]
  - Product Setup ..... 1.4
    - [Enter 1724]
    - Select Product ..... 1.9 - 1.10
      - Long Name
      - Short Name
      - Cooking Mode
      - 1 Time
      - 1 Tempr
      - 1 Flex
      - 1 Pressure Solenoid
      - 2 Time
      - 1 Alarm Time
      - 1 Alarm Name
      - 1 Alarm Mode
      - 1 Alarm Tone
      - 2 Alarm Time
      - After Cooking Setpoint
      - Filter Lockout
      - Quantity
      - Head Count
      - Instant On
  - Vat Setup
    - [Enter 3228]
    - System ..... 1.4
      - Language
      - 2<sup>nd</sup> Language
      - Locale (CE or Non-CE)
      - Energy
      - Type (Vat)
      - System Volume (Level)
      - Tempr Format (F or C)
      - Exit Melt Tempr
      - Setback Tempr
      - Fresh Oil
      - Waste
      - Recovery Alarm
  - Time/Date ..... 1.4
  - DST (Daylight Savings Time) Setup ..... 1.4
  - Filter ..... 1.4
    - Global Filter Count
    - EOD Filter Time
    - 1 Polish Timer
    - 1 Polish Time
    - 1 Polish Duration
    - 1 Polish Delay Time
    - 1 Polish Start Tempr
    - 2 Polish Timer
    - 2 Polish Time
    - 2 Polish Duration
    - 2 Polish Delay Time
    - 2 Polish Start Tempr
  - E-Log Log of last 10 error codes ..... 1.4
  - C-Log Solenoid Activation Log (only on pressure fryers) ..... 1.4
  - Change Password ..... 1.4
  - Edit Alarm Names ..... 1.4
- Tech Mode
  - [Enter 1650]
  - Clear E-Log
  - Clear Passwords
  - Lane Count
  - Hi-Limit Test

# CHAPTER 1: F3000 CONTROLLER INSTRUCTIONS

## 1.1 Using the F3000

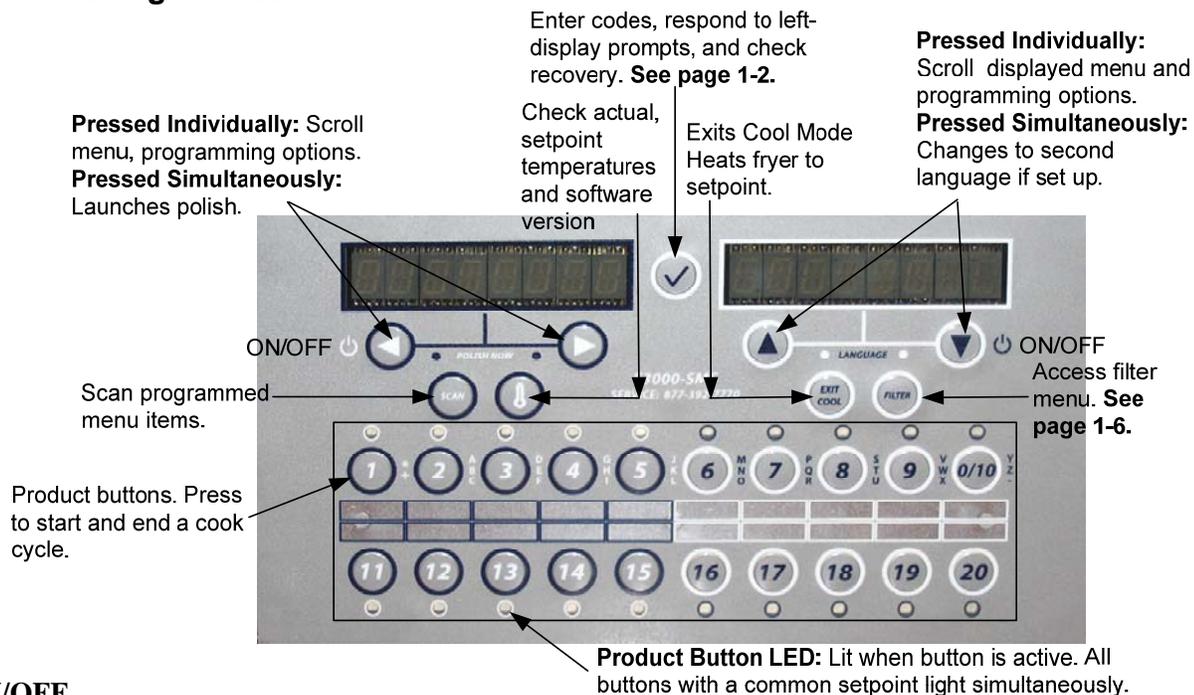

### ON/OFF

- **ON** - Press ON/OFF button fryer heats to setpoint or idle temperature and displays: COOL or DROP.
- **OFF**- Press and hold ON/OFF button. Controller displays OFF.

### Cooking

- Fryer displays COOL or DROP
- **COOL display:** Press product button; fryer heats to setpoint and displays DROP.
- **DROP display:** Press product button and drop product.
- **DONE display:** Press product button to cancel alarm.
- **CANCEL:** Press and hold product button to cancel a cook cycle.

### Responding to Polish Prompt

- Computer displays Polish Now, alternating with Yes No.
- Press Yes (button under Yes display) and the polish cycle launches.
- Computer displays Cool after polish cycle.

### Computer Button Navigation

- **Product:** Active when adjacent LED is lit. Press to launch cook cycle. Press and hold to cancel a launched cook cycle. Press at end of cook cycle to halt alarm and end cook.
- **Scan:** Press once, all product buttons are lit; Select Product displayed. Press product button to view product name. Press Scan again to repeat. Press Scan twice to return to normal operation.
- **Left/Right Arrows:** Navigate options in left display.
- **Up/Down Arrows:** Navigate options in right display. Press the up/down arrow simultaneously to change to a second language if one is selected in setup.
- **Exit Cool:** Exits cool mode and sets fryer's temperature to setpoint.
- **Thermometer: Fryer ON:** Press and release for setpoint/left; vat temp/right.
- **Thermometer: Fryer OFF:** Press to display temperature, time, date, system version, F3000 version and circuit board versions.
- **Checkmark: Fryer OFF:** Press and hold 3 seconds: Scroll filter usage; Press and hold 10 seconds: Product setup.
- **Checkmark: Fryer ON:** Check recovery and respond to prompts.
- **Filter: Press and release:** Cooks remaining to filter cycle. **Press and hold:** Filter options: Filter, Clean, Dispose, Drain to Pan and Fill Vat from Pan.

## 1.2 Navigating controller

Press and hold the checkmark button for 10 seconds produces the setup mode, which first displays Product Setup. Follow the steps below to navigate the options. Unpopulated fields indicate a blank display.

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ► to scroll: Vat Setup, Tech Mode, and Exit. With the desired selection displayed, press ✓ .
PRODUCT SETUP		Product setup (entering and editing menu items) is described on page 1-11 through 1-14.
VAT SETUP		Vat Setup is described on page 1-4.
TECH MODE		Tech mode is for technicians only.
EXIT	EXIT	Press Scan button until the controller displays OFF.

## 1.3 Viewing Operational Stats

The F3000 collects and stores information on the cook cycles and filter cycles. This data is accessed in the info mode, which is accessed by pressing the checkmark button. The steps to view the data are detailed below:

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until INFO MODE is displayed. Release and press ✓ .
<b>OIL STATS</b>		Press ► to scroll: Oil Stats, Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
TOTAL COOKS - LAST DISPOSE	Number	Press ►. (This is the number of cooks since the last dispose.)
TOTAL HEADS-LAST DISPOSE	Number	Press ►. (This is the number of heads cooked since the last dispose.)
LAST DISPOSE	DATE	Press ►. (This is the date of the last dispose.)
TEMP > 300F-TODAY	Number Hrs	Press ►. (This is the number of hours the temperature of the oil rose above 300°F during operation today.)
TEMP > 300F- SINCE DISPOSE	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since oil disposal.)
TEMP > 300F-1 BACK	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since the previous oil disposal.)
TEMP > 300F-2 BACK	Number Hrs	Press ►. (This is the number of hours the oil temperature was above 300°F since two oil disposals ago.)
FILTERS-SINCE DISPOSE	Number	Press ►. (This is the number of filters since oil disposal.)
FILTERS-1 BACK	Number	Press ►. (This is the number of filters that have occurred since the previous oil disposal.)
FILTERS-2 BACK	Number	Press ►. (This is the number of filters that have occurred since two oil disposals ago.)
POLISHES-SINCE DISPOSE	Number	Press ►. (This is the number of polishes since oil disposal.)
POLISHES-1 BACK	Number	Press ►. (This is the number of polishes that have occurred since the previous oil disposal.)
POLISHES-2 BACK	Number	Press ►. (This is the number of polishes that have occurred since two oil disposals ago.)
RESET OIL STATS	YES NO	Press ► to scroll or ▼ to reset oil stats.
RESET OIL STATS	ENTER CODE	Enter 3228.
<b>Continued on the following page</b>		

### 1.3 Viewing Operational Stats cont.

Left Display	Right Display	Action
COMPLETE		None required.
EXIT	EXIT	Press ✓ button once to return to menu, or Scan button once to return the controller to OFF.
<b>FILTER STATS</b>		Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
MON	DATE	Press ▼▲ to scroll seven days of data. With the desired date displayed, press ►.
FILTERED	NUMBER AND DAY	Press ▼▲ to scroll number of times the vat was filtered in the seven -day period. Press ►.
FLT BPSD	NUMBER AND DAY	Press ▼▲ to scroll number of times the filter prompt was bypassed in the seven-day period. Press ►.
COOKS	NUMBER AND DAY	Press ▼▲ to scroll number of cook cycles that occurred in the seven-day period. Press ►.
HEADS	NUMBER AND DAY	Press ▼▲ to scroll number of heads that were cooked in the seven-day period. Press ►.
FLT AVG	NUMBER AND DAY	Press ▼▲ to scroll average number of daily filter cycles that occurred in the seven-day period. Press ►. Press ✓ button once to return to menu, or Scan button once to return the controller to OFF.
<b>REVIEW USAGE</b>		Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ .
USAGE SINCE		None required.
DATE	TIME	Press ►. (This is the date and time of the last usage reset.)
TOTAL COOKS	Number	Press ►. (This is the total number of cooks since the last usage reset.)
QUIT COOKS	Number	Press ►. (This is the total amount of cooks that were cancelled since the last reset usage.)
ON HOURS	Number	Press ►. (This is the total amount of hours the fryer was on since the last reset.)
RESET USAGE	YES NO	Press ► to scroll or ▲to reset oil stats usage.
RESET USAGE	ENTER CODE	Enter 3228.
COMPLETE		None required.
EXIT	EXIT	Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ or press Scan to return the controller to OFF.
<b>LAST LOAD</b>		Press ✓ .
PRODUCT	PRODUCT NAME	Press ►. (This is the product last cooked.)
STARTED	Time	Press ►. (This is the time the last cook started.)
ACTUAL TIME	Number Minutes	Press ►. (This is the actual cook time including flex time.)
PROGTIME	Number Minutes	Press ►. (This is the actual programmed cook time.)
MAX TEMP	Number	Press ►. (This is the maximum temperature of the oil during the last cook.)
MIN TEMP	Number	Press ►. (This is the minimum temperature of the oil during the last cook.)
AVG TEMP	Number	Press ►. (This is the average temperature of the oil during the last cook.)
HEAT ON	Number	Press ►. (This is the percentage of the cook time the heat source was on during the last cook.)
READY	YES OR NO	Press ►. (If the fryer was back to proper temperature before the cook cycle was started.)
EXIT	EXIT	Press ► to scroll: Filter Stats, Review Usage, Last Load. With the desired stats displayed, press ✓ or press Scan button to return the controller to OFF.

## 1.4 F3000 Vat Setup

Setup mode allows the controller to be set for language displays, vat sizes, and temperature range displays. Follow the steps below to enter and navigate Vat Setup.

### Vat Set Up

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ► to scroll to Vat setup and press ✓. Product setup is described on pages 1-11 through 1-14.
VAT SETUP	ENTER CODE	Enter 3228.
SYSTEM		Press ✓ button or press ► to scroll to Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓. If SYSTEM is not chosen skip to the relevant selection.
LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►.
2ND LANGUAGE	ENGLISH	Press ▼▲ to scroll to choice and press ►. (This option allows another language to be toggled easily from the front panel (ex. Spanish as a second language.)).
LOCALE	NON-CE	Press ▼▲ to scroll to choice Non-CE or CE and press ►.
ENERGY	GAS	Press ▼▲ to scroll to choice Gas or Electric and press ►.
TYPE	KJ3 FULL	Press ▼▲ to scroll choices. Once the fryer type is chosen, press ►.
SYSTEM VOLUME	9	Sets sound level for controller. Enter level, 1-9 (0=Lowest/ 9=Loudest). Press ►.
TEMPR FORMAT	F	Press ▼▲ to scroll choices: F for Fahrenheit; C for Celsius. Press ►.
EXIT MELT TEMPR	100F	Use numbered buttons to change default setting (use 10 for 0). Press ►. (This is the temperature for the fryer to exit the melt cycle.) Default is 100F (38C).
SETBACK TEMPR	250F	Use numbered buttons to change default setting (use 10 for 0). Press ►. (This is the temperature during setback or idle mode.) Default is 250F (121C).
FRESH OIL	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. <b>NOTE: All fryers should be set to NONE.</b>
WASTE	NONE	Press ▼▲ to scroll choices JIB, Bulk-RTI, Bulk-F (Frontline) or None. Press ►. <b>NOTE: All fryers should be set to NONE.</b>
RECOVERY ALARM	DISABLED	Press ▼▲ to scroll choices DISABLED and ENABLED. (This is a recovery alarm that locks out the fryer if the fryer does not heat properly. The default is disabled). Press ►.
EXIT	EXIT	Press ✓ button.
OFF	OFF	None required.
TIME/DATE		Press ✓.
TIME ENTRY	TIME	Use numbered buttons to change time (use 10 for 0). Press ►.
DATE FORMAT	MM/DD/YY	Press ▼▲ to scroll choices. With the date format displayed, press ►.
ENTER DATE	DATE	Use numbered buttons to change date (use 10 for 0). Press ►.
EXIT	EXIT	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
DST SETUP	This is daylight savings time setup. In the United States, daylight savings time begins each year at 2:00 A.M. on the second Sunday in March, with clocks moving ahead one hour. Daylight savings time ends each year at 2:00 A.M. on the first Sunday in November, with clocks moving back one hour. For the two states and international locations, which do not use DST, set to disabled.	
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press ► to scroll to Vat setup and press ✓.
VAT SETUP	ENTER CODE	Enter 3228.
DST	ENABLED	Press ▼▲ to scroll choices DISABLED and ENABLED. Press ►. (This enables or disabled daylight savings time. Default is enabled.) If disabled is chosen, pressing the ► button, displays exit. Press the exit scan button three times to exit.

Continued on the following page

## 1.4 F3000 Vat Setup cont.

Left Display	Right Display	Action
<i>DST START MONTH</i>	3	Enter the daylight savings time starting month using the 1-10 keys. (Default is US government starting month “3”.) Press ►.
<i>DST START SUNDAY</i>	2	Enter the daylight savings time starting Sunday using the 1-10 keys. (Default is US government starting Sunday “2”.) Press ►.
<i>DST END MONTH</i>	11	Enter the daylight savings time ending month using the 1-10 keys. (Default is US government ending month “11”.) Press ►.
<i>DST END SUNDAY</i>	1	Enter the daylight savings time ending Sunday using the 1-10 keys. (Default is US government ending Sunday “1”.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log or Change Password. With desired choice displayed, press ✓ or press the Exit/Scan button three times to return the controller to OFF.
<b>FILTER</b>		Press ✓.
<i>GLOBAL FILTER COUNT</i>	20	Press ►. (Changes the total number of cooks that occur before a filter prompt. The default is 20.)
<i>EOD FILTER TIME</i>	21:00	Use numbered buttons to change end of day filter alert time. Press ►. After this time, the controller prompts for filter when user presses the power button to go to the OFF state.
<i>1 POLISH TIMER</i>	<i>ENABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the polish timer.)
<i>1 POLISH TIME</i>	08:00	Use numbered buttons to change time (use 10 for 0). (This is the time the first polish prompt will occur each day. The default is 8:00 AM.) Press ►.
<i>1 POLISH DURATION</i>	30	Use numbered buttons to change (use 10 for 0). (This is the duration, in minutes for a polish. The default is 30 minutes.) Press ►.
<i>1 POLISH DELAY TIME</i>	00:00	Use numbered buttons to change time (use 10 for 0). (This is the amount of time that an operator can delay the start of a polish.) Press ►. After the delay the operator must polish.
<i>1 POLISH START TEMPR</i>	300F	Use numbered buttons to change temperature (use 10 for 0). (This is the temperature required for a polish to begin.) Press ►.
<i>2 POLISH TIMER</i>	<i>ENABLED</i>	Press ▼▲ to scroll to choice and press ►. (This enables or disables the second polish timer.)
<i>2 POLISH TIME</i>	14:00	Use numbered buttons to change time (use 10 for 0). (This is the time the second polish prompt will occur each day.) Press ►.
<i>2 POLISH DURATION</i>	30	Use numbered buttons to change (use 10 for 0). (This is the duration, in minutes for a polish. The default is 30 minutes.) Press ►.
<i>2 POLISH DELAY TIME</i>	01:00	Use numbered buttons to change time (use 10 for 0). (This is the amount of time that an operator can delay the start of the second polish. The default is one hour.) Press ►. After the delay the operator must polish.
<i>2 POLISH START TEMPR</i>	300F	Use numbered buttons to change temperature (use 10 for 0). (This is the required temperature for the second polish to begin.) Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<b>E-LOG</b>		Press ✓. (This is a log of the ten most recent error codes.)
<i>NOW</i>	<i>TIME/DATE</i>	Press ►. (Current time and date)
<i>A</i>	<i>E#</i>	<i>TIME/DATE</i>
		Errors listed A-J. Press ► to scroll through errors. If no errors exist, pressing ► will display No Errors.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.

Continued on the following page

Left Display	Right Display	Action
<i>C-LOG</i>	Blank	Press ✓. (This is a reserved internal data collection feature that only exists in pressure fryers.)
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, C-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<i>CHANGE PASSWORD</i>		Press ✓.
<i>PRODUCT SETUP</i>	Current code (1724)	Use numbered buttons to change code (use 10 for 0). Press ►.
<i>VAT SETUP</i>	Current code (3228)	Use numbered buttons to change code (use 10 for 0). Press ►.
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.
<i>EDIT ALARM NAMES</i>		Press ✓.
<i>ALARM 1</i>	<i>NUM1</i>	Enter or edit alarm name with letter buttons. Press ►. Continue scrolling through names up to alarm 10. (Ex. Shake, Stir, etc.)
<i>EXIT</i>	<i>EXIT</i>	Press ✓ button once and press ► to scroll to System, Time/Date, Filter, E-Log, Change Password or Edit Alarm Names. With desired choice displayed, press ✓ or press the Scan button once to return the controller to OFF.

## 1.5 Navigating Filter Menu

The F3000 has five functions in the Filter Menu: Filter, Clean, Dispose, Fill Vat from Pan and Drain to Pan. They are accessed by pressing and holding the Filter button until FILTER is displayed. The first matrix below steps through the initial navigation. Navigation of the functions are covered in separate matrices. The controller must be on and at setpoint to use all the functions of the filter menu. If the fryer is not at setpoint the controller displays WAIT FOR FILTER.

### Entering Filter Mode

Left Display	Right Display	Action
<i>DROP</i>	<i>DROP</i>	Press and hold the filter button until Filter is displayed.
<i>FILTER</i>		Press ► to scroll to choices: Filter, Clean, Dispose, Drain to Pan, Fill Vat from Pan and Exit. With the desired choice displayed press ✓. Follow the instructions below to navigate the modes.

### Filter

Left Display	Right Display	Action
	<i>FILTER</i>	Press ✓.
<i>FILTER NOW?</i> alternating with <i>YES/NO</i>		Press YES.
<i>OPEN DRAIN VALVE</i>		Open drain valve.
<i>DRAINING</i>		None required.
<i>OPEN RETURN VALVE</i>		Open return valve.
<i>POLISHING</i>	<i>COUNTDOWN TIMER</i>	None required.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>COOL</i>	<i>COOL</i>	

## Clean

Left Display	Right Display	Action
	<i>CLEAN</i>	Press ✓.
<i>CLEAN NOW?</i>	<i>YES NO</i>	Press YES.
<i>OPEN DRAIN VALVE</i>		Open drain valve
<i>DRAINING</i>		None required.
<i>SCRUB VAT COMPLETE?</i>	<i>YES</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open return valve.
<i>POLISHING</i>	<i>5-MINUTE COUNTDOWN TIMER</i>	None required.
<i>FILL VAT?</i>	<i>YES</i>	Press YES.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press YES.
<i>OFF</i>	<i>OFF</i>	

## Dispose

Left Display	Right Display	Action
	<i>DISPOSE</i>	Press ✓.
<i>DISPOSE NOW?</i>	<i>YES NO</i>	Press YES.
<i>REMOVE PAN</i>	<i>CONFIRM</i>	Remove the filter pan and press CONFIRM.
<i>INSERT DISPOSAL UNIT</i>	<i>CONFIRM</i>	Insert disposal unit under the drain and press CONFIRM.
<i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DISPOSING</i>		None required.
<i>VAT EMPTY?</i>	<i>CONFIRM</i>	Press CONFIRM once the vat is empty.
<i>CLEAN VAT COMPLETE?</i>	<i>CONFIRM</i>	Press CONFIRM once the vat is clean.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close drain valve and press CONFIRM.
<i>REMOVE DISPOSAL UNIT</i>	<i>CONFIRM</i>	Remove disposal unit from the fryer and press CONFIRM.
<i>INSERT PAN</i>	<i>CONFIRM</i>	Insert the filter pan and press CONFIRM.
<i>MANUALLY FILL VAT</i>	<i>CONFIRM</i>	Fill vat with oil to the bottom fill line and press CONFIRM when full.
<i>OFF</i>	<i>OFF</i>	

## Drain to Pan

Left Display	Right Display	Action
	<i>DRAIN TO PAN</i>	Press ✓
<i>DRAIN TO PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DRAINING</i>		None required.
<i>VAT EMPTY?</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close the drain valve and press CONFIRM
<i>OIL IN DRAIN PAN</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>FILL VAT FROM DRAIN PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>OFF</i>	<i>OFF</i>	

## Fill Vat from Pan

Left Display	Right Display	Action
	<i>FILL VAT FROM PAN</i>	Press ✓
<i>FILL VAT FROM PAN?</i>	<i>YES NO</i>	Press YES.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>FILLING</i>		None required.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Press CONFIRM.
<i>OFF</i>	<i>OFF</i>	

## 1.6 Polishing

The F3000 displays a series of prompts when a polish filter cycle is under way. The steps are detailed below.

Left Display	Right Display	Explanation/Action
<i>POLISH NOW?</i>	<i>YES NO</i>	Respond to prompt with button push. Press YES or NO. Yes produces a filter, detailed below. No delays filter and cooking continues.
** <i>ADD FILTER POWDER</i>	<i>CONFIRM</i>	Remove filter pan, add filter powder and press CONFIRM.
** <i>INSERT PAN</i>	<i>CONFIRM</i>	Insert filter pan and press CONFIRM.
* <i>CHANGE FILTER PAPER</i>	<i>CONFIRM</i>	Remove the filter pan and change the filter paper.
* <i>ADD FILTER POWDER</i>	<i>CONFIRM</i>	Add filter powder and press CONFIRM.
* <i>INSERT PAN</i>	<i>CONFIRM</i>	Insert filter pan into fryer.
* <i>OPEN DRAIN VALVE</i>		Open the drain valve.
<i>DRAINING</i>		None required. The oil drains from the frypot to the filter pan.
<i>OPEN RETURN VALVE</i>		Open the return valve.
<i>POLISHING</i>	<i>15-MINUTE COUNTDOWN TIMER</i>	None required. The oil flows from the filter pan to the frypot and back to the filter pan for 15 minutes.
<i>CLOSE DRAIN VALVE</i>	<i>CONFIRM</i>	Close the drain valve and press CONFIRM.
<i>FILLING</i>		None required. The oil returns from the filter pan to the frypot.
<i>CLOSE RETURN VALVE WHEN FULL AND PRESS CONFIRM</i>	<i>CONFIRM</i>	Close the return valve and press CONFIRM.
<i>COOL</i>	<i>COOL</i>	

\*NOTE: Occurs on first polish of the day.

\*\*NOTE: Occurs on first polish after lunch and subsequent polishes during the day.

## 1.7 Prompts Encountered While Programming

The F3000 can be programmed for single-segmented cooking, which is used for most products, and segmented cooking, which is used for bone-in chicken. When programming for either product, the time prompts encountered are sequentially numbered. For non-segmented products, enter 0:00 for the second time prompt (2 Time) and the additional programming steps associated with segmented programming don't appear.

For segmented products, the process is longer. As many as 10 segments can be introduced during the cook cycle of one product. The complete cook cycle can be thought of as a timeline, with temperatures changes introduced at time-specific points on the timeline.

As Time 2, Time 3, Time 4 appear in the programming steps, the time entered is **NOT** the duration of the specific cycle, but the point a temperature change occurs on the timeline. For example, a Time 2 change that is to change a temperature in a 13 minute cycle after 2 minutes is entered as 11. The first temperature change will occur with 11 minutes remaining on the time line. **See graphic on page 1-12.**

Below is a explanation of the prompts presented in the sequence they occur. Programming is detailed on pages 1-11 through 1-14.

Left Display	Right Display	Explanation/Action
LONG NAME	NAME OR BUTTON NUMBER	Enter the full name of the product
SHORT NAME	NAME OR BUTTON NUMBER	Enter the four character abbreviated name of the product
COOKING MODE	SINGLE SETPOINT	<b>Segmented:</b> If multiple setpoint or segmented cooking is desired press ▼ MULTIPLE SETPOINT and go to 1.9 and follow the instructions. <b>Non-Segmented:</b> Leave at default of SINGLE SETPOINT.
1 TIME	0:00 OR PREVIOUSLY ENTERED #	In segmented and non-segmented programming, the total cook time is entered here.
1 TEMPR	TEMPERATURE	This is the setpoint for non-segmented products; the initial setpoint for segmented products.
1 FLEX	NUMBER	Flex is the feature in the controller that allows the fryer to react to large and small loads with the same cooking curve. It is generally not used with bone-in chicken. The default value is 5. The range is 0-9.
1 PRESSURE SOLENOID	OPEN	This option is only present on pressure fryers. During cooks it determines if the pressure solenoid should be open or closed. For segmented or multi-setpoint cooking it may be closed and open during different cycles during the cook.
2 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the first temperature change occurs. <b>Non-Segmented:</b> Enter 0:00
2 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the first temperature change, which occurs at the point entered at the 2 Time prompt. <b>Non-Segmented:</b> Doesn't appear
2 FLEX	ON OR OFF	See 1 Flex.
2 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.
3 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the second temperature change occurs. <b>Non-Segmented:</b> Doesn't appear.
3 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the second temperature change, which occurs at the point entered at the 3 Time prompt. <b>Non-Segmented:</b> Doesn't appear
3 FLEX	ON OR OFF	See 1 Flex.
3 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.

## 1.7 Prompts Encountered While Programming cont.

Left Display	Right Display	Explanation/Action
4 TIME	TIME	<b>Segmented:</b> Enter time remaining in the cook cycle after the third temperature change occurs. <b>Non-Segmented:</b> Doesn't appear.
4 TEMPR	TEMPERATURE	<b>Segmented:</b> This is the third temperature change, which occurs at the point entered at the 3 Time prompt. <b>Non-Segmented:</b> Doesn't appear
4 FLEX	ON OR OFF	See 1 Flex.
4 PRESSURE SOLENOID	OPEN	See 1 Pressure Solenoid.
5 TIME	TIME	<b>Segmented:</b> Enter 0:00 if no more segments are needed. <b>Non-Segmented:</b> Doesn't appear.
1 ALARM TIME	TIME	An audible alarm in the cook cycle, indicating a need to shake or stir the product.
1 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
1 ALARM MODE	MANUAL OR AUTO	The alarm can be self cancelling (Auto) or manually canceled (Manual), which requires a button push. Navigate choice with arrow buttons under display.
1 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	The duration of the audible alarm is optional. Navigate choice with arrow buttons under display.
2 ALARM TIME	TIME	The second point in the cook cycle an alarm sounds.
2 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
2 ALARM MODE	MANUAL OR AUTO	Navigate choice with arrow buttons under display.
2 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	Navigate choice with arrow buttons under display.
3 ALARM TIME	TIME	The third point in the cook cycle an alarm sounds.
3 ALARM NAME	SHAKE, STIR, NUMBERED ALARM	Navigate choice with arrow buttons under display.
3 ALARM MODE	MANUAL OR AUTO	Navigate choice with arrow buttons under display.
3 ALARM TONE	SHORT, MEDIUM, LONG, DOUBLE OR LONG SHORT, NONE	Navigate choice with arrow buttons under display.
AFTER COOKING	SET POINT OR COOL	<b>Setpoint:</b> Fryer remains at setpoint; <b>Cool:</b> Fryer holds at 250°F (121°C).
FILTER LOCKOUT	NUMBER	Number of cook cycles for the product before a filter prompt.
HEAD COUNT	0	Number of head of chicken or the equivalent number for a non-chicken product.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the controller checks the temperature.
EXIT	EXIT	Press ✓ or Scan button to exit programming.

## 1.8 Programming for Single Setpoint (Non-Segmented) Items

Programming for non-segmented food items is shown below. The right column has the action necessary to continue. Exit from a programming step at any time by pressing the Scan button until the display returns to its pre-programming status.

Left Display	Right Display	Action
OFF	OFF	Press and hold ✓ until Product Setup is displayed.
PRODUCT SETUP		Press ✓ .
PRODUCT SETUP	ENTER CODE	Enter 1724.
SELECT PRODUCT		Press a desired product button 1-20 that is not currently used. Buttons already programmed are indicated with an LED.
LONG NAME	PRODUCT NAME OR BUTTON NUMBER	Enter product name with letter buttons. Advance cursor with ▲▼. Press ►.
SHORT NAME	ABBREVIATED PRODUCT NAME OR BUTTON NUMBER	Enter abbreviated four character product name with letter buttons. Press ►.
COOKING MODE	SINGLE SETPOINT	Press ►. If multiple setpoint or segmented cooking is desired press ▼ MULTIPLE SETPOINT and go to 1.9 and follow the instructions. (Default is SINGLE SETPOINT)
1 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter total cook time with numbered buttons. Press ►.
1 TEMPR	TEMP	Enter cooking temperature. Press ►.
1 FLEX	Number	Enter the level of flex, 0-9, for the product. Press ►.
1 PRESSURE SOLENOID	OPEN	Press ▼▲ to scroll to OPEN or CLOSED. Enter the state of the pressure fryer solenoid lid. Default is OPEN. ( <i>Option only for pressure fryers.</i> )
2 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter 0:00. Press ►.
1 ALARM TIME	0:00 OR PREVIOUSLY ENTERED TIME	Subtract the time from the starting cook time when the alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►. (Note: If alarm time is set to 0:00 skip to After Cooking below.)
1 ALARM NAME	SHAKE	Press ▼▲ to scroll through the alarm names (ex. Shake). Press ►.
1 ALARM MODE	AUTO OR MANUAL	Press ▼▲ to scroll to Auto or Manual alarm mode. Press ►.
1 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Press ▼▲ to scroll to choice of alarm tones. Press ►.
2 ALARM TIME	0:00	Press ►. Leave at 0:00 for non-segmented cooking.
AFTER COOKING	COOL OR SETPT	Press ▼▲ to scroll to Cool or Setpoint mode the fryer should exit to after cook cycle: cool = 250; Setpoint = cooking temp. Press ►.
FILTER LOCKOUT	0	Enter number of cook cycles before a filter prompt and press ►.
QUANTITY?	NO	Press ▼▲ to scroll to YES if a quantity per load is required, otherwise leave to default NO.
HEAD COUNT	0 OR PREVIOUSLY SET NUMBER	Enter number of head or the equivalent value for the product. Press ►.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the controller checks the temperature. Enter value and press ►.
EXIT	EXIT	Press Scan button to exit or the ✓ button for additional programming.
SELECT PRODUCT		More Programming? Press product button and follow instructions above. Exit Programming? Press Scan Button.
PRODUCT SETUP		Press Scan button to exit or the ✓ button for additional programming.
OFF	OFF	

## 1.9 Multi-Setpoint (Segmented)


### 1.9.1 Cooking Programming Overview

The F3000 is capable of segmented cooking, a feature which allows a cooking cycle to be broken into a number of parts, each with its own cooking temperature and time.

An abbreviated version of the programming for a 13-minute cook cycle with four cooking temperatures is shown below. Steps are compressed for clarity. The cook times represent when on the timeline of the total cook cycle the segment occurs. In this example, the first temperature change occurs with 11 minutes remaining in the total cook time; 11 is entered at the prompt for the second cook time. Two minutes into the total cook cycle, the temperature will change; 11 minutes will remain. Cook times for the remaining segments are arrived at by subtracting the segment length from the remaining cook time. The complete programming steps are shown on pages 14 and 15.

- Step 1 sets total cook time and initial setpoint.
- Step 2 sets the duration of the first cooking segment, 2 minutes, and the setpoint of the first temperature change.
- Step 3 sets the duration of the second cooking segment, 4 minutes, and the setpoint of the second temperature change.
- Step 4 sets the duration of the third cooking segment, 3 minutes, and the setpoint of the third temperature change.


The four remaining minutes in the cook time elapse at the final temperature. No entry is required to use the final minutes

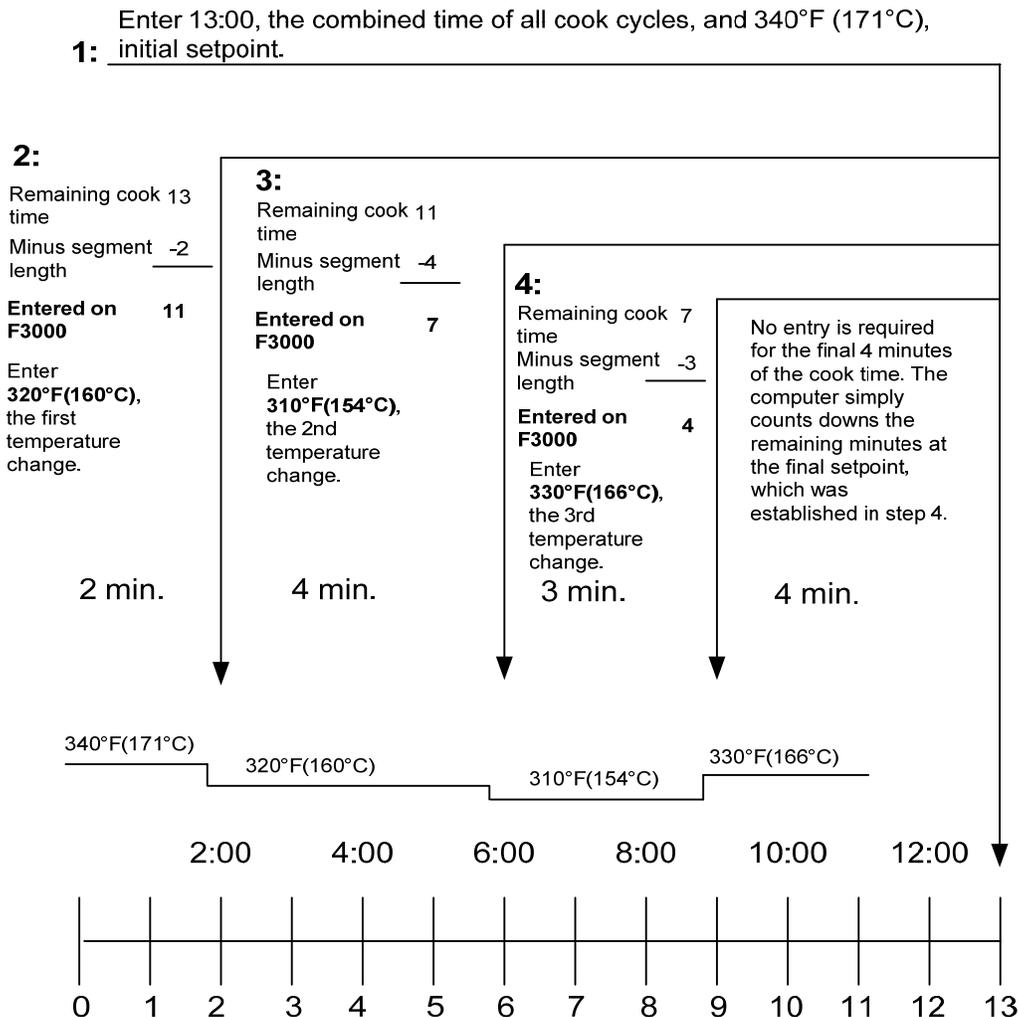

## 1.9.2 Alarm Programming Overview

Alarms are set to remind operators to shake fry baskets or tend to the product in some other way at points during the cook cycle. The instructions below detail setting three alarms in a 13-minute cook cycle. To enter a single alarm, exit the sequence after setting the first alarm.

Three alarms can be programmed for a cook cycle. The K3000 counts down cook times from the total time to zero. Alarms are entered at the point in the countdown they are desired. The example below is for alarms at 11:00, 6:00 and 2:00 on the countdown clock; the alarms will occur two, seven and 11 minutes into the 13-minute cook cycle.

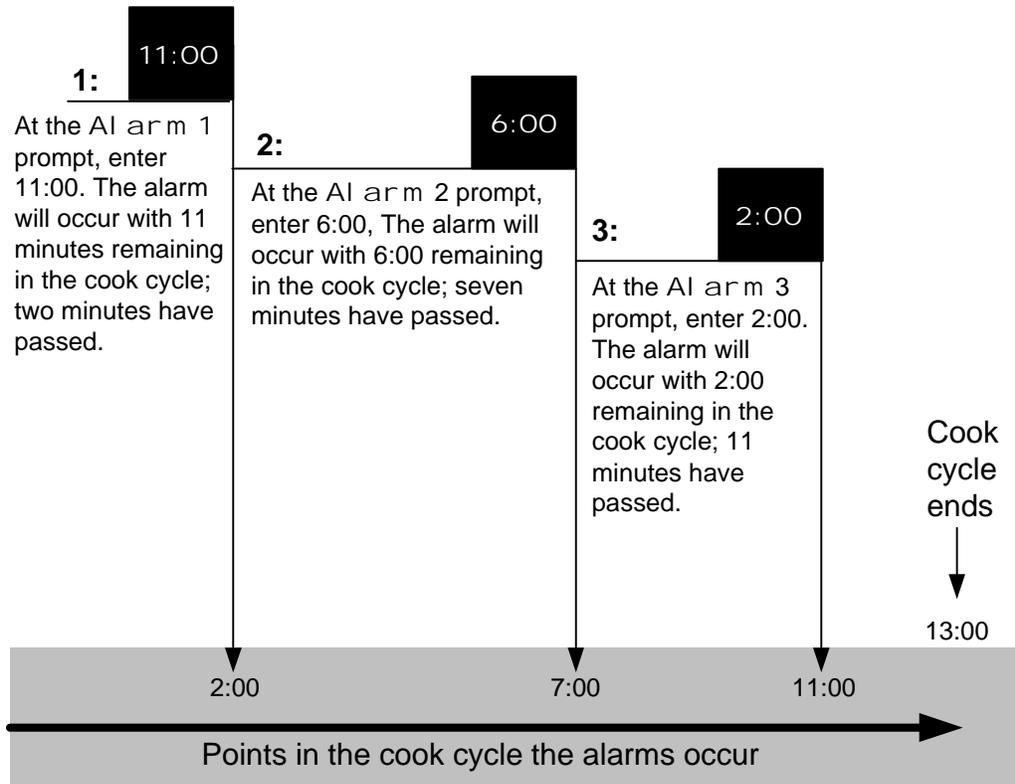

## 1.10 Programming for Multi-Setpoint (Segmented) Items

Left Display	Right Display	Action
OFF	OFF	Press and hold $\checkmark$ until Product Setup is displayed.
PRODUCT SETUP	Blank	Press $\checkmark$ .
PRODUCT SETUP	ENTER CODE	Enter 1724
SELECT PRODUCT	Blank	Press desired product button
LONG NAME	PRODUCT NAME OR BUTTON NUMBER	Enter product name with letter buttons. Advance cursor with $\blacktriangle$ $\blacktriangledown$ . With name entered, press $\blacktriangleright$ .
SHORT NAME	ABBREVIATED PRODUCT NAME OR BUTTON NUMBER	Enter abbreviated four character product name with letter buttons. Press $\blacktriangleright$ .
COOKING MODE	SINGLE SETPOINT	Press $\blacktriangleright$ . If multiple setpoint or segmented cooking is desired press $\blacktriangledown$ Multiple Setpoint (Segmented) and follow the instructions in the next section. (Default is SINGLE SETPOINT)
1 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter total cook time for segmented item and press $\blacktriangleright$ .
1 TEMPR	TEMPERATURE	Enter initial cooking temperature and press $\blacktriangleright$ .
1 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press $\blacktriangleright$ .
1 PRESSURE SOLENOID	OPEN	Set to desired position with the $\blacktriangledown$ $\blacktriangle$ buttons. Press the $\blacktriangleright$ button to change to CLOSED. ( <i>Option only for pressure fryers.</i> )
2 TIME	0:00 OR PREVIOUSLY ENTERED TIME	Enter time remaining after first temperature change (see page 1-11) and press $\blacktriangleright$ .
2 TEMPR	0:00 OR PREVIOUSLY ENTERED TEMPERATURE	Enter first temperature change and press $\blacktriangleright$ .
2 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press $\blacktriangleright$ .
2 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
3 TIME	0:00 OR PREVIOUSLY PROGRAMMED TIME	Enter time remaining after second temperature change and press $\blacktriangleright$ .
3 TEMPR	0:00 OR PREVIOUSLY PROGRAMMED TEMPERATURE	Enter temperature of the second segment and press $\blacktriangleright$ .
3 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press $\blacktriangleright$ .
3 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
4 TIME	00 OR PREVIOUSLY ENTERED TIME	Enter time remaining after third temperature change and press $\blacktriangleright$ .
4 TEMPR	0:00 OR PREVIOUSLY PROGRAMMED TEMPERATURE	Enter temperature of the third segment and press $\blacktriangleright$ .
4 FLEX	0 OR PREVIOUSLY ENTERED VALUE	Enter the flex value, 0-9, for the product and press $\blacktriangleright$ .
4 PRESSURE SOLENOID	OPEN	See 1 Pressure solenoid.
5 TIME	:00 OR PREVIOUSLY ENTERED TIME	Leave at zero if no more segments are needed and press $\blacktriangleright$ . <i>If more segments are needed, 5 is the limit, continue programming as shown above.</i>
1 ALARM TIME	:00 OR PREVIOUSLY ENTERED TIME	Subtract the time from the starting cook time when the alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press $\blacktriangleright$ .
1 ALARM NAME	SHAKE	Press $\blacktriangle$ to scroll through choices: Shake, Stir, Num1. With NUM 1 displayed, scroll through number choices with $\blacktriangle$ . Display name and press $\blacktriangleright$ .
1 ALARM MODE	MANUAL OR AUTO	Choose mode with $\blacktriangle$ and press $\blacktriangleright$ .

## 1.10 Programming for Multi-Setpoint (Segmented) Items cont.

Left Display	Right Display	Action
1 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
2 ALARM TIME	TIME	Subtract the time from the starting cook time when the second alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►.
2 ALARM NAME	NAME	Press ▲ to scroll through choices and press ►.
2 ALARM MODE	MANUAL OR AUTO	Choose mode with ▲ and press ►.
2 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
3 ALARM TIME	NAME	Subtract the time from the starting cook time when the third alarm should sound. (Example: If a cook time is 5:00 and the shake time should be 30 seconds into the cook time enter 4:30 as the alarm time). Enter that time for shaking, stirring, etc. Press ►.
3 ALARM MODE	MANUAL OR AUTO	Choose mode with ▲ and press ►.
3 ALARM TONE	SHORT, MEDIUM, LONG DOUBLE OR LONG SHORT, NONE	Choose tone with ▲ and press ►.
AFTER COOKING	SET POINT OR COOL	Choose fryer status after cook cycle with ▲▼ and press ►.
FILTER LOCKOUT	0	Enter number of cook cycles before a filter prompt and press ►.
QUANTITY?	NO	Press ▼▲ to scroll to YES if a quantity per load is required, otherwise leave to default NO.
HEAD COUNT	USER PROMPT 00	Enter chicken head count or equivalent number for non-chicken item and press ►.
INSTANT ON	0	This is the time, in seconds, the fryer heats before the Controller checks the temperature. Enter value and press ►.
EXIT	EXIT	Press ✓.
SELECT PRODUCT	Blank	Press Scan twice. Display goes to OFF.
OFF	OFF	

# 1.11 F3000 Menu Summary Tree

- Filter Menu ..... 1.5
  - [With computer ON, press and hold FILTER button]
  - Filter
  - Clean
  - Dispose
  - Drain to Pan
  - Fill Vat From Pan
  
- Info Mode ..... 1.3
  - [With computer OFF, press and hold ✓(check) button]
  - Oil Stats
  - Filter Stats
  - Review Usage
  - Last Load
  
- Setup and Tech Modes
  - [With computer OFF, press and hold ✓(check) button 10 seconds, displays Product Setup]
  - Product Setup ..... 1.4
    - [Enter 1724 ]
    - Select Product ..... 1.9 - 1.10
      - Long Name
      - Short Name
      - Cooking Mode
      - 1 Time
      - 1 Tempr
      - 1 Flex
      - 1 Pressure Solenoid
      - 2 Time
      - 1 Alarm Time
      - 1 Alarm Name
      - 1 Alarm Mode
      - 1 Alarm Tone
      - 2 Alarm Time
      - After Cooking Setpoint
      - Filter Lockout
      - Quantity
      - Head Count
      - Instant On
  - Vat Setup
    - [Enter 3228 ]
    - System ..... 1.4
      - Language
      - 2<sup>nd</sup> Language
      - Locale (CE or Non-CE)
      - Energy
      - Type (Vat)
      - System Volume (Level)
      - Tempr Format (F or C)
      - Exit Melt Tempr
      - Setback Tempr
      - Fresh Oil
      - Waste
      - Recovery Alarm
  - Time/Date ..... 1.4
  - DST (Daylight Savings Time) Setup ..... 1.4
  - Filter ..... 1.4
    - Global Filter Count
    - EOD Filter Time
    - 1 Polish Timer
    - 1 Polish Time
    - 1 Polish Duration
    - 1 Polish Delay Time
    - 1 Polish Start Tempr
    - 2 Polish Timer
    - 2 Polish Time
    - 2 Polish Duration
    - 2 Polish Delay Time
    - 2 Polish Start Tempr
  - E-Log Log of last 10 error codes ..... 1.4
  - C-Log Solenoid Activation Log (only on pressure fryers) ..... 1.4
  - Change Password ..... 1.4
  - Edit Alarm Names ..... 1.4
- Tech Mode
  - [Enter 1650 ]
  - Clear E-Log
  - Clear Passwords
  - Lane Count
  - Hi-Limit Test





Frymaster, L.L.C., 8700 Line Avenue, Shreveport, Louisiana 71106

TEL 1-318-865-1711

FAX (Parts) 1-318-688-2200

(Tech Support Fax) 1-318-219-7135

PRINTED IN THE UNITED STATES

SERVICE HOTLINE  
1-800-551-8633

819-6710  
FEB 2013