

Common programming and navigation are shown below. The left and middle column show the computer displays; the right column has the action necessary to continue. Exit from a programming step at any time by pressing the Scan key until the display returns to its pre-programming status.

Programming For Single Setpoint Cooking*

Left Display	Right Display	Action
OFF	OFF	Press ✓ until Main Menu changing to Product Setup is displayed.
PRODUCT SETUP	Blank	Press ✓.
PRODUCT SETUP	ENTER CODE	Enter 1650.
SELECT PRODUCT	Blank	Press desired product button.
LONG NAME	PRODUCT NAME or BUTTON NUMBER	Enter product name with letter keys. Press ►.
SHORT NAME	PRODUCT NAME or BUTTON NUMBER	Enter abbreviated product name with letter keys. Press ►.
1 TIME	0:00 or previously entered time	Enter time with numbered keys. Press ►. (Enter 0:00 here and press Exit/Scan to unassigned button.)
1 TEMPR*	TEMP	Enter new temperature. Press ►.
1 SENSITIVITY	NUMBER	Set to desired position with ▼▲keys. Press ►.
1 ALARM TIME	0:00 or previously entered time	Enter time in cook cycle for audible alarm for shaking. Press ►.
1 ALARM NAME	SHAKE	Set to desired position with ▼▲ keys. Press ►.
1 ALARM MODE	AUTO OR MANUAL	Set to desired position with ▼▲keys. Press ►.
1 ALARM TONE	SHORT	Set to desired position with ▼▲keys. Press ►.
2 ALARM TIME	:00	This is a second alarm and is entered like the first.
FILTER PROMPT**	0	Enter the number of cook cycles for the product before a filter cycle is prompted.
HOLD TIME	0	Enter time in minutes to hold product before discarding. Press ►.
EXIT	EXIT	Press Scan button to exit or the ✓ button for additional programming.
SELECT PRODUCT	Blank	More Programming? Press product button and follow instructions above Exit Programming? Press Scan Button.
PRODUCT SETUP	Blank	Press Scan
OFF	OFF	

* The 3000 also has a segmented cooking program. The feature, called Cooks Mode, is used for bone-in chicken if desired and it is set to OFF by default. See the manual for enabling and programming this feature.

**Filter prompts occur in the programming sequence if the Filter Mode is enabled. This feature, which can be turned off, is set to ON by default. See the manual for instructions on disabling this feature.

Filter Menu Navigation* (if Filters enabled)

Left Display	Right Display	Action
COOL, READY	COOL, READY	Press and hold Filter button for 10 seconds
*FILTER	Blank	Press ► to scroll to choices: Filter, Clean and Filter, Dispose, Fill Vat from Bulk (Bulk only) Boil Out (only with fryer OFF) and Exit. With the desired choice displayed press ✓. *NOTE- Options only available if enabled.

* The Filter feature can be turned off. When Filter is disabled, the Filter button has no function. Pressing it with the fryer ON or OFF will have no effect. See page 1-2 of the manual for an explanation of enabling 3000 options.

Info Mode Navigation

Left Display	Right Display	Action
OFF or READY	OFF or READY	Press ✓ until INFO MODE is displayed and release.
LAST DISPOSE STATS	Blank	Press ► to scroll to choices: *LAST DISPOSE STATS, DAILY STATS, SELECTED PERIOD STATS, LAST LOAD STATS. With the desired choice displayed press ✓. *NOTE: With Filter option disabled, not all data in these features will be collected.

Vat Setup Navigation

Left Display	Right Display	Action
OFF	OFF	Start with the far Left controller. Press ✓ until INFO MODE is displayed, changing to MAIN and then PRODUCT SETUP.
PRODUCT SETUP	Blank	Press ► to scroll to VAT SETUP.
VAT SETUP	ENTER CODE	Enter 1656
SYSTEM*	Blank	Press ► to scroll to choices: TIME/DATE, DST SETUP, E-LOG, CHANGE PASSWORD. With the desired choice displayed, press ✓.