

SHS Quick Reference



Operation

- Press the power button. LO is displayed until the air heater and heater plate are within 15°F (9°C) of setpoint.
- Ready is displayed.
- Unit is ready for use.

Fahrenheit to Celsius Display


- Unplug unit from power supply.
- Press and hold either temperature bulb button.
- Plug unit back into power supply with button depressed.
- S T O R is displayed.

- Release the temperature button.
- Press the power button.

Setting Temperature

- Turn the SHS controller OFF.
- Press ✓, then enter 1, 2, 3, 3. Use the numerals in the upper right-hand corner of each key.
- SET is displayed.
- LEDs on the Heater Plate button (1) and the Air Heater button (4) light.

Factory Default Settings
Heater Plate: 170°F (77°C)
Air Heater: 230°F (110°C)

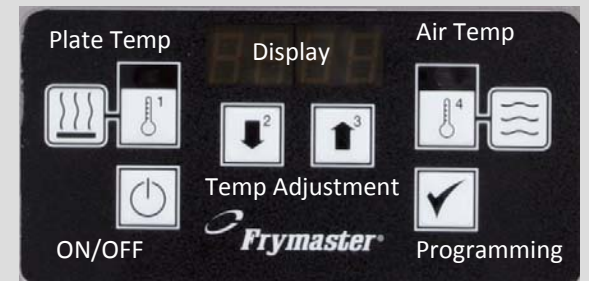

- Press the button that corresponds to the heater you want to adjust.
- Press the Up and Down arrow keys to adjust the set-point temperature.
- Press the Check button once. Both heater LEDs will again light.
- Follow the same steps to adjust the temperature of the other plate.

