


Pasta Magic GWC Quick Reference

Daily Operation

1. Ensure the drain is closed.
2. Fill cookpot manually to bottom of overflow if necessary.
3. Press power switch to ON.
4. Adjust Boil/Simmer switch to desired setting.
5. Open fresh water knob as necessary to maintain water level.
6. Skim deposits from water surface by opening the water valve until water flows from the overflow for 10 seconds.

Troubleshooting At Start

- Trouble light (amber) comes on and stays on after the unit is turned on:
 - Ensure float switch is not stuck in the down position. It should be clean and float freely on the shaft.
- Trouble light (amber) flickers after the unit is turned on and then glows solidly.
 - Ensure gas valve is on.
 - Ensure gas is connected to unit.
 - Recycle power switch.

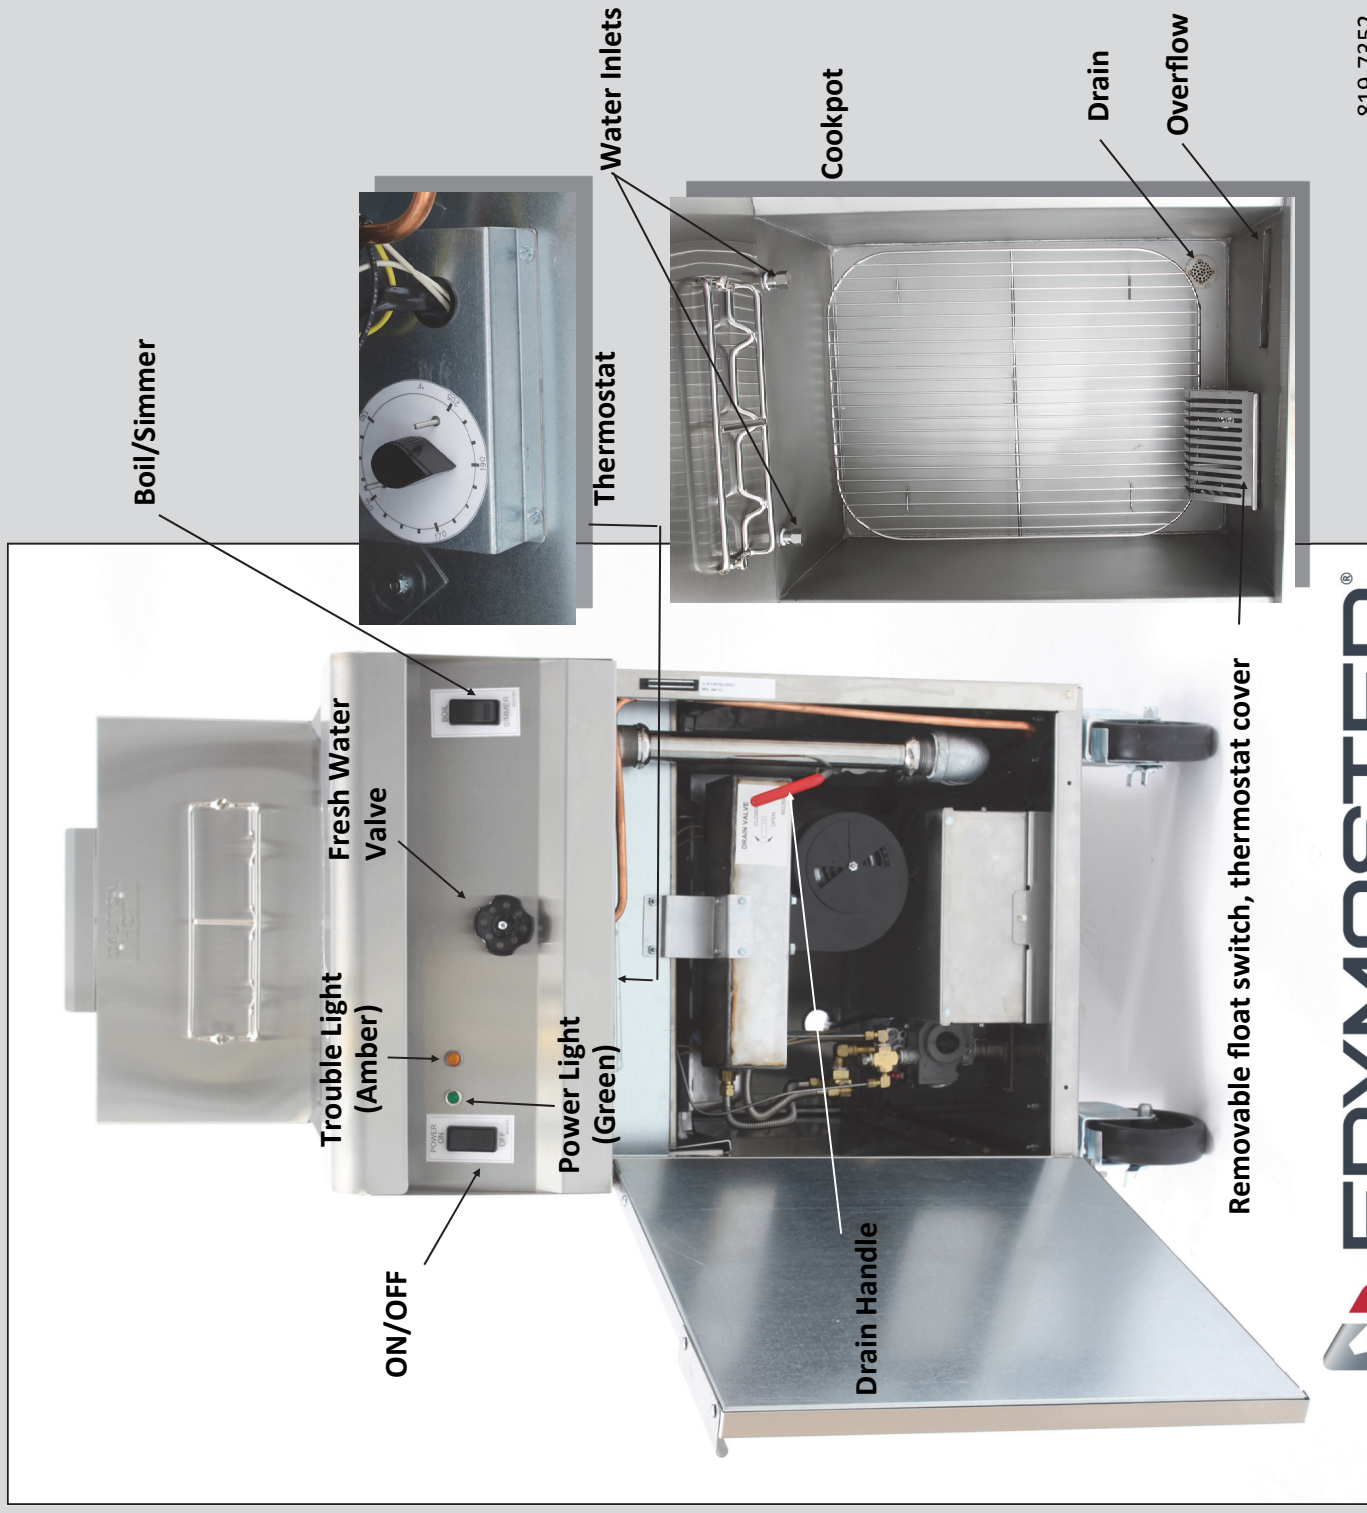

Cleaning

1. Turn the unit off and drain the cookpot.
2. Remove the probe cover and clean the float switch, using detergent and water.
3. Clean the thermostat with a green Scotchbrite or similar pad.
4. Clean the vat with a green Scotchbrite non-abrasive pad.
5. Rinse the vat thoroughly with clean water twice.



Cookpot

The cookpot should be thoroughly cleaned with detergent and a non-abrasive pad and rinsed twice.



Water Inlets

Ensure inlets are free of starch buildup.

Float Switch

Ensure it is clean and moves freely.



Thermostat

Starch buildup on the thermostat will reduce response time. Clean thoroughly with a non-abrasive pad.