



Digital Controller

Heating

Ensure the vat has oil to the lower embossed line. Press an ON/OFF switch. Press either for a full pot; use side-specific switch for split pot.

The software version briefly displays followed by the temperature in Celsius or Fahrenheit.

A dot appears between the first two numbers, indicating the controller is heating.

When the dot disappears, the vat is at the desired cooking temperatures.

Cooking

1. Turn controller on.
2. Set desired temperature with UP and DOWN arrows.
3. Allow the controller to heat to the desired temperature.
4. Watch heat indicator dot.
5. When dot disappears, cook product.

Button Use

- 🔔 Press once to check the frypot temperature. Press twice to check the setpoint.

Other Displays

HELP: Heating problem.

HOT: Fryer is over 410°F. Turn fryer off.

Canceling Melt Cycle

Press the melt cycle button.

Press the left button for the left side pot and the "right button for the right side of a split pot.

Switching From Fahrenheit or Celsius Display

Press the C/F button to toggle between Celsius and Fahrenheit.

WARNING: Always keep both sides of a split pot vat filled with oil.