


Cooking with the M4000 Non-Dedicated

- 1 Press the SELECT button under the desired lane to cook.



 
- 2 Select the product to cook.
Press the arrows to view more products.

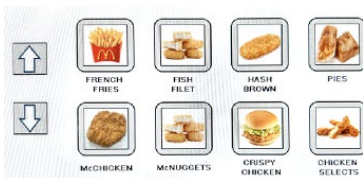


- 3 Display changes to COOKING with remaining cook time.




- 4 SHAKE alternating with basket is displayed when it is time to shake the fry basket (if applicable).



 
- 5 Press SHAKE/BASKET button to cancel SHAKE alarm.



 
- 6 REMOVE alternating with the CHECKMARK is displayed when the cook cycle is complete.



 - 7 Press the REMOVE/CHECKMARK button to cancel alarm.



 - 8 QUALITY TIMER is displayed below the START button as the quality timer counts down.



- 9 HOLD EXPIRED alternating with the CHECKMARK is displayed when the quality time has elapsed and expired.



- 10 Pressing the HOLD EXPIRED/CHECKMARK button restores the display to the Select Lane icon and the unit is ready for cooking.

